



OIL HEATER LISSABON WITH 9 FINS

Article-No.: 12233, 12236

- INSTRUCTION MANUAL -



Installation-videos and instructions

for our products can be found on

www.jet-line-e-trade.de

Username: jet-line • Password: user2011

More products for your office

can be found on

<https://jet-line.de>

Product-Code: 12233 (black), 12236 (white)

Product-Dimension: Length: approx. 385 mm, Width: approx. 245 mm, Height: approx. 625 mm

SAFETY INSTRUCTIONS

Read the manual before you use the heater. Keep the manual and ensure it stays with the heater if you give it to a new owner!

Before use, check that the heater and all supplied accessories are present and intact

The heater must be installed as per installation instructions. The heater must be plugged into a socket that meets the following requirements: AC 220V-240V, Frequency 50/60Hz

The heater is only suitable for indoor use. Do not use it outdoors

**Do not leave the heater unattended during use. Keep the heater out of the reach of children;
RISK OF BURNS**

**Do not use an external controller with the heater.
The heater must not be set to switch on when it will be unattended**

**Do not use the heater near flammable or explosive materials;
RISK OF FIRE OR EXPLOSION**

**Inserting items into the protective grill of the heater is strictly prohibited;
RISK OF ELECTRIC SHOCK**

**Do not touch the metal housing as it will get hot when the heater is in use;
RISK OF BURNS**

Set aside some time to let the heater cool before you turn it off and store it

Unplug the heater if it is going to be out of use for a long time

**Prior to each use of the electric heater, make sure it is in a good condition and intact.
Do not plug in or use the heater if the casing, wire, or plug are damaged**

The heating element may be damaged if the heater is dropped or hit. Check that the element is not damaged prior to each use. Do not use the heater if the element is broken

Disconnect the plug from the socket when moving or cleaning the heater. When disconnecting, first turn off the switch, then unplug the plug. Do not yank the cable

Demolition of the electric heater without authorization is strictly prohibited. Please look for professional service personnel if the heater is damaged

During use, do not let bare skin touch the surface of the appliance; RISK OF BURNS

**Do not share the heater's socket with other appliances;
RISK OF FIRE DUE TO EXCESSIVE LOAD**

CAUTION: Never cover the heater; RISK OF OVERHEATING AND FIRE

The heater must not be located immediately below an electrical socket-outlet

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid a hazard.

Avoid the use of an extension cord as this may overheat and cause a fire risk

The heater is not intended for use in bathrooms, laundry areas or similar locations where there may be moisture. Never place the heater where it may fall into a bathtub or other water receptacle

Do not use the heater in the immediate surroundings of a bath, shower, or swimming pool

Children of less than 3 years should be kept away unless they are continuously supervised

Children aged between 3 and 8 years should only switch the appliance on/off provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged between 3 and 8 years should not plug in, clean, or perform maintenance on the appliance.


This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance should not be carried out by children without supervision.

CAUTION: some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present





INSTALLATION

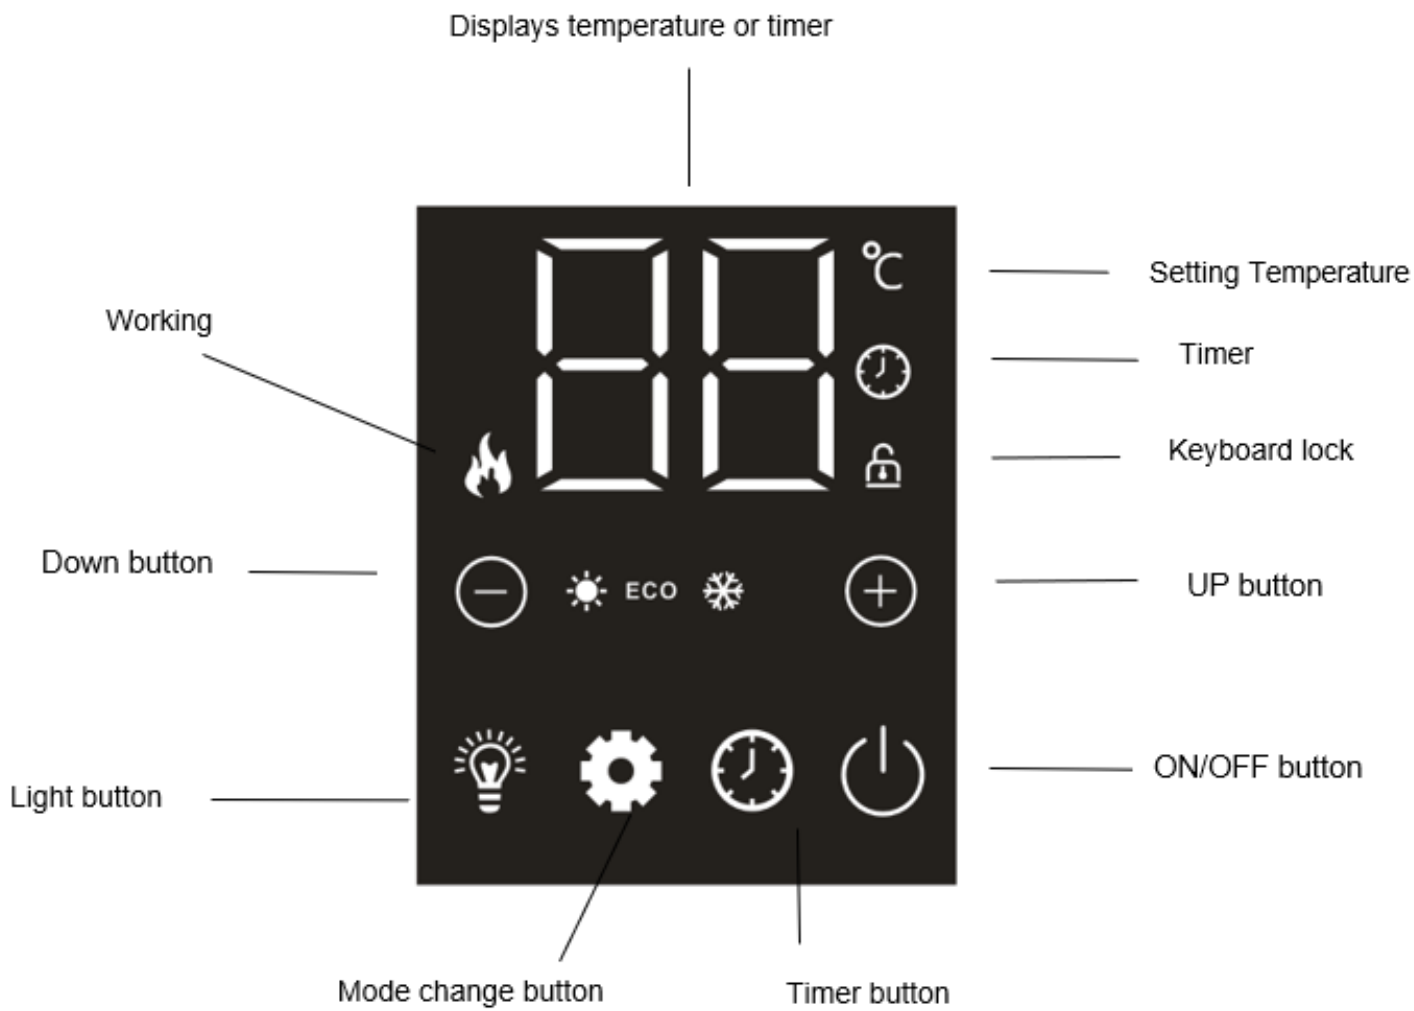


Install the wheelbase assemblies onto the bottom of the radiator by carefully turning it upside down. Position the wheelbase assemblies onto the bottom, below the two fins on either end of the radiator. Fix the wheelbase assemblies into position using the U-shaped bolts and win nuts. Secure the castors onto the ends of the wheelbase assemblies using the fixings provided. The castors should be securely fixed so that only the wheels are able to move. **NOTE:** When using the radiator for the first time, a slight odor may be emitted. This is normal and will soon subside. Ensure there is sufficient ventilation around the radiator



CONTROL PAD










The heater will beep as it powers on. The heater starts on standby mode


To initiate heating, press the  ON/OFF button. When the heater is switched on the heating icon  you will see the ECO mode icon . This means the device is in the ECO mode state. ECO mode is the power is half Comfort mode  is full power.

To change the heating mode, press the  MODE button to cycle through the modes: ECO mode , Comfort mode  and anti-frost mode . And the heater will be in the mode selected.

To set the temperature of any of the modes, you can use the  MINUS and  PLUS buttons to adjust the temperature. Temperature range is from 5°C-50°C.

To set the timer, press the  TIME button. Timer range is 1 – 24 hours. The digits will flash after setting and then the screen will return to heating mode. The timer icon  on the screen will show that the timer has been set. The heater will turn off automatically once the set timer elapses.

To set the child lock, press and hold the  and  button until the Keyboard lock icon  will appear on the screen. Then the control panel will be locked out. To release, press and hold the  and  button. The Keyboard lock icon will disappear, and then all the buttons can be used again.

To set the display light, press the light button on  once, the display will be in half luminance, press the button again, the display will disappear, press again, it will return to full luminance.

ECO MODE – In this mode the heater works at half of its maximum capacity. For example, if the heaters full capacity is 2000W, in eco mode it would operate at 800W.

COMFORT MODE – When the heater is operating in comfort mode it is running at its full capacity, thus, if it is a 2000W heater it will operate at 2000W.

ANTI-FROST MODE – This mode is specifically designed to prevent frosting. When the ambient temperature is below 5°C the product will begin to operate. If the ambient temperature rises greater than 7°C the product will automatically cease heating.

REMOTE CONTROL – The remote-control use distance is 2M. All control panel functions are the same as the remote control.

OPERATE REMOTE CONTROL



Press the ON/OFF button to initiate heating. The Eco mode icon will illuminate by default. This means that the heater is operating in Eco mode.

Use button to cycle between the heating modes: ECO , Comfort and Anti-frost mode . The mode icons will flash as you cycle through them. After a few seconds, the mode icon will stop flashing and the heater will heat in that mode.

To adjust the set temperature of any of the modes you can press the setting button Up and Down buttons to adjust the temperature. The temperature range is from 5-50°C.

To set the timer, press the setting button , the digits will flash while setting. Use the Up and Down buttons to adjust the time. The timer range is 1-24 hours and then the screen will return to heating mode.

To set the child lock function press and hold the button. The padlock icon will appear on the display screen and the control panel will now be locked. But the remote control still works. To disable the child lock press and hold the button again. The padlock icon will disappear to indicate that the child lock function is now inactive, and all buttons can be used again.

To switch off the display light whilst the heater is in operation press and hold . Press the button again to switch the display light back on.

TECHNICAL DATA

Type	Voltage	Frequency	Power	Category
OH-200X-9	220V-240V	50/60Hz	2000W	I

CLEANING AND CARE

MAINTENANCE

Always disconnect the appliance and let it completely cool before any maintenance. Use a vacuum cleaner to remove dust on grilles. Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

STORING

Always disconnect the appliance, let it completely cool and clean it before storing. If you do not use the device for a long period, put back the unit and the instruction manual to the original carton and store in a dry and ventilated place. Do not place any heavy items on top of carton during storing as this may damage the appliance.

HINTS ON DISPOSAL




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

DECLARATION OF CONFORMITY

This product is conform to the following European Directives:



2014/30/EU (EMC)
2014/35/EU (LVD)
2011/65/EU (RoHS)
2009/125/EC (ErP) + Regulation (EU) 2015/1188

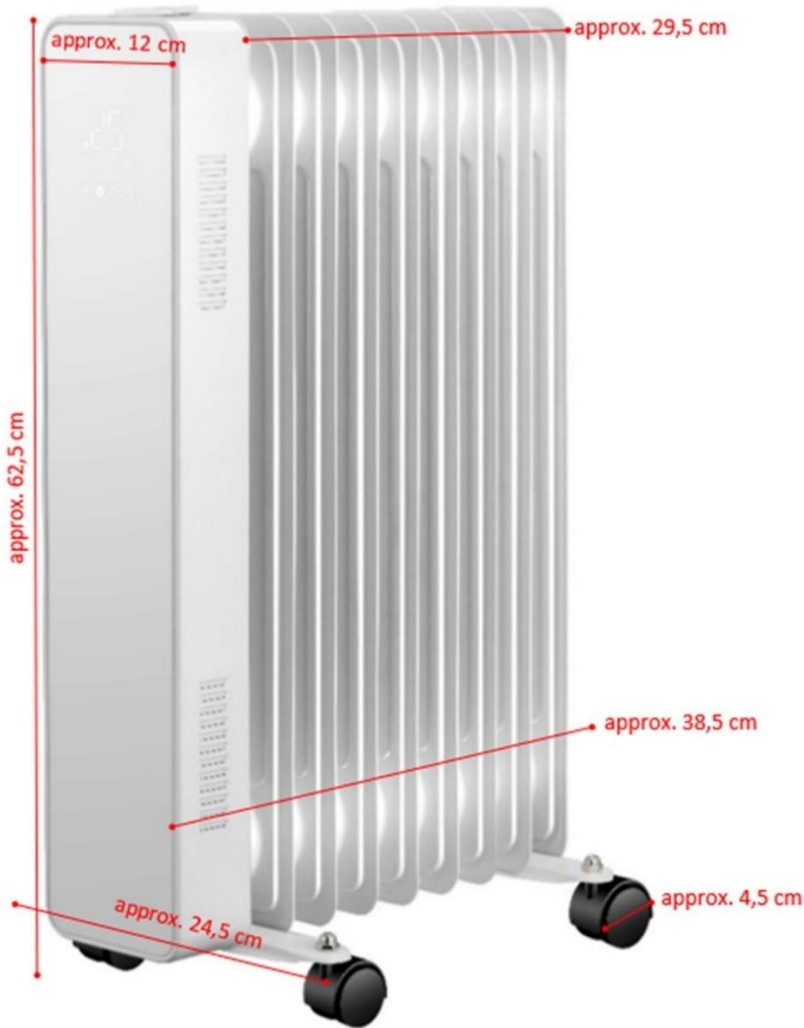

Installation-videos and instructions
for our products can be found on
www.jet-line-e-trade.de
Username: jet-line • Password: user2011

More products for your office
can be found on
<https://jet-line.de>



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Deutschland
Tel: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
www.office-shopping.eu

