


 
 


 
 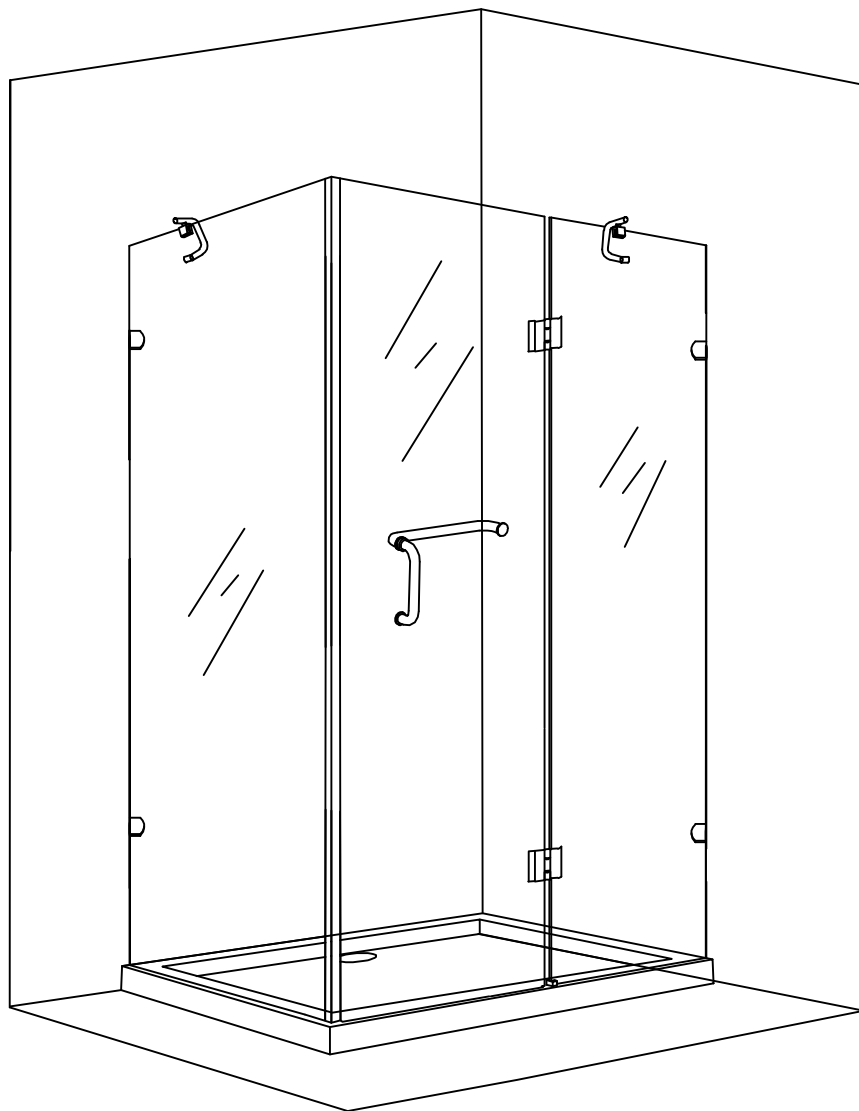


 
 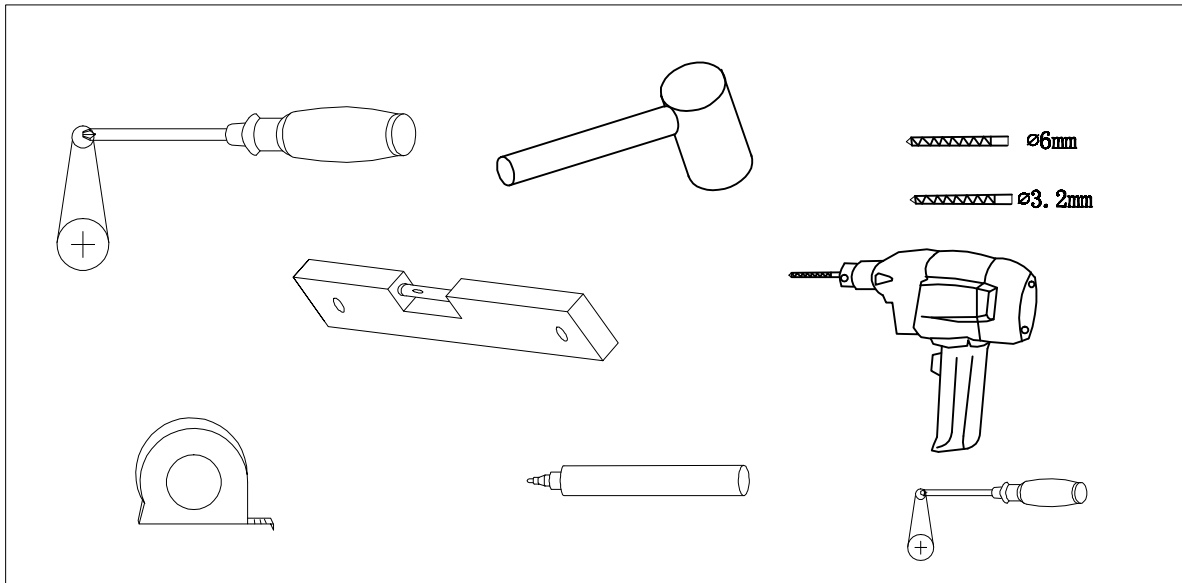






# Instruction Manual



**MODEL : SR-RT1201**  
**SIZE: 1200\*900\*2000MM**



<b>A1</b>  <b>x1</b>	<b>B1</b>  <b>x4</b>				
<b>C1</b>  <b>M4x30</b> <b>x10</b>	<b>C2</b>  <b>M6</b> <b>x10</b>	<b>C3</b>  <b>M4x16</b> <b>x4</b>	<b>C4</b>  <b>x2</b>		
<b>D1</b>  <b>x2</b>	<b>D2</b>  <b>x1</b>	<b>D3</b>  <b>x1</b>			
<b>E1</b>  <b>x2</b>	<b>E2</b>  <b>x1</b>	<b>E3</b>  <b>x1</b>	<b>F1</b>  <b>x1</b>	<b>F2</b>  <b>x2</b>	<b>F3</b>  <b>x1</b>

