

How to adjust the angle of the BW33000

1. Raise up the arm,



2. Turn the screw of the arm



Turn left the angle will be lower than before

Turn right the angle will be higher than before