

Safety instructions for your product

Read and follow the instructions in this user manual to use the product at hand safely. Do not carry out any modifications or repairs to the appliance yourself.

Caution

Wind load: Pay attention to weather conditions. In high winds, you should maybe disassemble or anchor the gazebo to prevent it from tipping over.

Allude

Anchoring: Use fasteners, appropriate weights, or secure the gazebo to the ground to anchor the gazebo firmly to the ground, especially in windy conditions.

Stability: Make sure the gazebo is built on a stable, level surface. Check the stability and fixings regularly.

Fire Hazard: Keep flammable materials and open flames (such as grills or candles) at a safe distance from the gazebo.

Regular inspection: Check the condition of the gazebo regularly, especially after storms or other extreme conditions.

In the event of heavy snowfall, please clear the roof of snow regularly.