

1. Safety instructions for this product

Read and follow the instructions in this manual to use this product safely. Do not modify or repair the device yourself.

1. Danger

Young children can choke on the ropes or cable ties used to maneuver the tent. Keep the leashes out of the reach of children.

Do not place cots, beds or other furniture near the tents. Don't bind each other. Make sure that the ropes do not twist and form loops.

2. Warning

- Do not install the device in very high or windy places, as the curtains may fall and people may be injured.

1. Caution

- Do not use in areas with high shock or vibration

1. An image that contains silhouette, design, art. Auto-generated description with medium confidence

- Do not use in high-temperature areas, such as walls near radiators.
- Do not put weights on the pipe, as the tent may tip over.
- Do not use in windy or heavy rain
- The product may be affected by the wind. Be especially careful in strong winds
- Make sure your hands or fingers don't get tangled in the ropes. Be careful during installation, as fingers may get caught
- Make sure that all nuts and plugs are installed exactly as described in this manual. Lack of plugs can pose a risk of injury
- In case of wind or rain, close the tent (do not use)
- Do not use if the blinds need servicing