


BDM Output Power Adjustment Manual

1、Settings-Inverter Settings



nep

demo_test@northernep.com.cn

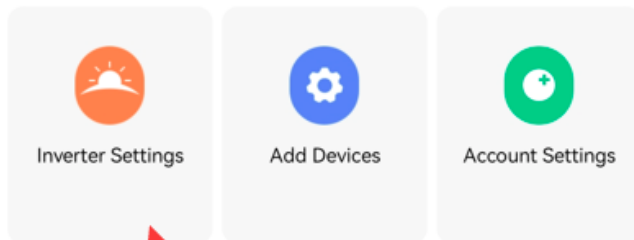


2

1




2、Select Local Mode

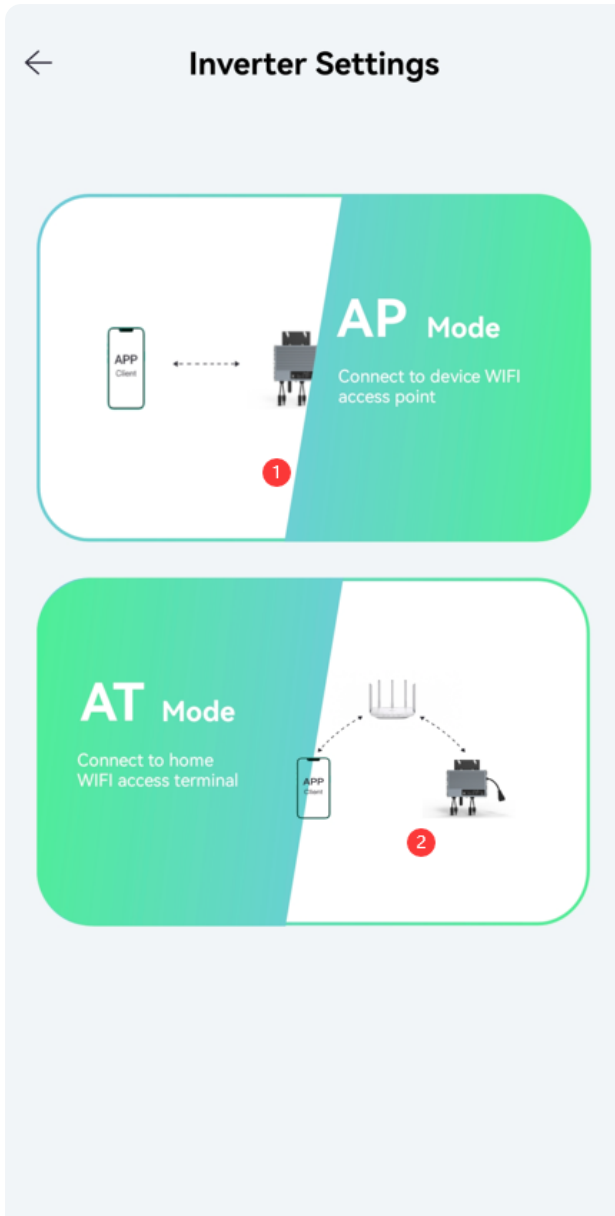

1. BDM needs to be in AP mode when you used this mode. Your phone needs to connect to BDM hotspot, see in step 3.1.
2. BDM and your phone need to connect to the same WiFi when you use AT mode, see in step 3.2.

3.1 AP Mode

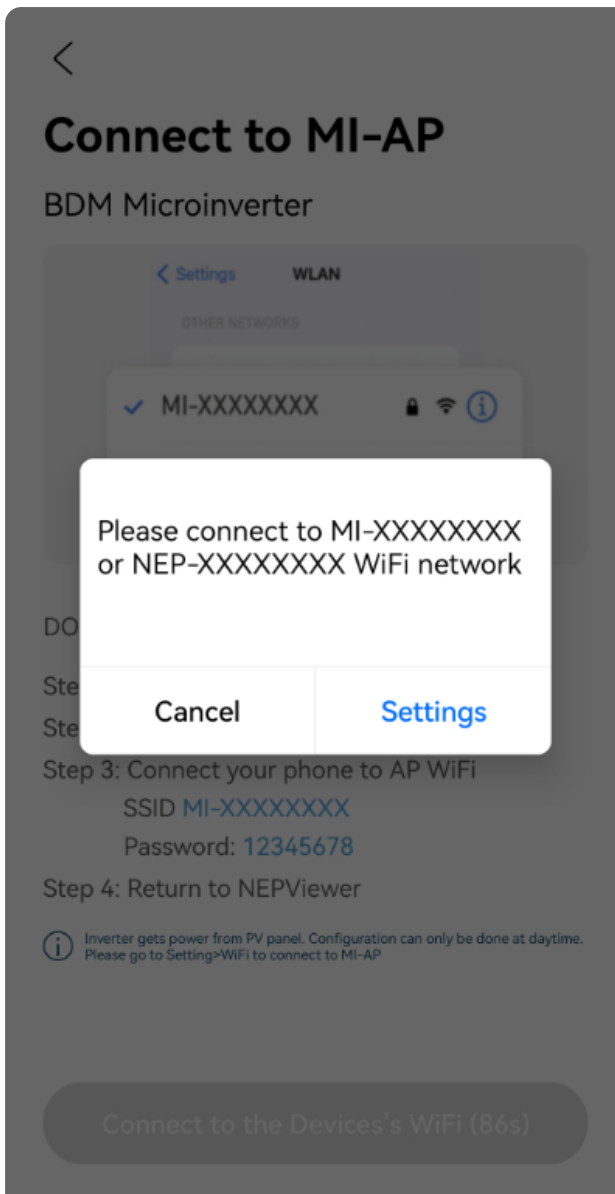


1. If you phone is not connecting to the BDM hotspot, a dialog will pop up.



SN: 33CFADDE

Local Functions

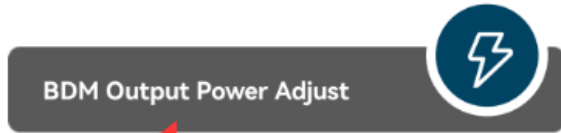

1. If your phone is connecting to the BDM hotspot, "BDM Output Power Adjust" button will display itself.


<

1. 800W-600W
2. 600W-800W



Done

3.2 AT模式下

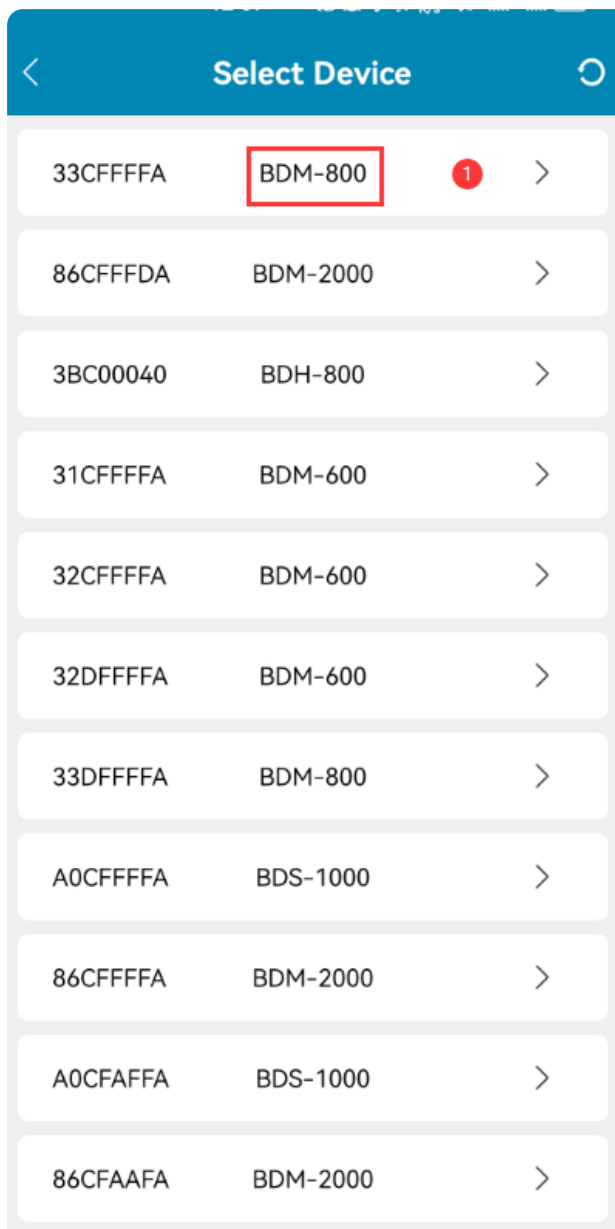

1. Select BDM-800 or other version



Function selection

BDM Output Power Adjust





1



1. 800W-600W

2. 600W-800W

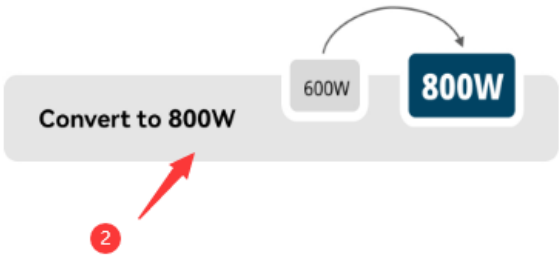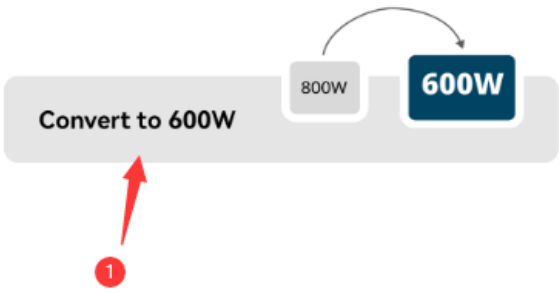

Done

