



**BEDIENPANEL FÜR
SCHREIBTISCHGESTELL
„AURELIO“**

- ANLEITUNG -



Installationsvideos und Aufbauanleitungen

zu unseren Produkten finden Sie unter

www.jet-line-e-trade.de

Nutzername: jet-line • Passwort: user2011

Weitere Produkte für Ihr Büro

finden Sie unter


<https://office-shopping.eu>

Produkt-Code:

...

Produkt-Maße:

Technische Daten:

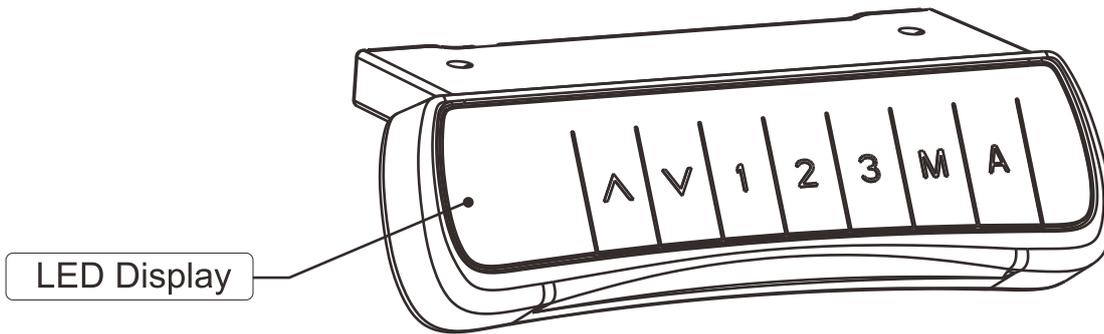

Produkt-Spezifikation:

Funktionsknöpfe:

Es gibt insgesamt sieben Funktionsknöpfe: "▲", "▼", "1", "2", "3", "M", "A"

- (1) "▲" Der Tisch fährt nach oben
- (2) "▼" Der Tisch fährt nach unten
- (3) "1" Position 1, Erste vom Benutzer gespeicherte Höhenposition
- (4) "2" Position 2, Zweite vom Benutzer gespeicherte Höhenposition
- (5) "3" Position 3, Dritte vom Benutzer gespeicherte Höhenposition
- (6) "M" Memorie-Funktion
- (7) "A" Alarm zur Erinnerung an Positionswechsel

Bedienungsanleitung:

Höhenverstellung:

Drücken Sie die Tasten "▲" oder "▼", um die gewünschte Höhe einzustellen.
Das LED-Display zeigt die aktuelle Höhe an

Memorie-Funktion:

Drücken Sie die Tasten "▲" oder "▼", um die gewünschte Höhe einzustellen.
Drücken Sie auf die Memorie-Taste "M", um die aktuelle Höhe zu speichern. Das Display zeigt "5-" an
Drücken Sie "1", "2" oder "3", um die zu speichernde Höhe auf der gewünschten Position zu hinterlegen
Im Display erscheint zur Bestätigung "5-1", "5-2", oder "5-3"
Um die gespeicherte Höhe einzustellen, brauchen Sie nun nur noch auf "1", "2", oder "3" zu drücken

Erinnerungs-Funktion:

Drücken Sie auf die Erinnerungstaste "A" , um die Funktion zu aktivieren. Das Display zeigt "00" an. Zwei Sekunden später beginnt das Display zu blinken. Wählen Sie nun mit den Tasten "▲" oder "▼" die gewünschte Erinnerungszeit aus. Der voreingestellte Wert liegt bei 45 Minuten. Das Display zeigt "45" an. Drücken Sie dann eine beliebige Taste, um die Zeiteinstellung zu speichern oder warten Sie fünf Sekunden, dann speichert das System die Einstellung automatisch. Während des Countdowns, führt jede Aktion zu einem Neustart des Timers. Nach Ablauf des Countdowns zeigt das Display "00" an.

Bei Ablauf ertönt 10 Sekunden lang eine „DiDi...DiDi...DiDi...“-Tonfolge

Während der 10 Sekunden, in denen die Erinnerung ertönt, können Sie durch Drücken einer beliebigen Taste die vorher gespeicherte Timer-Funktion wieder aktivieren. Erfolgt während der Erinnerung keine Aktion, ertönt die Tonfolge nach 5 Minuten erneut. Erfolgt während der zweiten Erinnerung wieder keine Aktion, schaltet sich der Alarm ab.

Um den Alarm manuell abzuschalten, halten Sie die Taste "A" gedrückt. Das Display zeigt "OFF" an.

Sensitivität der Antikollisions-Funktion einstellen – optionale Features:

Halten Sie die Tasten "▲" und "▼" gleichzeitig fünf Sekunden lang gedrückt, um die Sensitivität anzupassen. Es gibt vier Stufen: A-3, A-2, A-1 und A-0, die Sie mit den Pfeiltasten auswählen können.

Zeigt das Display "A-0" an, ist die Antikollisions-Funktion aus; zeigt das Display "A-1" an, ist die Sensitivität niedrig eingestellt; zeigt das Display "A-2" an, ist die Sensitivität auf mittel eingestellt; zeigt das Display "A-3" an, ist die Sensitivität auf hoch eingestellt (ab Werk ist A-3 voreingestellt)

Kommt der Tisch während der Höhenverstellung mit einem anderen Objekt in Berührung, wird der Vorgang sofort abgebrochen, um möglichen Beschädigungen zu vorbeugen

Halten Sie die Tasten "▲" und "▼" gleichzeitig fünf Sekunden lang gedrückt. Wenn das Display keines der obigen Symbole anzeigt, ist keine Antikollisions-Funktion vorhanden.

Problemlösung:

Wenn das Display "RST" oder "rSt" anzeigt, halten Sie die Taste "▼" oder "▲" gedrückt, bis die Tischplatte auf der niedrigsten oder höchsten Position anlangt, die Richtung wechselt und stoppt. Das Display zeigt nun die Nummer der Höhenposition an. Lassen Sie die "▼" Taste los. Der Reset-Vorgang ist damit abgeschlossen.

Wird eine Fehlermeldung angezeigt, drücken Sie kurz auf "▼", um zum Modus "RST" oder "rSt" zurückzukehren und den Reset-Vorgang auszuführen

Sollte das Gestell nach wie vor nicht einwandfrei funktionieren, kontaktieren Sie bitte den Kundenservice..

Abfall-Entsorgung



Dieses Zeichen bedeutet, dass das Produkt nicht im Haushaltsmüll entsorgt werden darf. Um mögliche Schäden für Mensch und Umwelt zu vermeiden, tragen Sie bitte Sorge für eine ordnungsgemäße Entsorgung, sodass wiederverwertbare Materialien recycelt werden können. Um gebrauchte Gegenstände zurückzugeben, nutzen Sie bitte die angebotenen Rücknahme- und Sammelsysteme oder kontaktieren Sie Ihren Händler.

Installationsvideos und Aufbauanleitungen

zu unseren Produkten finden Sie unter

www.jet-line-e-trade.de

Nutzername: jet-line • Passwort: user2011

Weitere Produkte für Ihr Büro

finden Sie unter

<https://office-shopping.eu>



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Deutschland
Tel: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
www.office-shopping.eu



HAND SWITCH FOR ADJUSTABLE DESK-FRAME „AURELIO“

- USER MANUAL -



Installation-videos and further instructions
for our products can be found on
www.jet-line-e-trade.de

Username: jet-line • Password: user2011


Further products for your office
can be found on
<https://office-shopping.eu>

Product-Code: _____

Product-Dimension: _____



Technical Data:

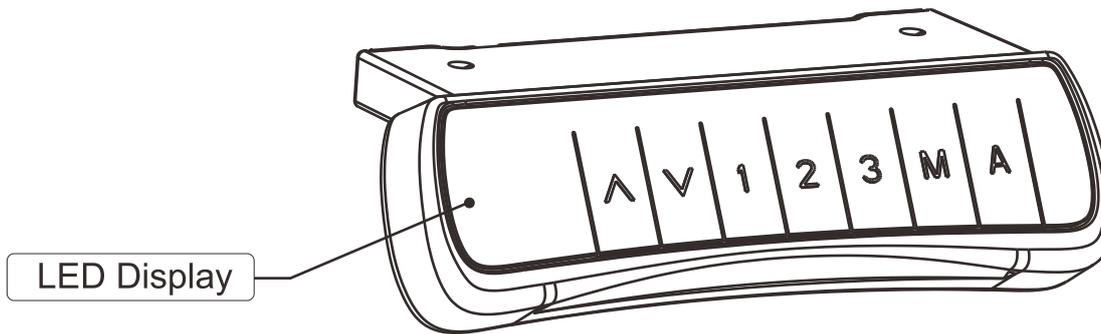

Product-Specification:

Button Introduction:

There are seven function buttons: "▲", "▼", "1", "2", "3", "M", "A"

- (1) "▲" Adjusts the desktop upwards
- (2) "▼" Adjusts the desktop downwards
- (3) "1" Position 1, first height position saved by the user
- (4) "2" Position 2, second height position saved by the user
- (5) "3" Position 3, third height position saved by the user
- (6) "M" Height memory function
- (7) "A" Alert button to remind the user to change position

Operation Instructions:

Height Adjusting Function:

Press the buttons "▲" or "▼" to adjust the height.
The LED-display shows the current height

Height Memory Function:

Press the buttons "▲" or "▼" and adjust the height to the desired height.
Press the memory-button "M" to save the current height. The display shows "5-"
Press "1", "2" or "3" then, in order to save the height to the respective position
The display shows "5-1", "5-2", or "5-3" to confirm
To adjust the table to the memory height you saved, you can now press "1", "2" or "3"

Reminder-Function:

Press the reminder-button "A" to activate the function. The LED display shows "00"
 Two seconds later, the display starts to flash. Now press "▲" or "▼" to adjust the reminder time. The default time of the reminder is 45 minutes, which is shown as "45"
 Then press any random button to save the time setup or wait for five seconds for the system to automatically save the setup time. During the countdown, any operation results in a restart of the timer. When the countdown finishes, the display shows "00"
 The reminder is a 10-second, "DiDi...DiDi...DiDi...."-tone
 Within the 10-second reminder, you can press any random button to reactivate the countdown according to the pre-selected default time. If no operation is executed during the 10-second reminder, there will be another reminder after 5 minutes. If no operation is executed during the second 10-second reminder, the Long-Time Sitting Reminder turns off automatically.
 In order to manually turn off the reminder, press the button "A" for three seconds. The display shows "OFF"

Anti-collision sensitivity adjustment – optional features:

Press the buttons "▲" and "▼" for five seconds to adjust the sensitivity. There are four levels: A-3, A-2, A-1 and A-0, between which you can select using the arrow-buttons "▲" or "▼"
 If the display shows "A-0", the anti-collision function is off; if the display shows "A-1" low sensitivity is selected. If the display shows "A-2", medium sensitivity is selected. If the display shows "A-3", high sensitivity is selected (default-selection after purchase is A-3).
 Should the tabletop touch any foreign object during height-adjustment, it immediately stops and reverses its movement to avoid any possible damage.
 Press the buttons "▲" and "▼" for five seconds. If the display does not show any of the above-mentioned symbols, there is no anti-collision function

Troubleshooting:

When the display shows "R5r" or "r5t" press and hold the button "▼" or "▲", until the tabletop runs to the lower or highest position, slightly reverses and stops. The display now shows the height number. Release the button "▼". The reset-process is now finished and you can go back to using the desk normally.
 If an error-code shows in the display, press "▼", to return to "R5r" or "r5t" and start to reset
 If you perform the above-stated steps and the desk still doesn't work properly, please contact the customer service

Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Installation-videos and further instructions

for our products can be found on

www.jet-line-e-trade.de

Username: jet-line • Password: user2011

Further products for your office

can be found on

<https://office-shopping.eu>



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Germany
Phone: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
www.office-shopping.eu