

Instructions of installation and use



MODEL : TSR103-C


TSR103-C-1

SIZE : 900*900*2150

1000*1000*2150



PUT CONNECTOR

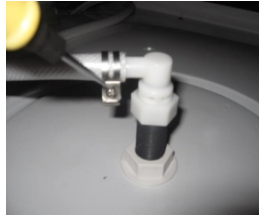

LOCK TOP SHOWER CONNECTOR




CONNECT HOT&COLD PIPE



ELECTRIC LINES THROUGH THE HOLE



FIX ELECTRIC PART UNDER DIAGRAM

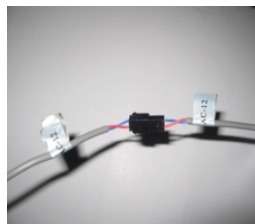

FASTEN ELECTRIC CONNECTOR




FIX BOTTOM PROFILE&TRAY WITH TIP SCREW

9


1.Preparations

1.1.install 2 water supply holes (one for cold and another for hot), 1 electrical outlet, 1 drain hole (diameter \geq 5cm) in advance. Do as the pic. Shows:

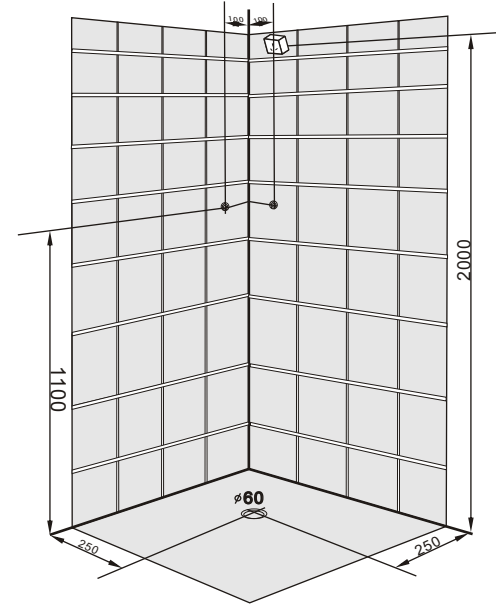

1.2.Check the products and spare parts inside the package.

Total 4 packages (A1 Front glass panel box, A2 Back glass board box, A3 Aluminium board box,A4 Shower tray box)

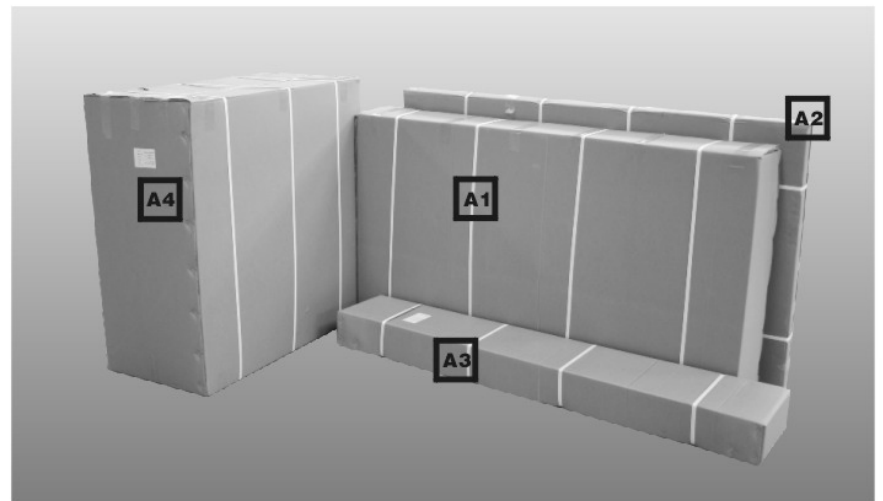


2

5. INSTALL SIDE GLASS



PUT UP BACK GLASS

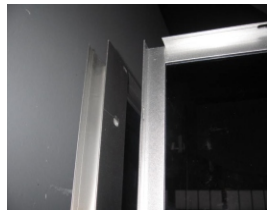

HOLE AGAINST HOLE



CONNECT VIA SCREWS



LOCK PROFILE



INSERT SCREW BETWEEN TRAY&PROFILE

7



LOCK SCREWS

2. LEVEL ADJUSTMENT FOR TRAY.




TORN THE PROTECTION.



1




MAKE TRAY LEVEL BY ADJUSTING SCREWS.

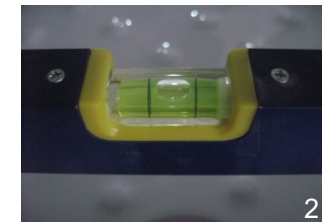

2



DRAW PIPE TO DRAINAGE HOLE.

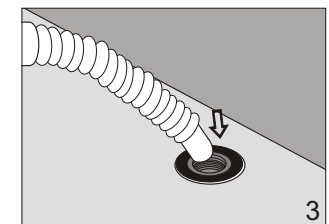

3

4

3. INSTALL FIXED DOOR



FIXED DOOR INTO
SIDE COLUMN



SIDE COLUMN CONNECTED
WITH SLIDING PROFILE



FIXED DOOR INTO SET



SIDE COLUMN CONNECTED
WITH SLIDING PROFILE



LOCK PROFILE




INSERT SEALED TYPE

5

4. INSTALL MOVABLE DOOR&ACCESSORIES



TOP ROLER INSTALL

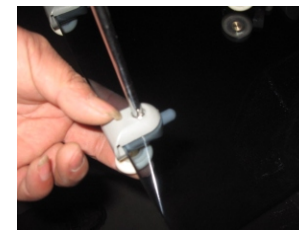


BOTTOM ROLER INSTALL



PRESS CAP



ROLER INTO PROFILE

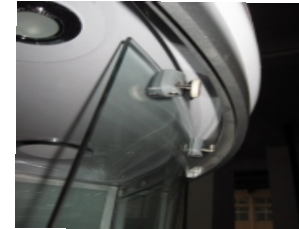

ROLER INTO PROFILE



PRESS ROLER INTO
PROFILE



INSERT WATER PROOF
TYPE&CUT OVERAGE



INSERT MAGNETIC TYPE




PUT DOOR HANDLE

6

Acessories list:

NO.	NAME	QUANTITY
A1	FIXED DOOR	2PCS
	MOVABLE DOOR	2PCS
	MID COLUMN	2PCS
	MAGNETIC TYPE	2PCS
	SEALED TYPE	2PCS
	WATER PROOF TYPE	2PCS
	MANUAL	1PCS
A2	BACK GLASS	2PCS
A3	FUNCTION PANEL	1PCS
	SHELF	1PCS
	SHOWER SEAT	1PCS
	MIRROR	1PCS
	COLUMN CUSHION	2PCS
A4	TRAY	1PCS
	ROOF	1PCS
	SLIDING PROFILE	2PCS
	HAND SHOWER	1PCS
	PIPE FOR SHOWER	2PCS
	HOT&COLD PIPE	2PCS
	CONNECTOR	1PCS
	LIFTING ROD	1PCS
	ACESSORYBAG	1PCS


6. INSTALL FUNCTION PANEL AND WATER&ELECTIC

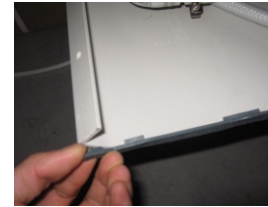

PUT COLUMN CUSHION



PUT FUNCTION PANEL

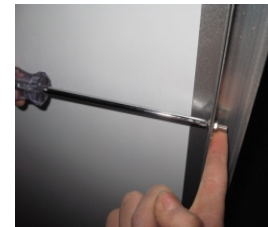

LOCK PROFILE



PUT ROOF



FIX ROOF



FIX ROOF&PROFLE



INSERT TOP SHOWER PIPE

Honoured users:

Welcome to buy shower cabin series handled by our company.
For your safety , please read the instruction carefully before installation
and using of the shower rooms.

Contents

- 1. preparations ②
- 2. tray adjustment ④
- 3. instal fixed doorl ⑤
- 4. install movable door&fix acessories ⑥
- 5. install side glass. ⑦
- 6. install function panel&conect ⑧⑨
water&electric parts
- 7. fix acessories in house&add glue --- ⑩

7. INSTALL ACESSORIES IN HOUSE&PUT GLUE



PUT MIRROR



FIX TWO ENDS



PUT MAP




INSTAL SHOWER SEAT



CONNECT HAND SHOWER&PIPE




JOIN ANOTHER CONNECTOR

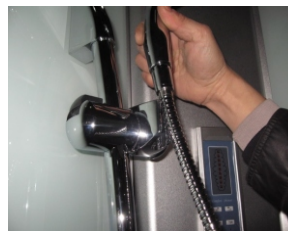


PUT HAND SHOWER TO SEAT



INSTALL SHELF SEAT

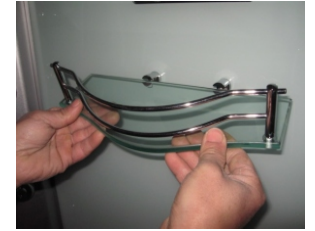

INSERT SHELF TO SEAT

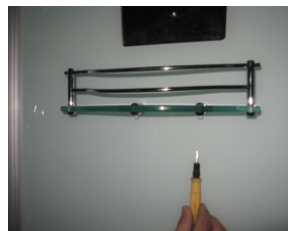

LOCK SHELF SCREW



CHECK WHOLE&CLEAN



ADD GLUE AMONG CONNECTIN USE AFTER24HOURS!