


1. Preparations:



This product divides three packing (as the picture shows)


(A1-- Back board A2-- Tray A3-- Glass)

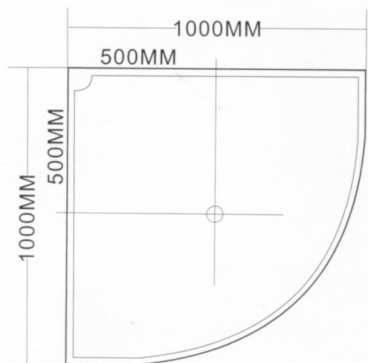


Parts List:

Positions	Name	Quantity
A1	Back board	3pcs
	Hand Shower	1 set
	Towel Horse	2 units
	Jointing strip	2units
	Handle	2 units
	Ball	8units
	Screw	1set
A2	Tray	1unit
	Rail	2units
	Ceiling	1unit
A3	Fix glass	2pcs
	Sliding glass	2pcs
	Magnetic joint	2pcs
	Water proof strip	4pcs
	Leather strip	2pcs


2. Installation Process:

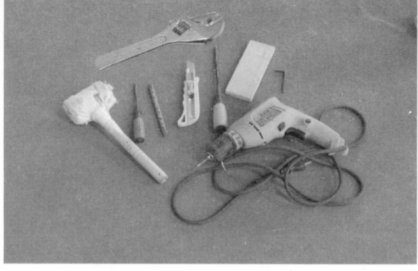


1. Tools required for installation as above

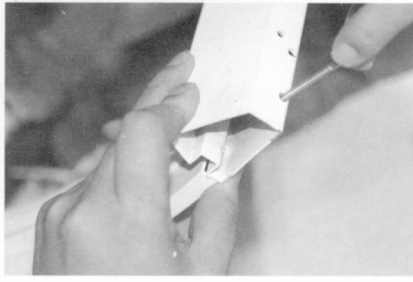


2. Link aluminum profile by 4*60 screw

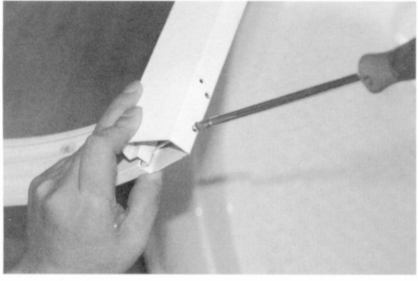


3. Tighten the screw, fix other aluminum profile as it

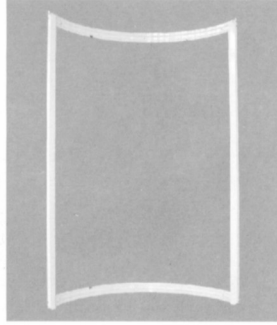

4. After finish, show as above

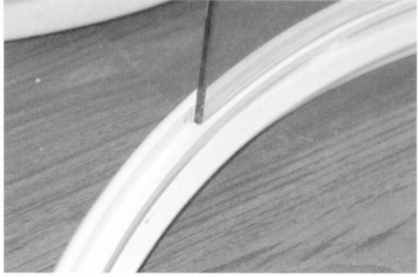


5. Install the fix glass on the aluminum profile

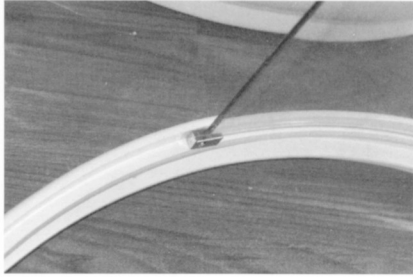

6. Add on fix corner


-4-

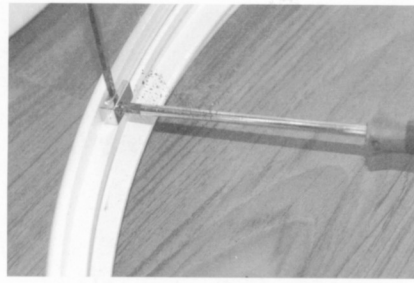


7. Tighten the screw, install other glasses as it




8. Insert the leather strip

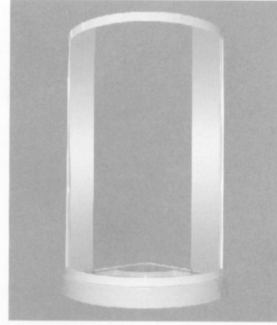


9. Put aluminum profile with fixed glass on the tray, as picture show

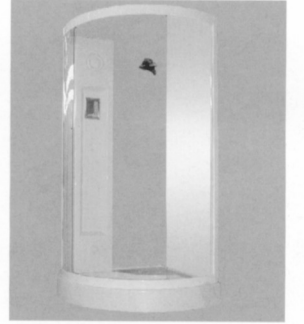

10. Put one piece of back board on the tray

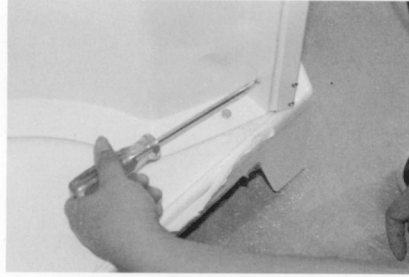


11. Fix the back board and aluminum profile by 4*16 screw

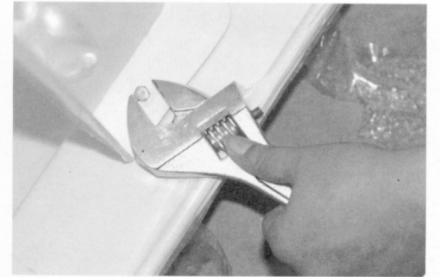

12. Fix the back board and tray by 6*25 bolt, fix the other side as it

-5-

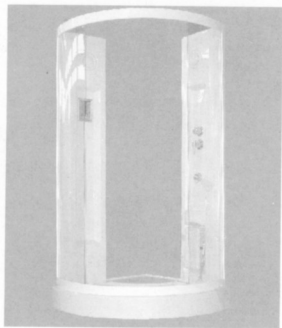


13. After finish, show on above



14. Put mid back board on the tray, using jointing strip fix it with back board




15. Fix the 3 back board by 4*20 bolt

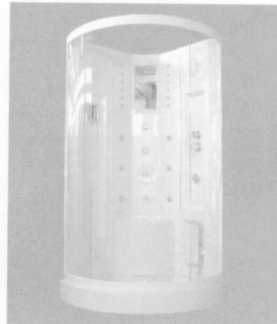

16. After finish, show as above



19. Lean the sliding glass, move the attached ball bearing into the track

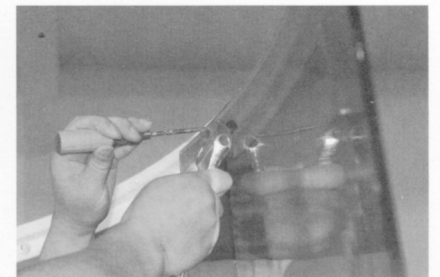


20. Use screw driver and monkey wrench to adjust the ball bearing




21. Attach the bottom ball bearing by the same way




22. After finish, show as above

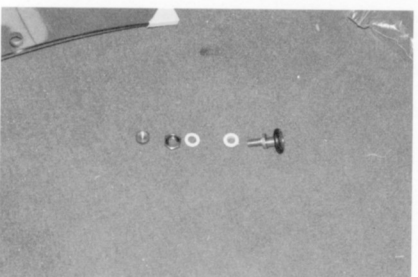


17. Take out the ball bearing

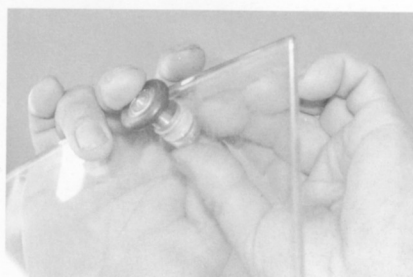

18. Attach the ball bearing on the sliding glass, fix the nut

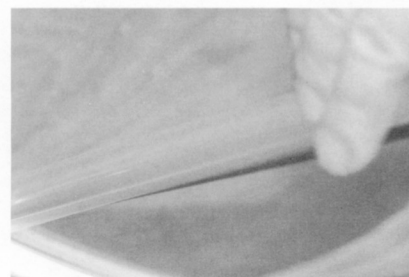


23. Insert the water proof joint into sliding glass door

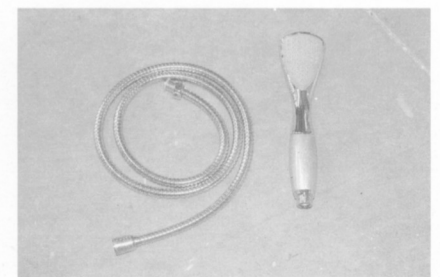

24. Take out the hand shower and accessories

-6-


-7-

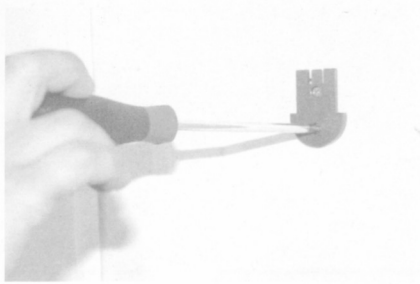

25. Put plastic shelf on the installation point, fix it by 4*20 bolt




26. Insert the shower holder to the plastic shelf

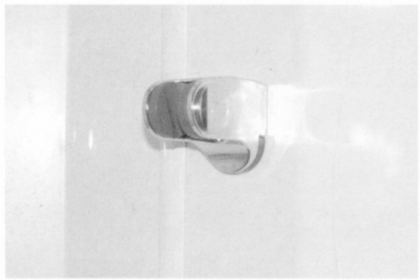

27. After finish, show as above




28. Joint one end of the tube with the water output

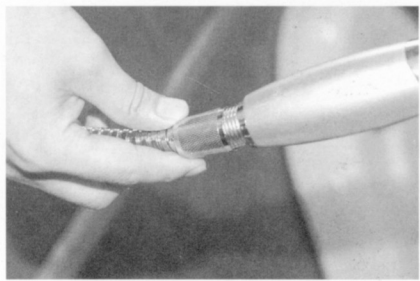

29. Joint the other end of the tube with the shower head




30. Insert the shower, show as above

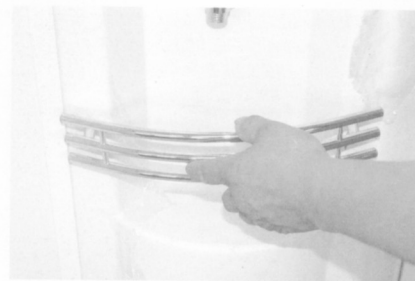

31. Put the towel horse to the appointed position



32. Mounting the screw and fix the towel horse from back

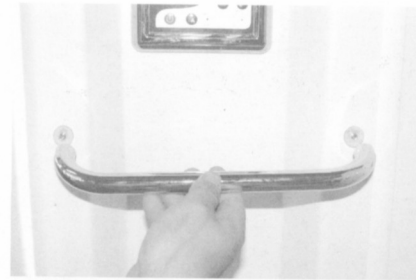

33. Put another towel horse to the appointed position



34. Mounting the screw and fix the towel shelf from back



35. Put the ceiling on the back board, joint them by 6*25 screw




36. After finish, show as above




37. Make the steamer generator the same line with steel shelf, fix them by screw




38. After finish, show as above

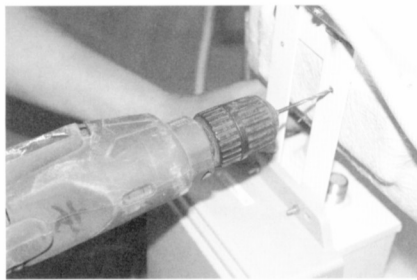

39. Drill a hole for the steamer generator on the back board

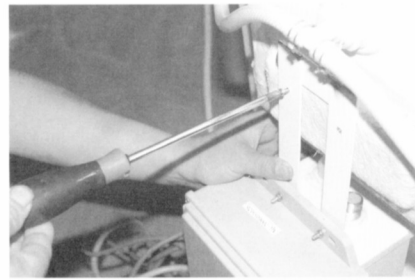

40. Fix the steamer generator by 4*16 screw

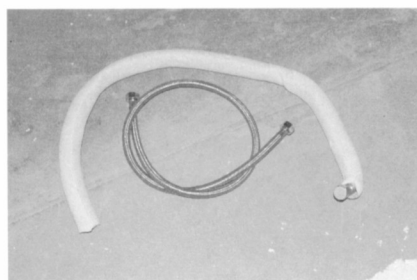


41. Take out the steamer tube and water pipe




42. Attach one end of steamer tube on the steamer generator, tighten it




43. Attach the other end of steamer tube on the steam input, tighten it

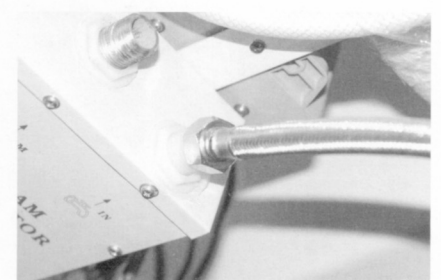

44. Attach one end of water pipe on the steamer, tighten it

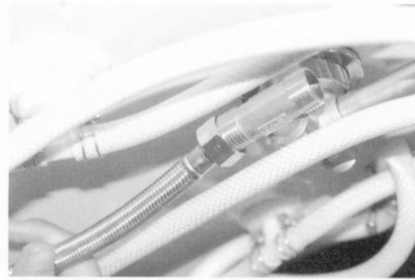


45. Attach the other end of water pipe on the steamer faucet, tighten it

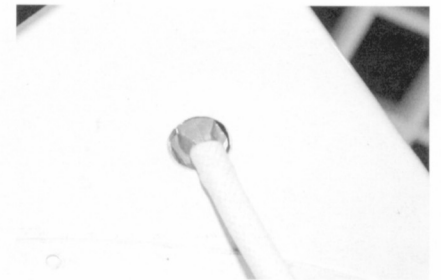

46. Make tube trough the ceiling



47. Connect the ceiling joint with the tube

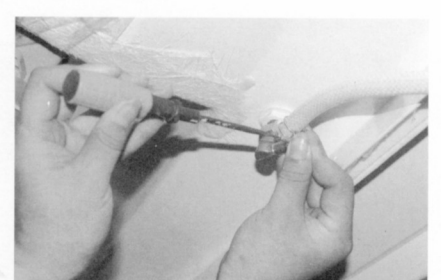

48. Use screw driver fix the clip on the tube