




GELENKARM-MARKISE „SUNCONNECT“

Artikel-Nr.: 2833 (beige) / 2834 (anthrazit)


Maße: 3 x 2,5 m

- INSTALLATIONSANLEITUNG -

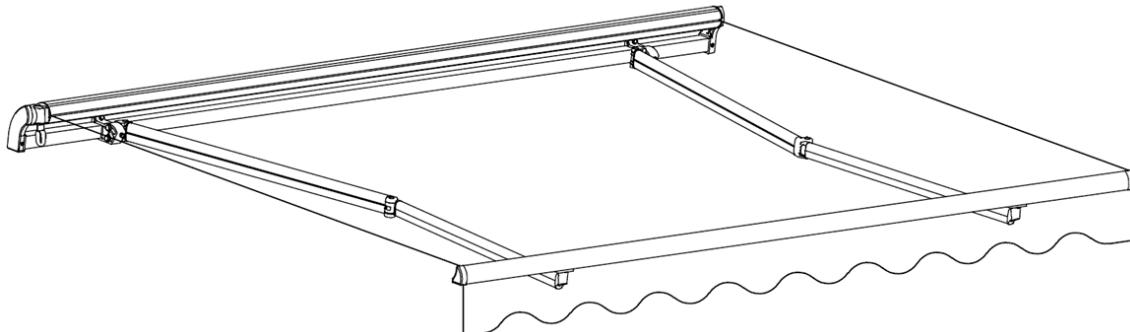

ACHTUNG: Lesen Sie diese Anleitung vor der Installation und Inbetriebnahme unbedingt komplett durch und bewahren sie gut auf. Markisen sind ein Sonnenschutz und dienen nicht als Regenschutz, diese müssen zwingend bei Wind eingefahren werden. Bitte prüfen Sie mit einem Fachmann vor Ort welche Art der Befestigung bei Ihrer Wand benötigt wird. Die mitgelieferten Dübel sind nicht für jeden Wandtyp geeignet. Für falsche Befestigungen, fehlerhafte Montage oder Wind / Sturmschäden übernehmen wir keine Haftung.


BAUTEILE & ERFORDERLICHES WERKZEUG

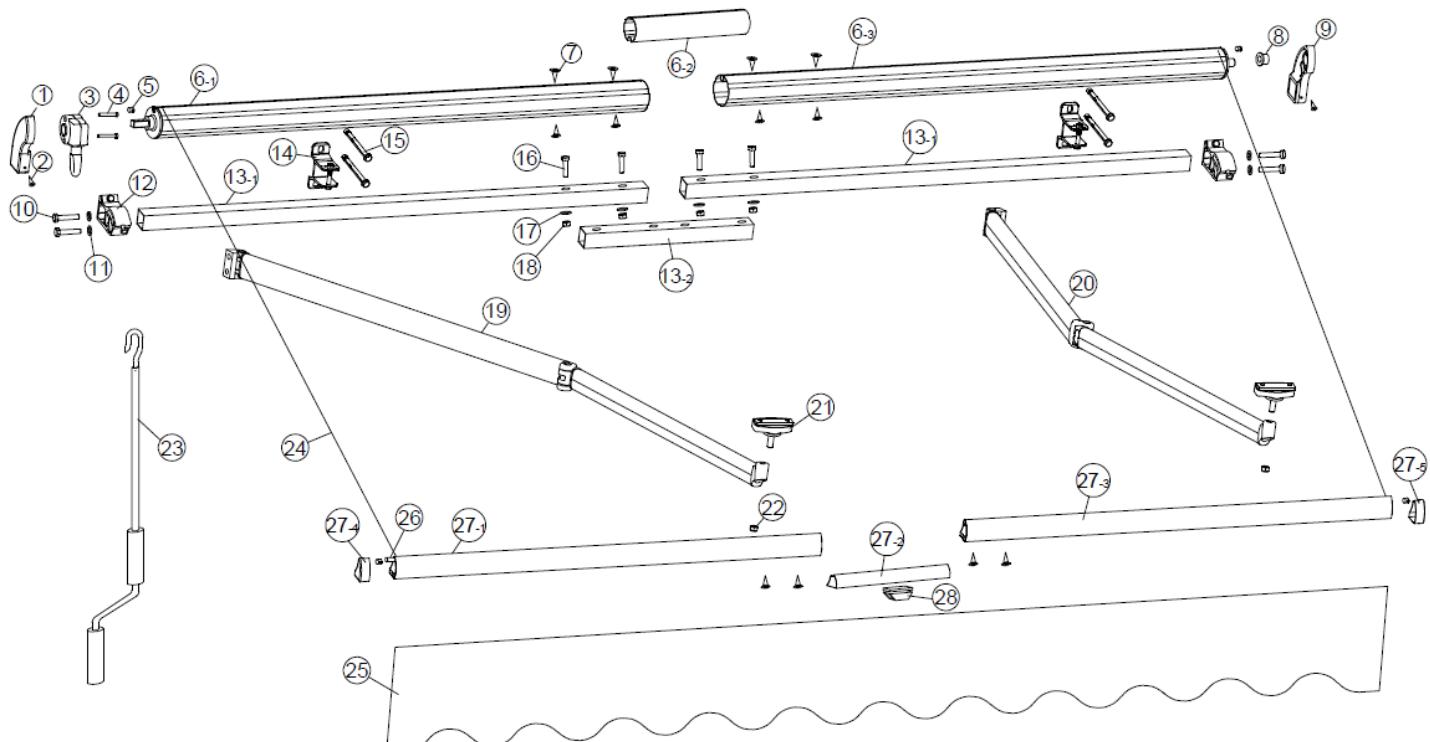

(1)x1



(2)x4

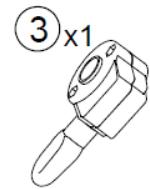

(3)x1



(4)x2



(5)x6




(6-1)x1



(6-2)x1



(6-3)x1



(7)x12



(8)x1



(9)x1



(10)x4



(11)x4



(12)x2



(13)x2



(13-2)x1



(14)x2



(15)x4



(16)x4



(17)x4



(18)x4




(19)x1



(20)x1




(21)x2

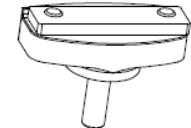

(22)x2




(23)x1

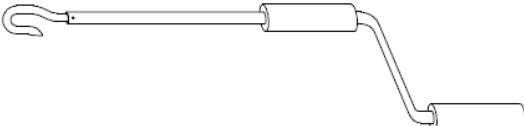


(24)(25)x1




(26)x3

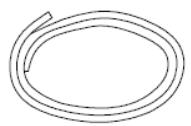

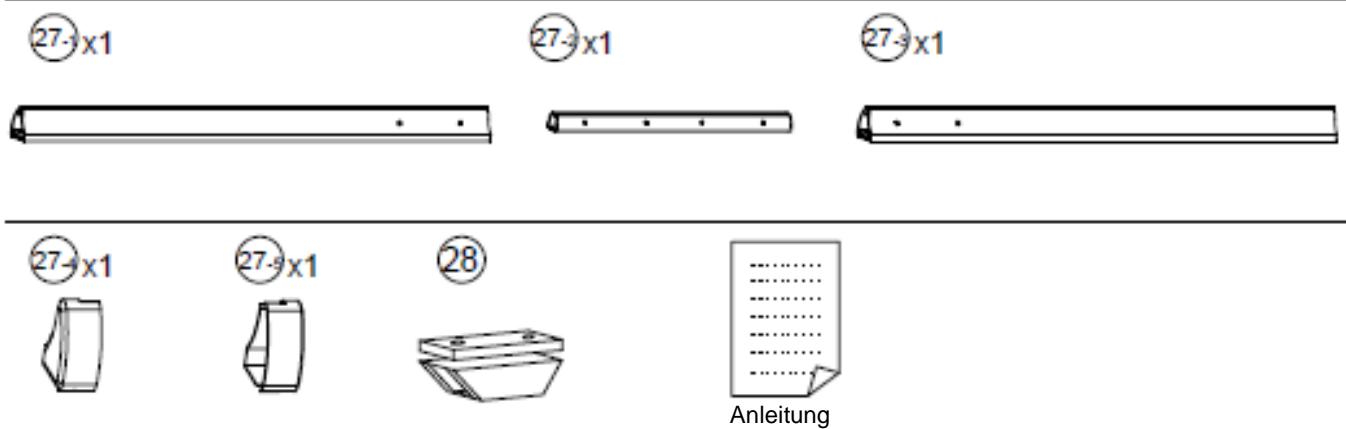

Legen Sie vor der Installation folgende Werkzeuge bereit:

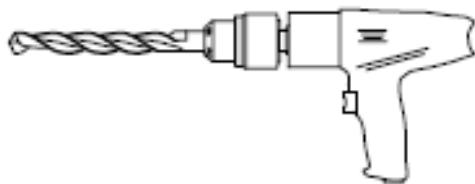

Bohrmaschine mit
Bohrspitze Ø 12 mm



Maßband




Schraubenschlüssel




Schraubenzieher

Installation


1.

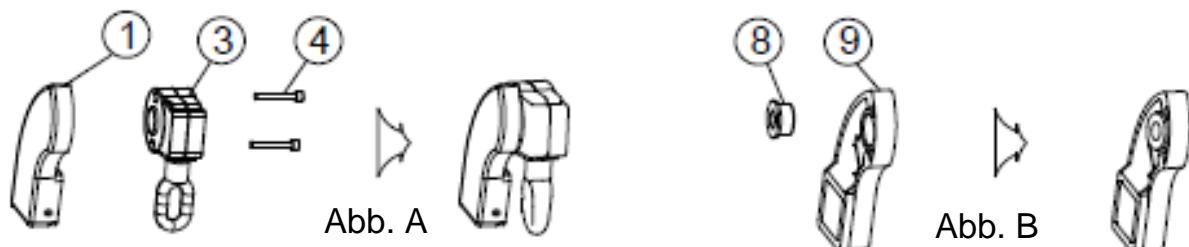


2.

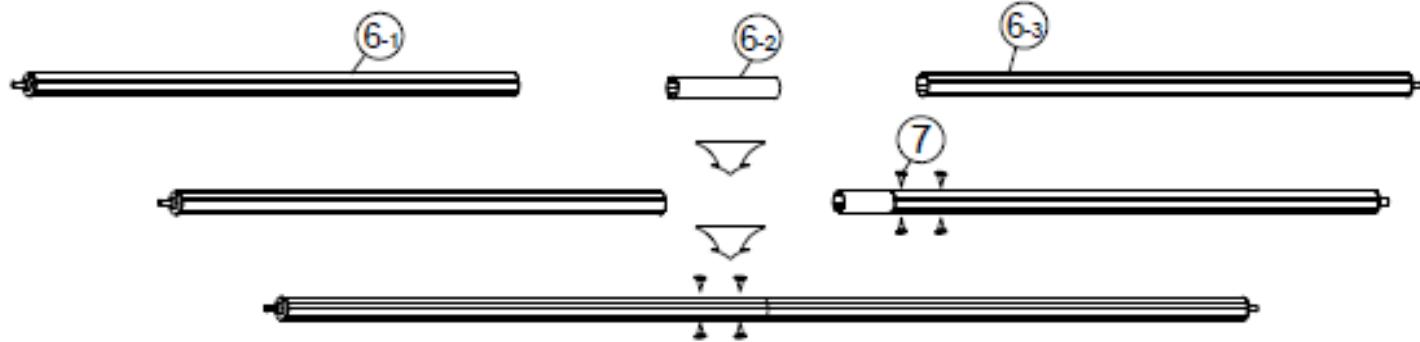


3.

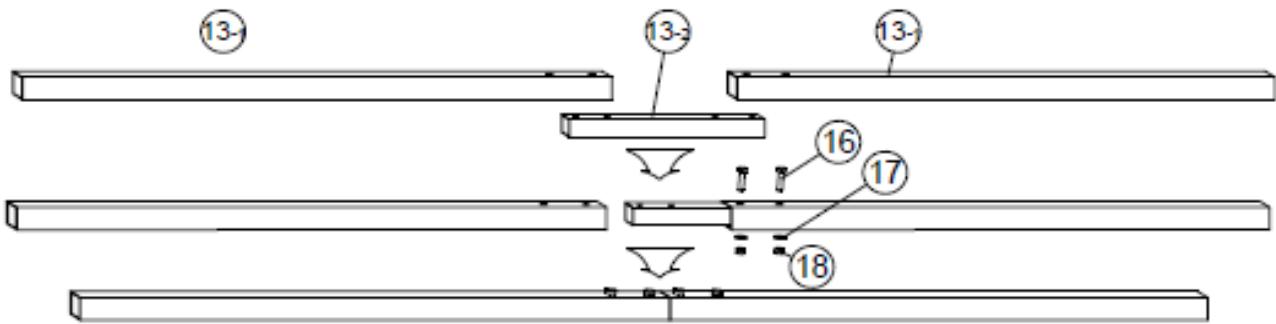


4.

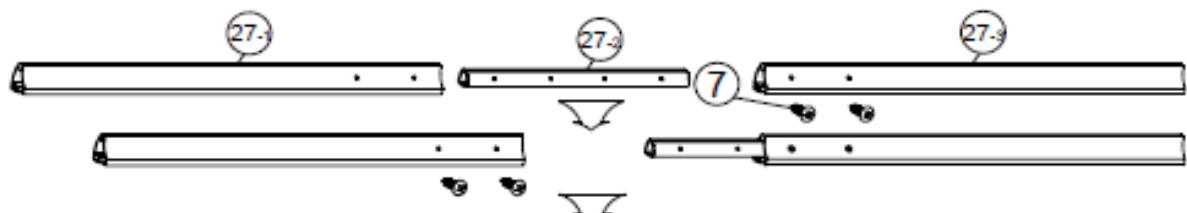


5.




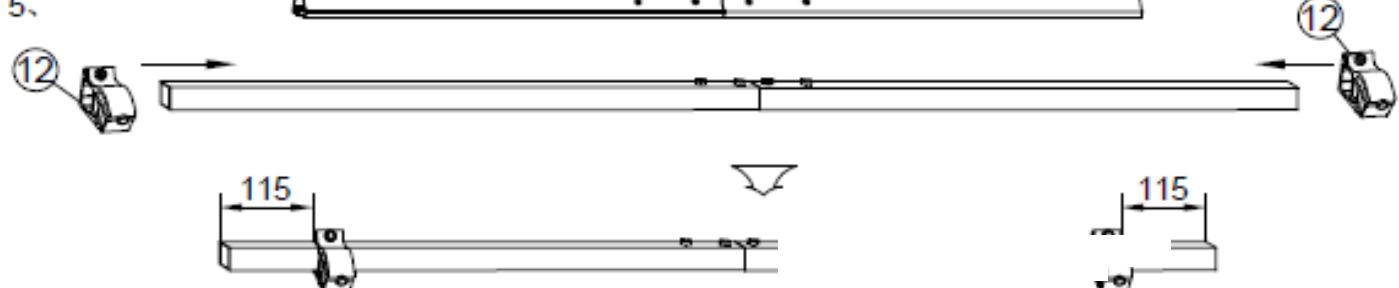







6.

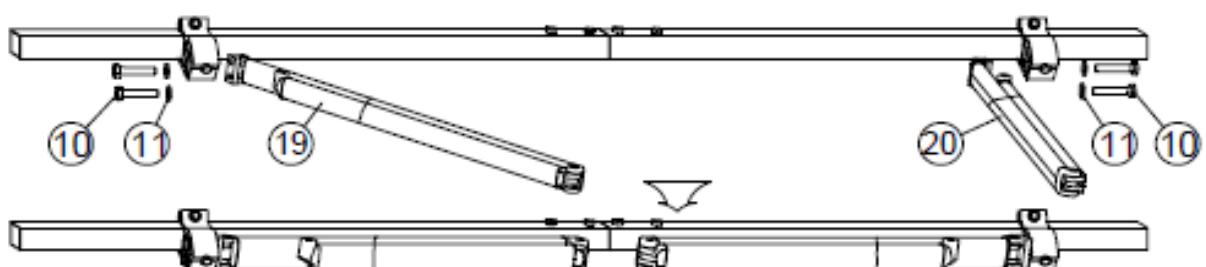


7.

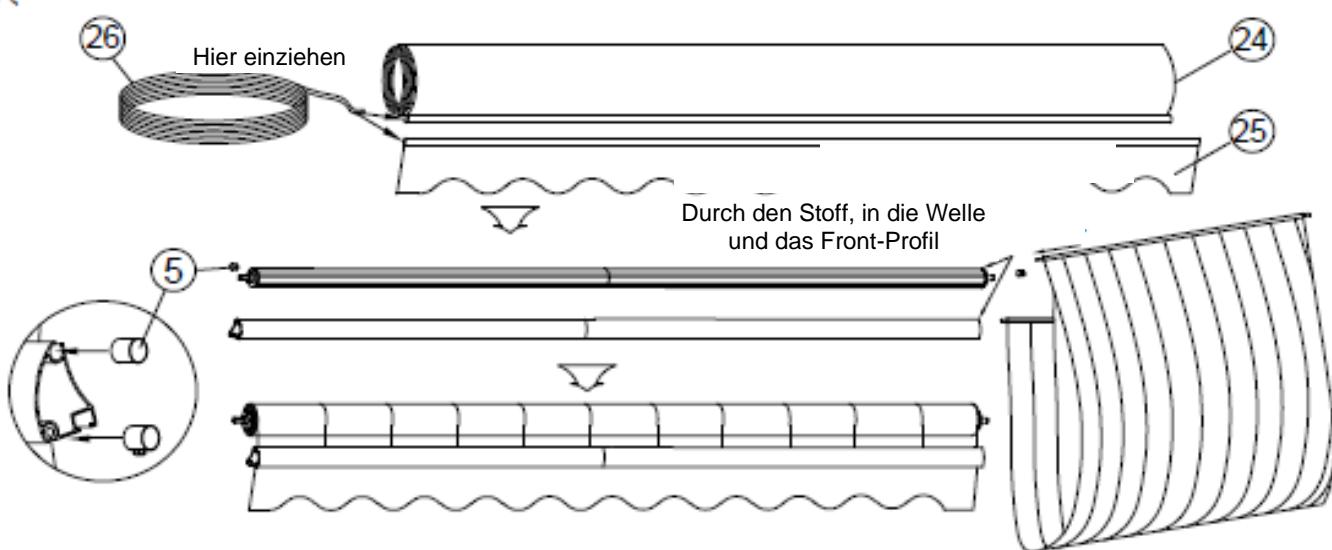

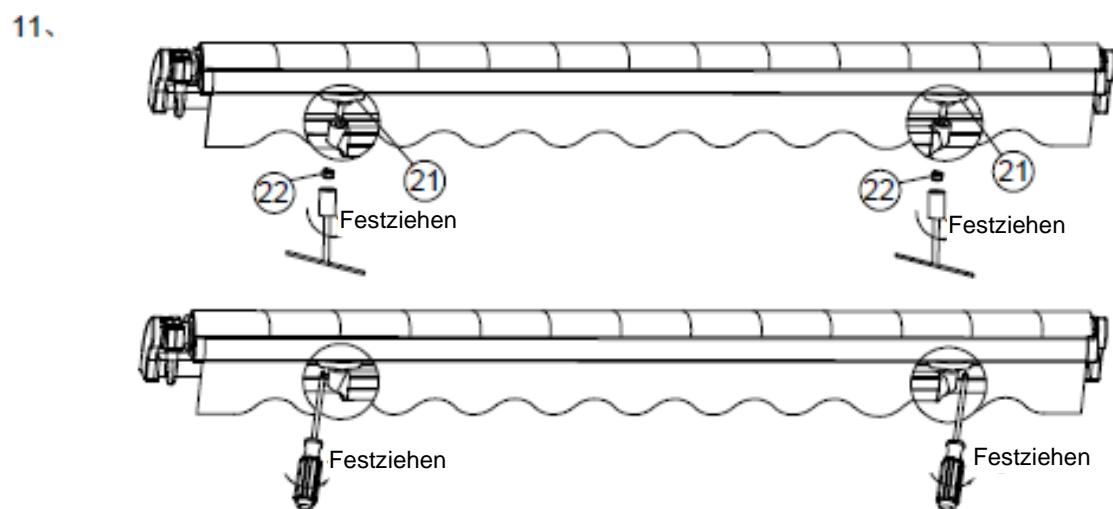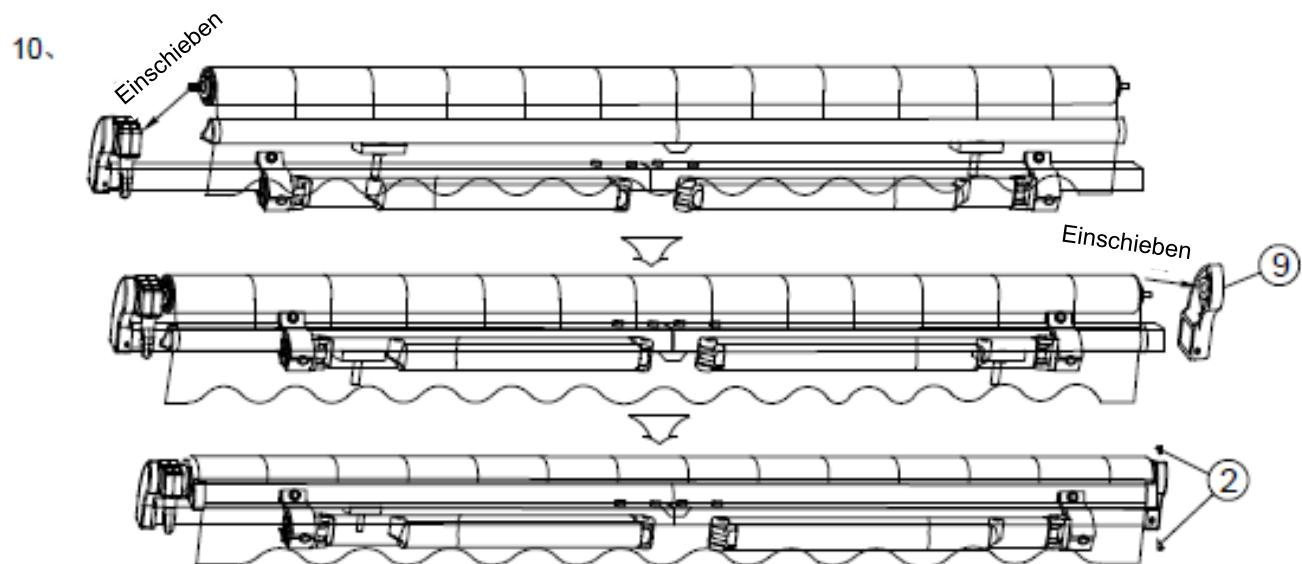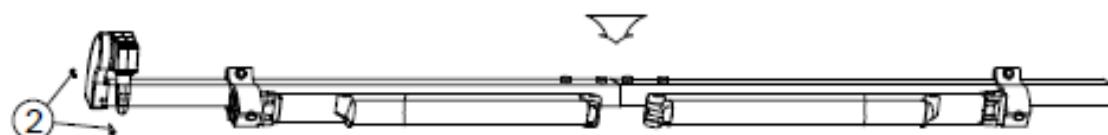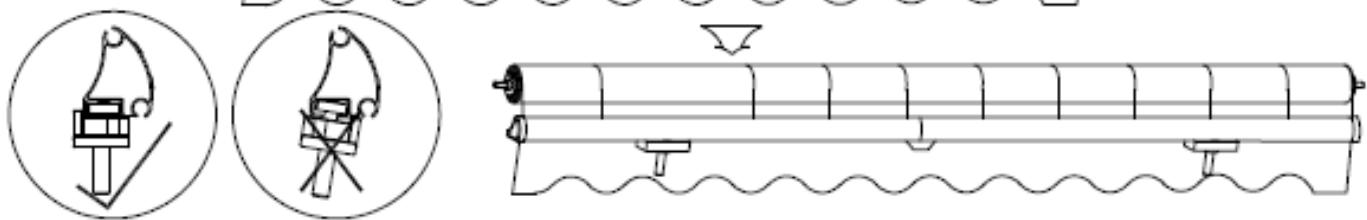


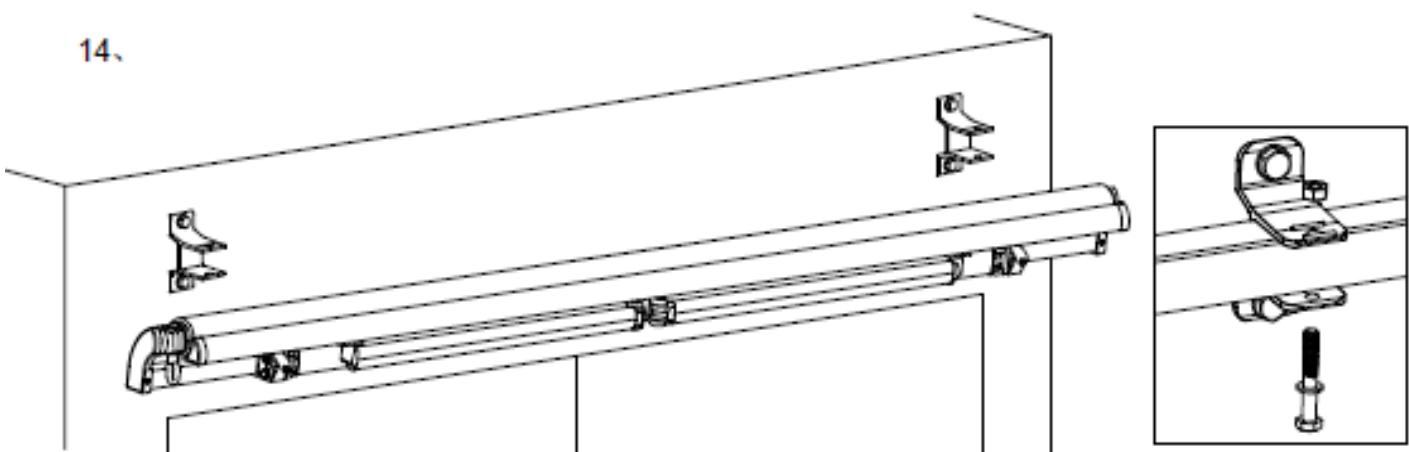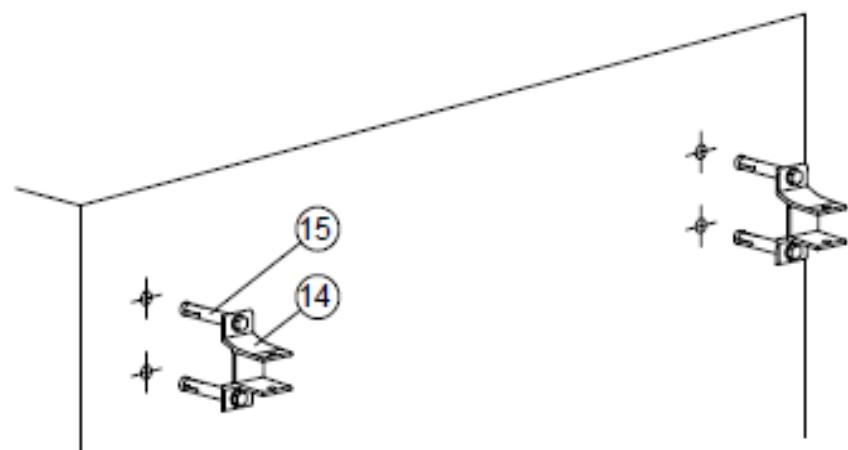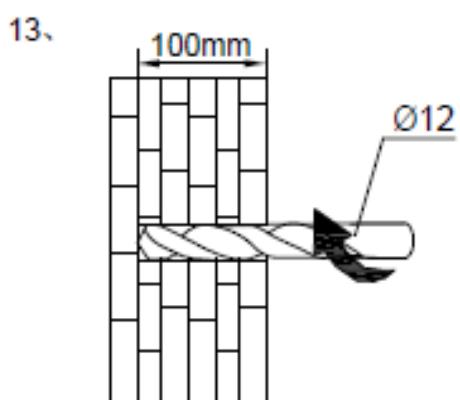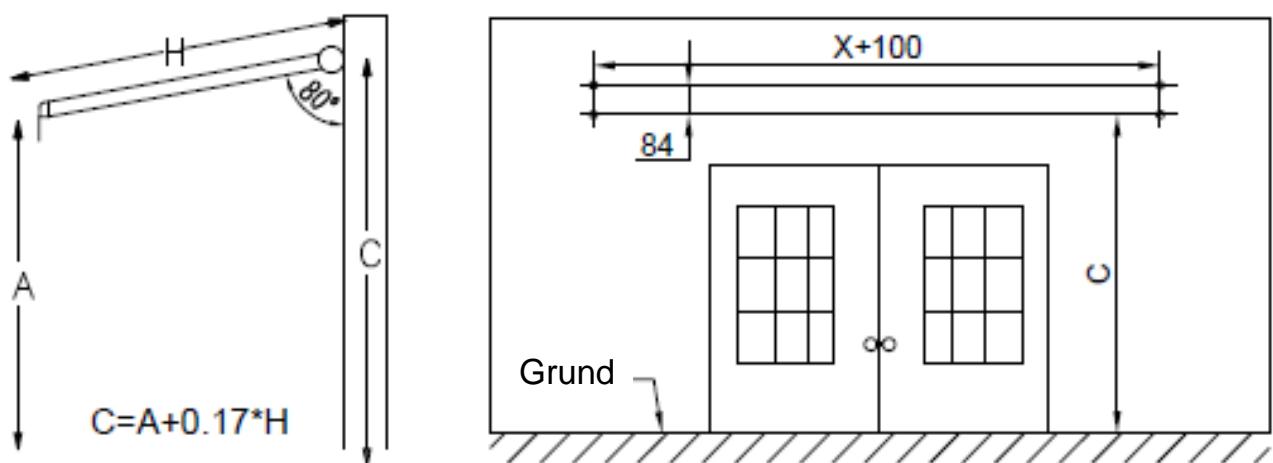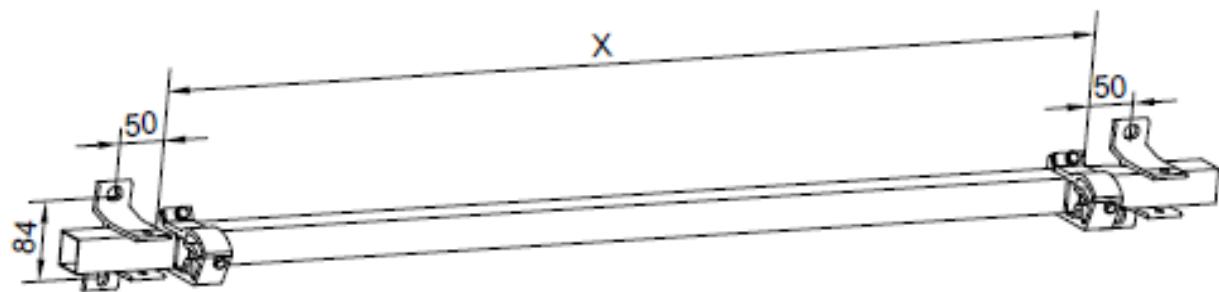

15.

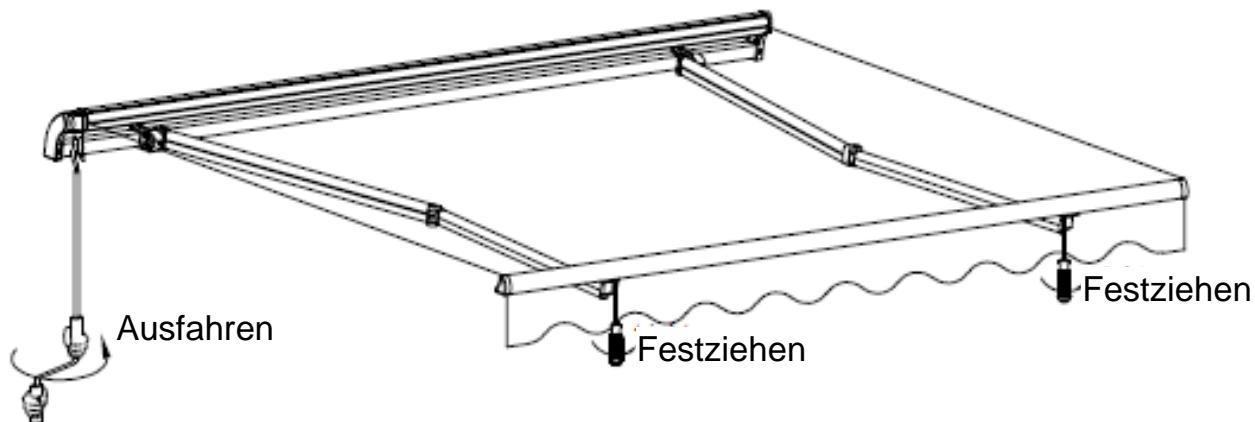


Sicherungsmuttern

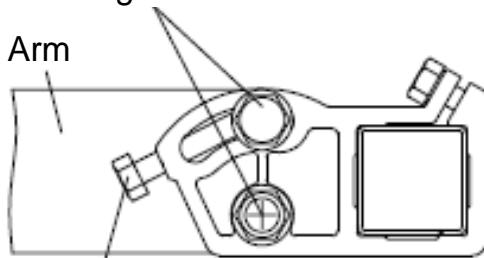


Abdrückschraube

Prüfen Sie mittels der Nivellier-Hilfe am Front-Profil, ob die Markise gerade hängt. Stellen Sie den Neigungswinkel ein, indem Sie die Sicherungsmuttern auf beiden Seiten lösen und an der Abdrückschraube drehen, um die Höhe zu regulieren. Stellen Sie den Arm so ein, dass das Front-Profil gerade ist und ziehen Sie die Sicherungsmuttern dann wieder an. Um den Neigungswinkel der Markise einzustellen, passen Sie den Neigungshalter an beiden Gelenkkästen an. Wenn die Markise den gewünschten Winkel hat, ziehen Sie die Sicherungsmuttern wieder fest.

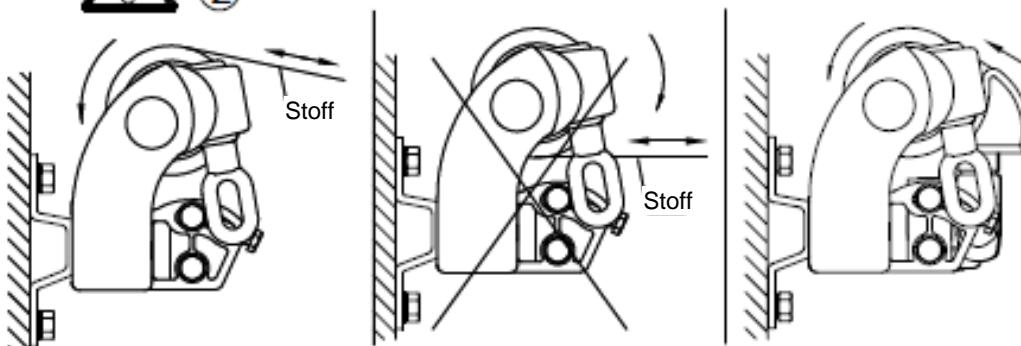

⚠ Warnung:

Wenn sich Front-Profil und Endkappe berühren (s. Abb.), versuchen Sie nicht, diese manuell zusammen zu drücken. Dies kann zu Beschädigungen führen

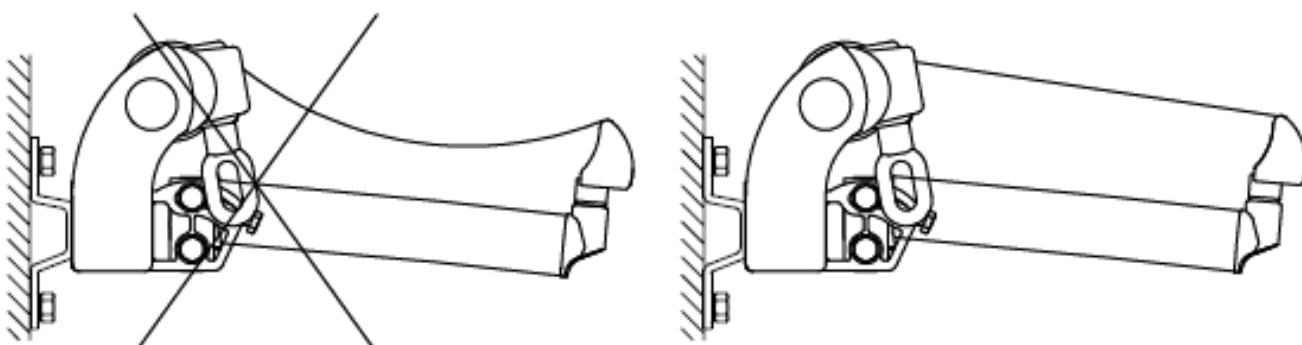

	Alle Teile auf einem Tisch ausbreiten.
	Verbinden des Aufrollers
	Fixieren des Aufrollers
	Verbinden der vorderen Leiste

	Fixieren der vorderen Leiste
	Verbinden des 4-kant Rohres
	Fixieren des 4-kant Rohres
	
	Befestigung der Armaufhängung





	Festziehen des Markisenarms in der Halterung.
	
	Montage der Rolleinrichtung mit der Seitenabdeckung

	Beidseitig
	
	Einführen der Tuchverstärkung



Kürzen der überschüssigen
Tuchverstärkung nachdem diese an
beiden Seiten anliegt.



	Einführen des Tuches mit Verstärkung in die Markisenrolle.
	Vorsichtig durchziehen
	Verschließen des Einzuges auf beiden Seiten.


	Festziehen
	Tuch in die vordere Schiene einfügen
	

	
	Tuch auf die Laufrolle gleichmäßig aufwickeln.
	
	
	Anbringen der Seitenkappe.





Antriebsschnecke fixieren.

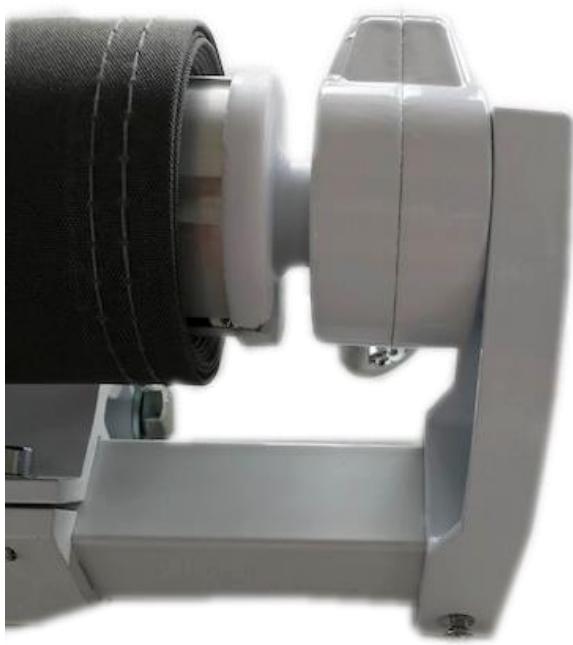


	Armhalterungen an vorderer Schiene befestigen.
	Markisen Arme mit Halterung verbinden.
	

	Fixieren der Halterung
	So sollte dies nach der Montage aussehen.
	Anbringung der seitlichen Abdeckung.





Fixieren der Arme

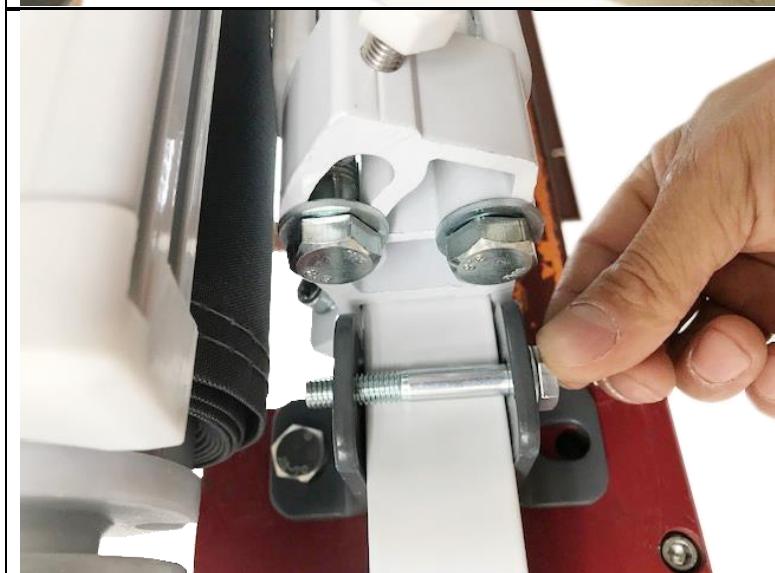

Anbringen der Markise an die vorher an der Wand montierten Wandhalterungen.





Anbringen der Wasserwaage in der Mitte der Markise



Ausrichten der Arme und fixieren.

Installationsvideos und Aufbauanleitungen
zu unseren Produkten finden Sie unter
www.gartenmoebelkauf.de
Username: jet-line • Passwort: user2011

Weitere Produkte für Ihren Garten
finden Sie unter
www.gartenmoebelkauf.de



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Deutschland
Tel: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
www.gartenmoebelkauf.de






ARTICULATED ARM AWNING „SUNCONNECT“

Article-No.: 2833 (beige) / 2834 (anthracite)






Dimension: 3 x 2,5 m


- INSTALLATION & USER MANUAL -

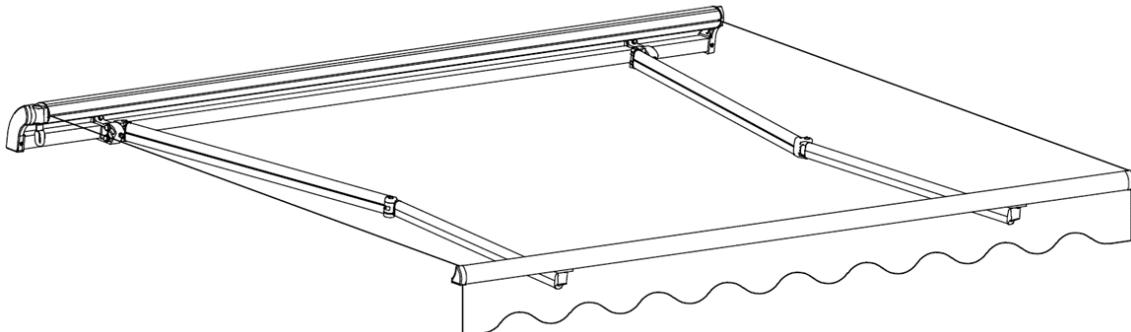


WARNING: Please read this instruction carefully prior to installation and follow it exactly. Save your manual well for future reference. Awnings are solely intended for sun- (NOT rain-) protection. Please make sure to retract the roof in rainy/windy conditions. Check with an on-site expert how the awning needs to be fixed on your wall. The anchors included with delivery are not necessarily suitable for every wall-type. We cannot be held liable for incorrect installation or weather-caused damage.

PARTS & REQUIPRED TOOLS

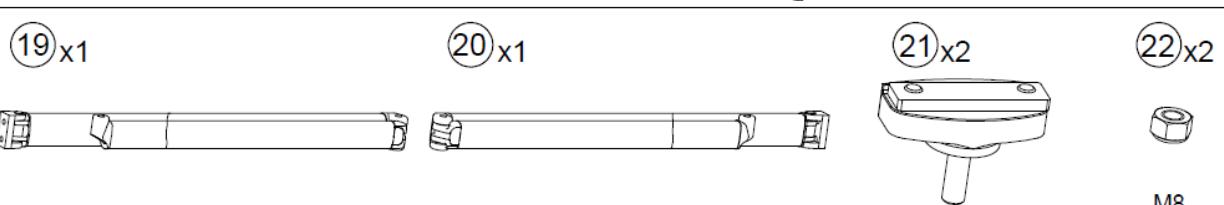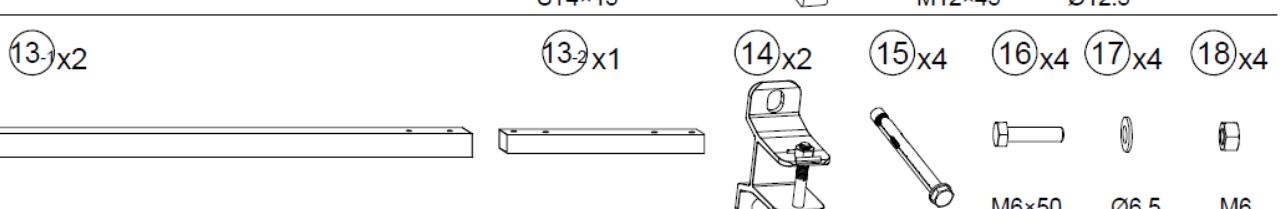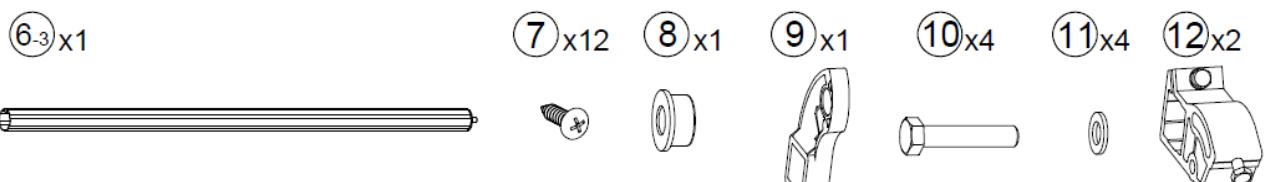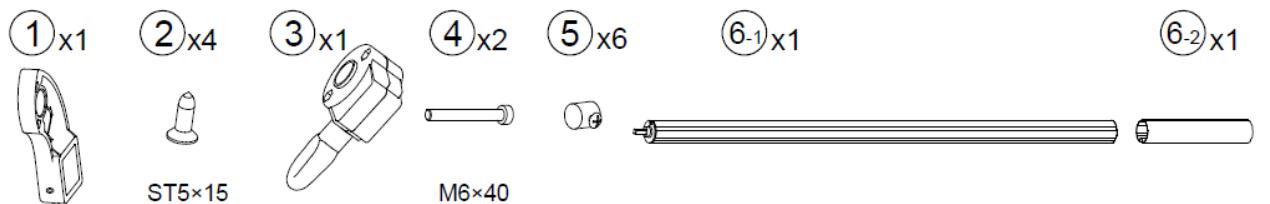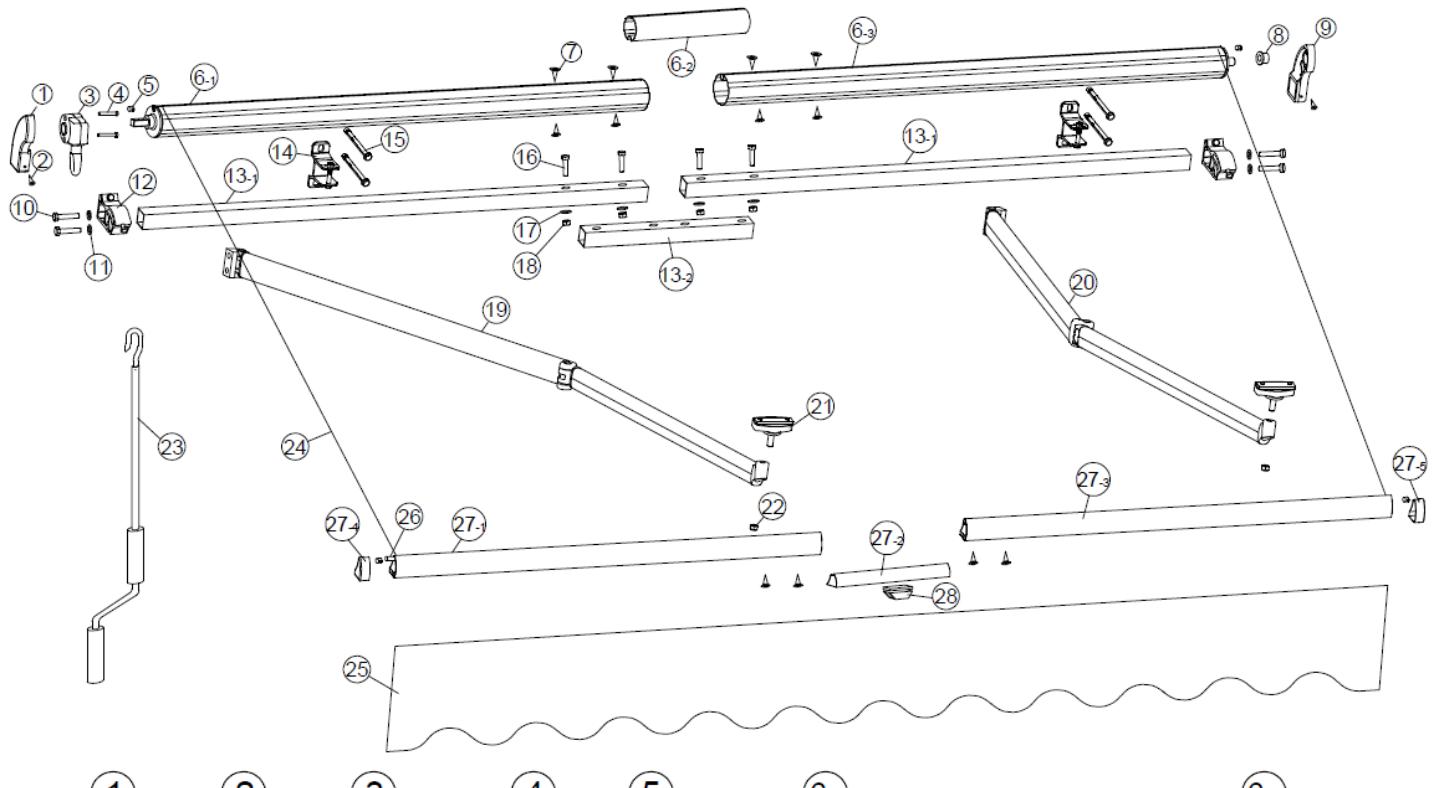

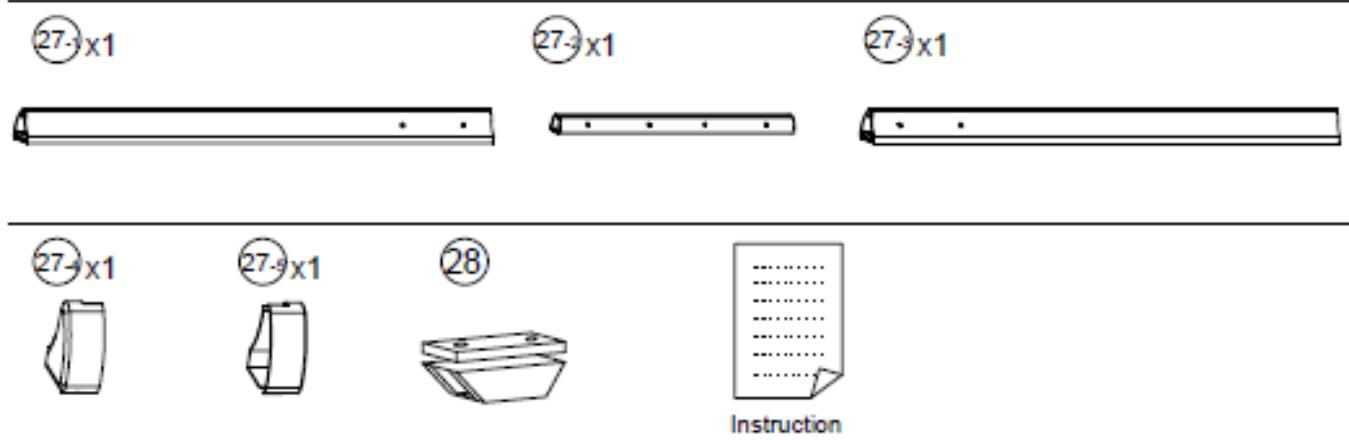

Please prepare below tools before installation:

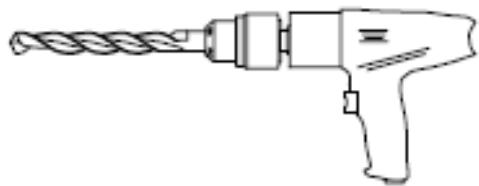

Power drill with drilling bit
of Ø12mm



Tape measure



Wrench




Screwdriver

Installation procedure


1.




2.

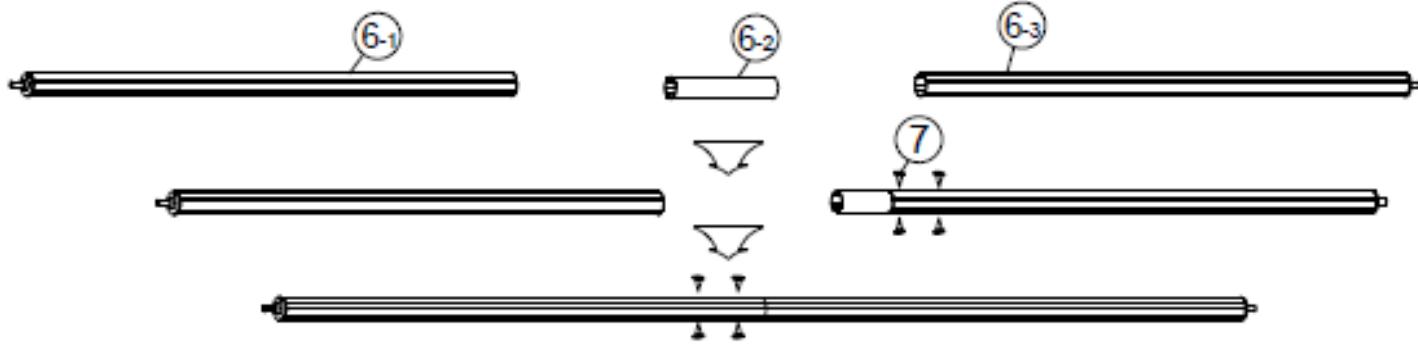


3.

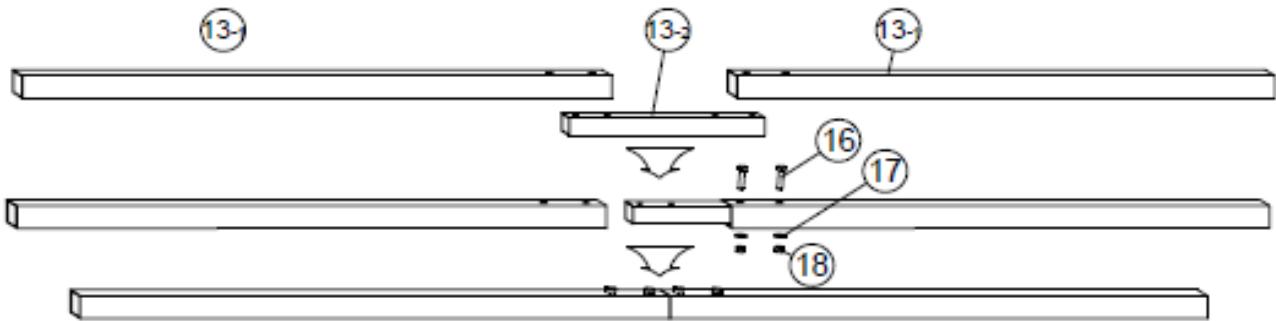


4.

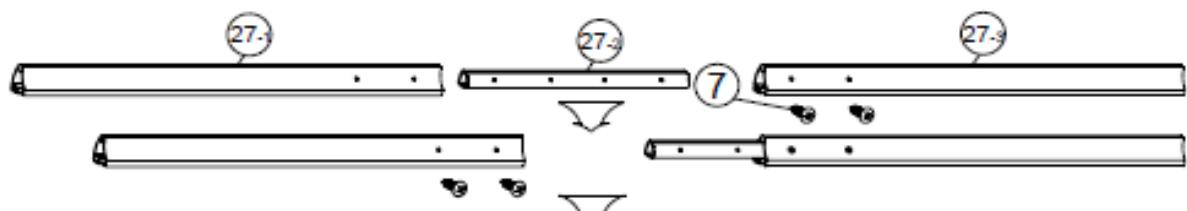


5.







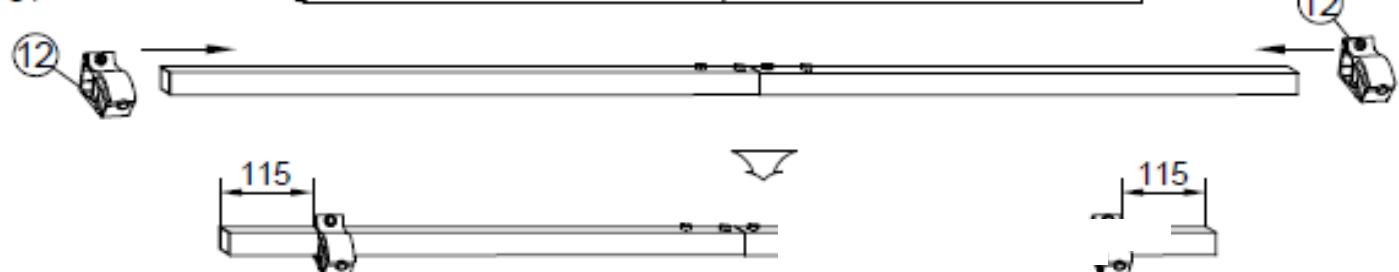







6.

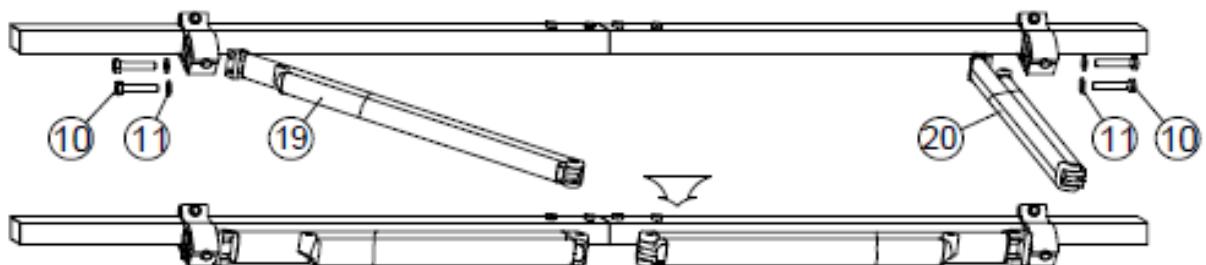


7.

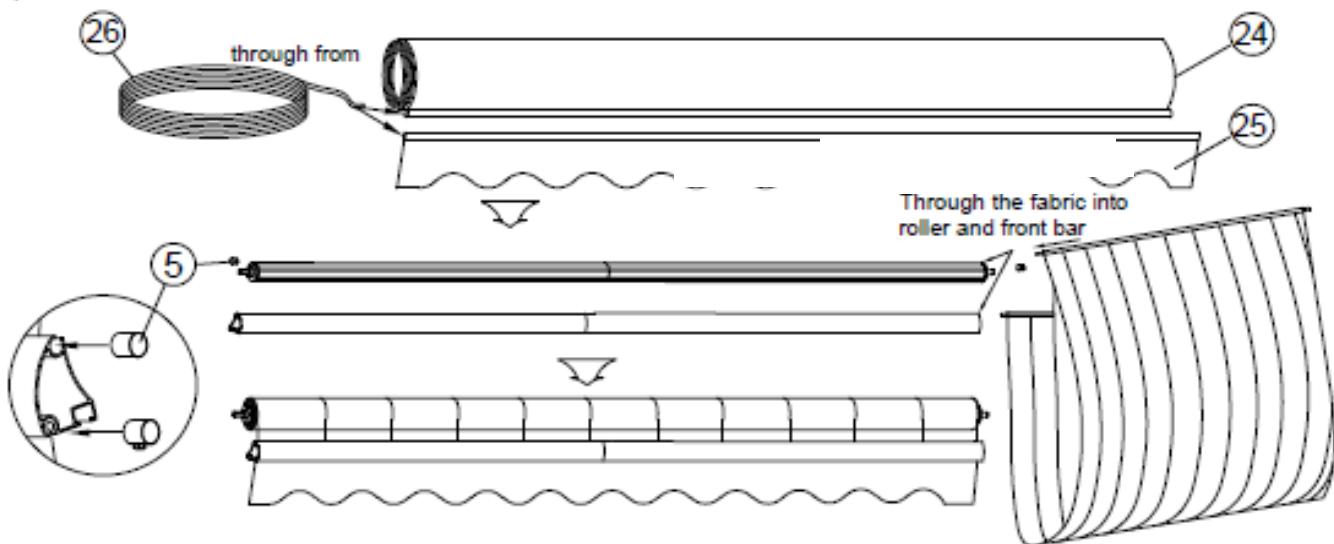

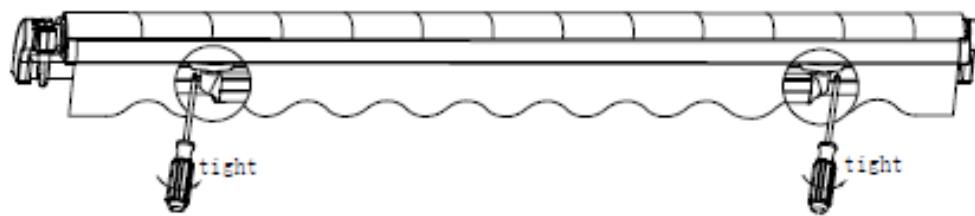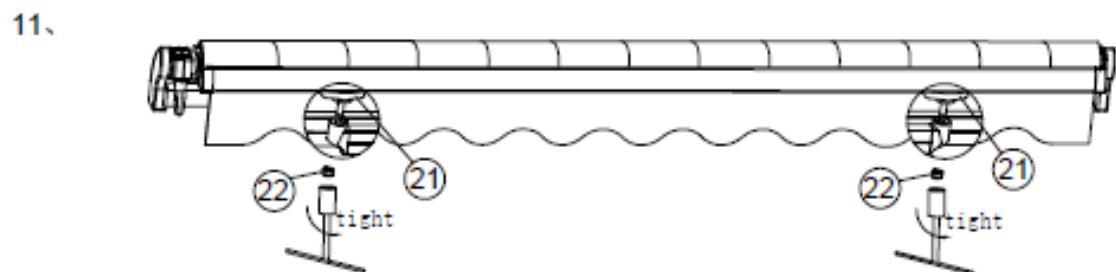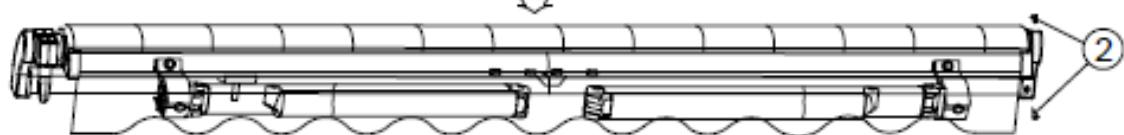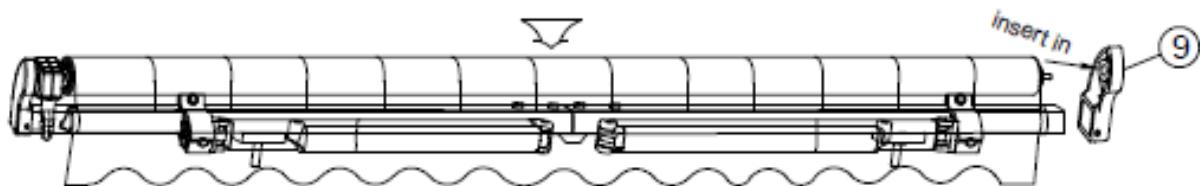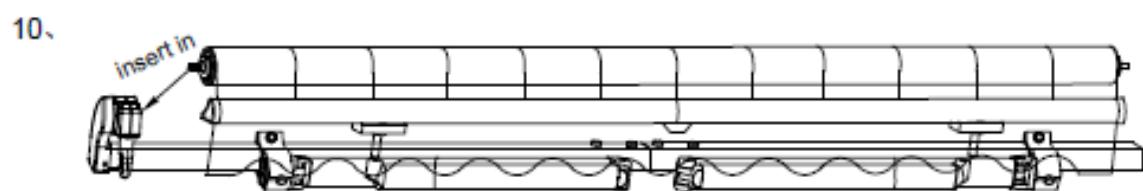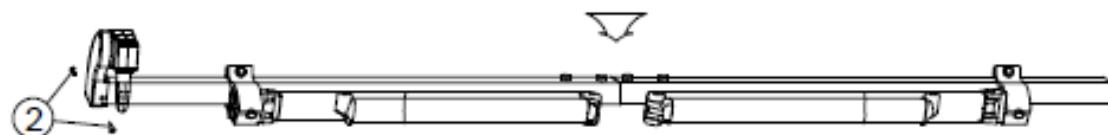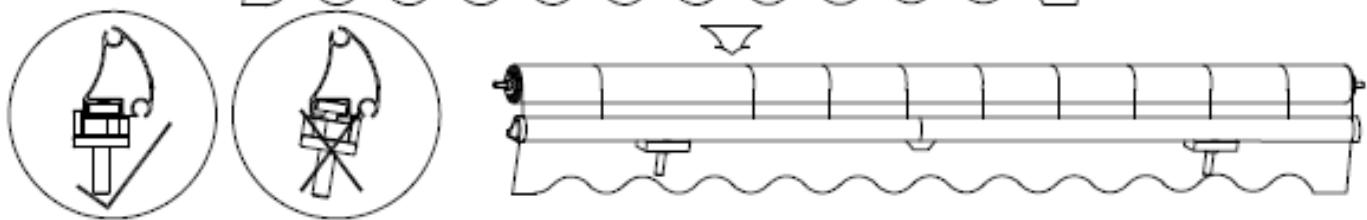

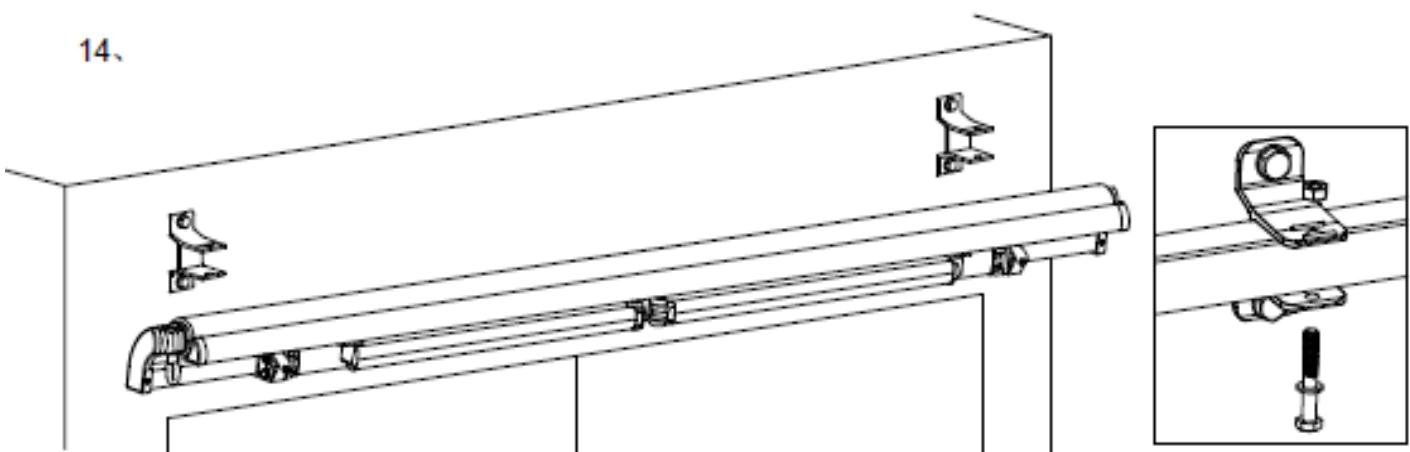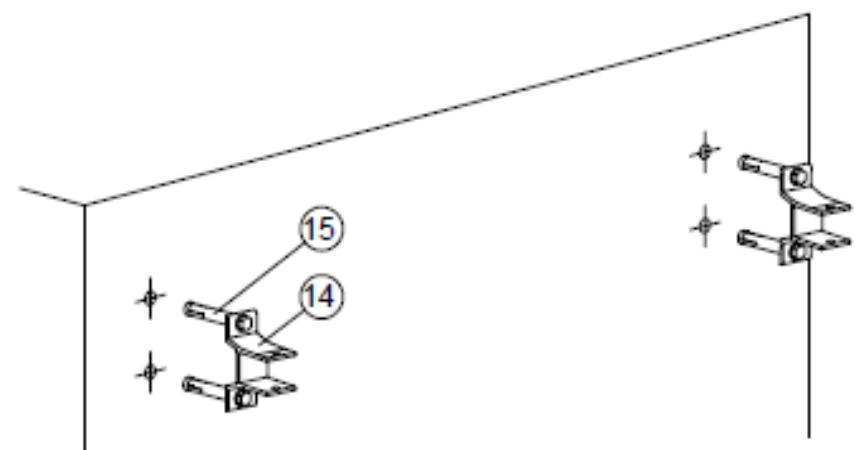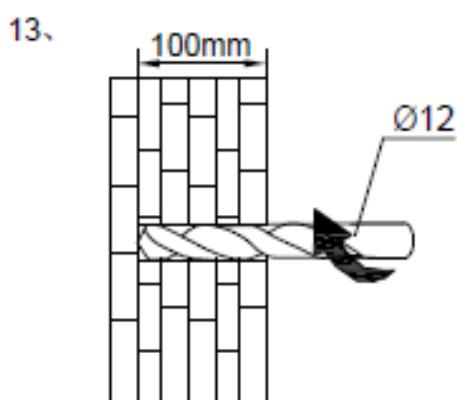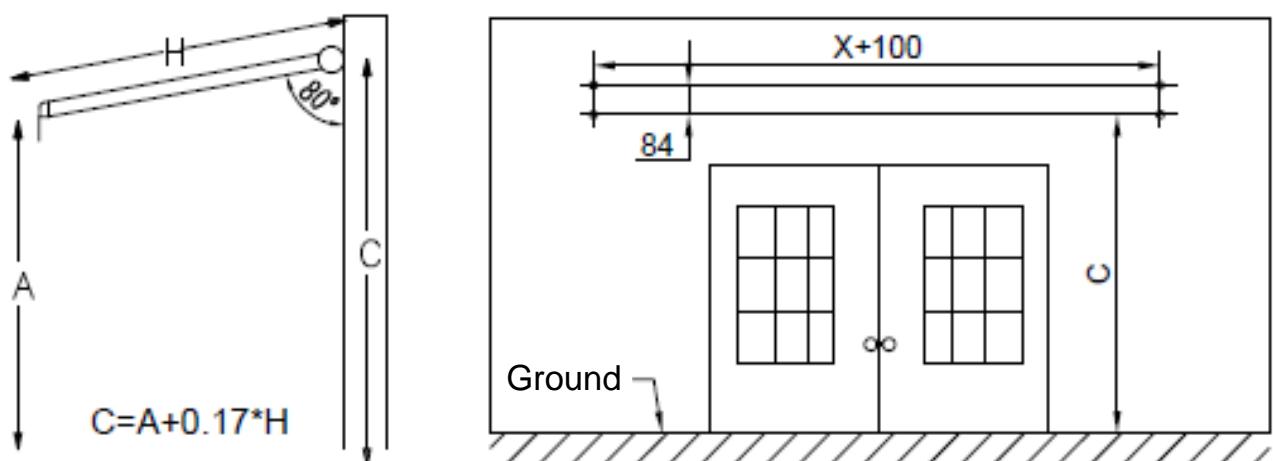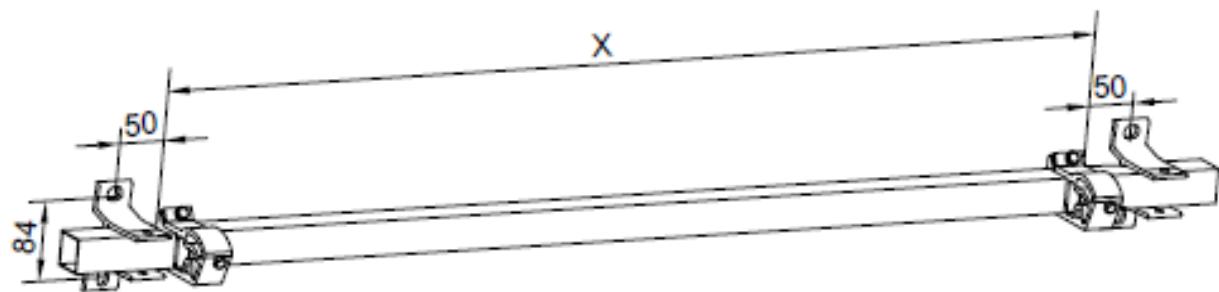


15.

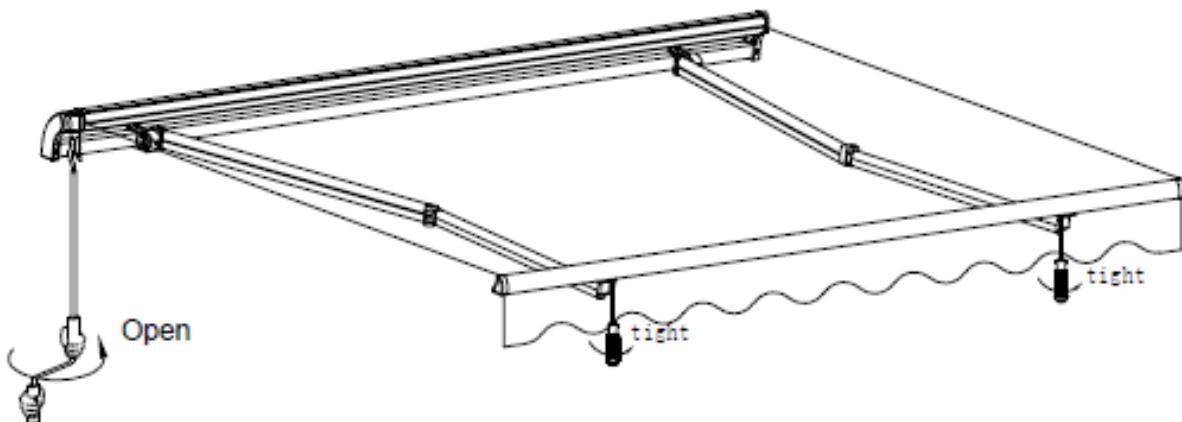

LOCKING NUTS


ARM

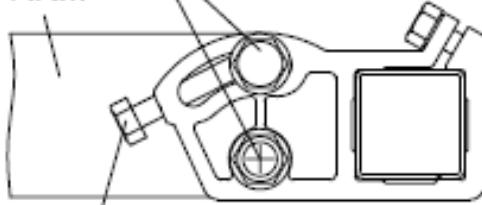


Abdrckschraube

Check if the awning is level with the use of the spring level (28) on the front bar. Adjust the angle adjuster at either end by loosening the locking nuts of the angle adjuster, turn the jack bolt to adjust the pitch. Adjust the arm until the front profile is level. Tighten the locking nuts again to fix the level of awning.

To adjust the inclination of the awning, adjust the angle adjuster on both arm shoulders to achieve the desired inclinaton. Fix the locking nuts when the awning is level.

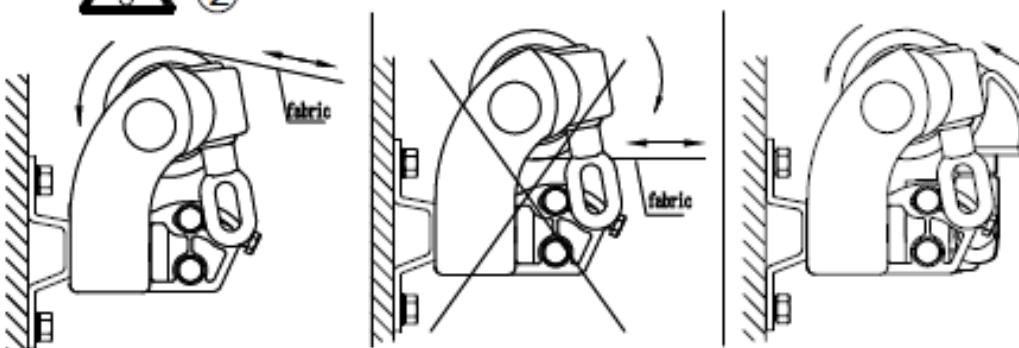

Warning: When the front bar touches the end cap shown in the image, do not try to bring them closer. Otherwise, the product may be damaged.

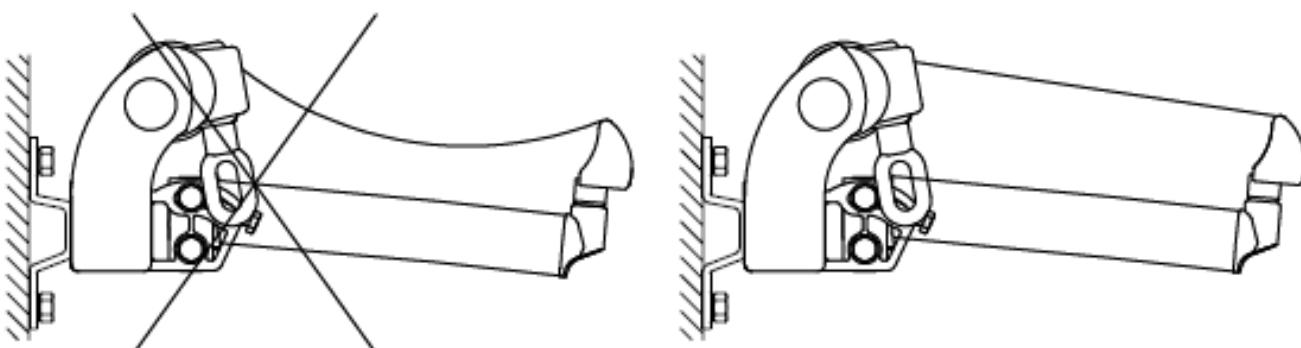

	<p>Before you start assembly, make sure that your shipment is complete and there are no parts missing or damaged.</p>
	<p>Connect the retractors</p>
	<p>Fix the retractors</p>
	<p>Connect the front panels</p>

	Fix the front-panel
	Connect the square tube
	Fix the square tube
	
	Install the holder for the arm





Insert the arms into the holders





Connect the arms firmly with the holders



Assemble the winder and the side-cover



	On both sides
	
	Insert the reinforcement material in the tunnel of the roof-fabric





	<p>Insert the reinforced tunnel in the awning shaft</p>
	<p>Carefully pull the cloth through to the other side</p>
	<p>Afterwards plug the tunnel-entry on both sides</p>



Tighten carefully



Insert fabric in the front-panel




	
	Evenly wind the cloth onto the roll
	
	
	Install the side cap





Fix the driving worm

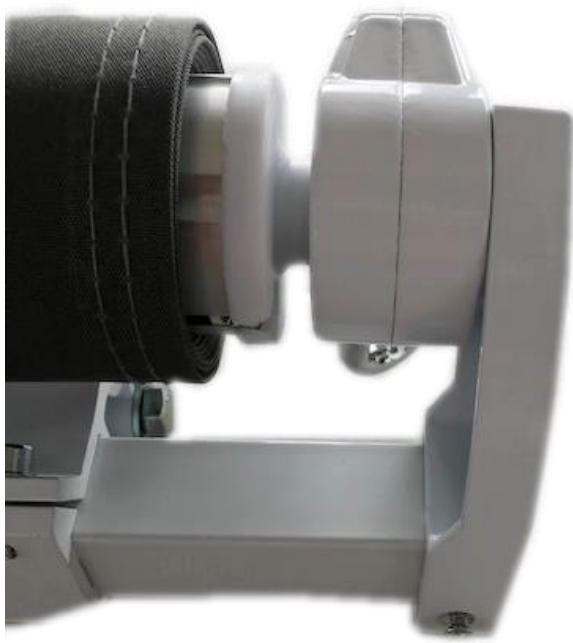


	Fix arm-brackets onto the front rail
	Connect the awning-arms with the holders
	

	Fix the holders
	That's how it should look like after finishing assembly
	Put on the side cover





Fix the arms

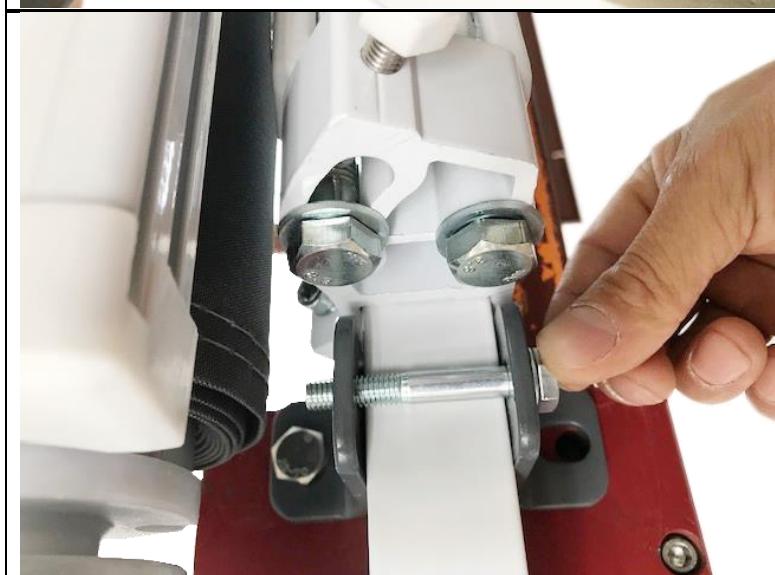

Install the awning onto the brackets
priorly mounted onto your wall





Fix the spirit level in the middle



Align and fix the arms

Installation-videos and further instructions

for our products can be found on

www.gartenmoebelkauf.de

Username: jet-line • Password: user2011

Further products for your garden

can be found on

www.gartenmoebelkauf.de

KBW Trading GmbH

Gewerbering 2

88518 Herbertingen

Germany

Phone: 07586-921160

Fax: 07586-9211616

E-Mail: info@jet-line.de

www.gartenmoebelkauf.de

