




VOLLKASSETTEN-MARKISE „SUNLIVE“

Artikel-Nr. 2337 / 2338 (4,0 x 3,0 m)

Artikel-Nr. 2339 / 2349 (5,0 x 3,0 m)

- MONTAGE- & BEDIENUNGSANLEITUNG -

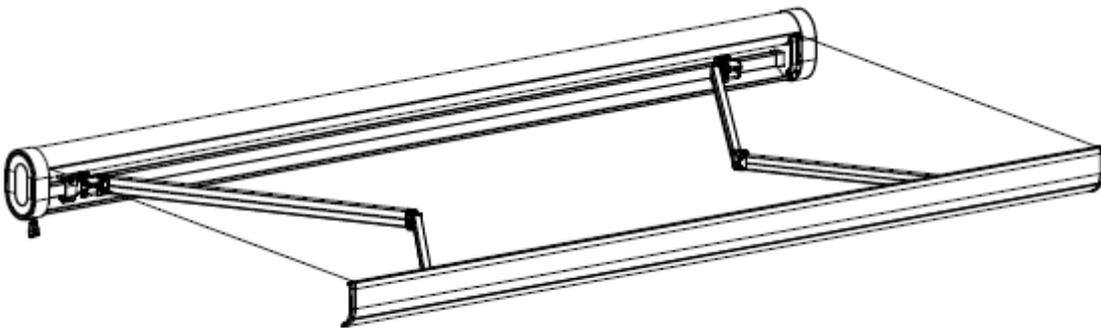

ACHTUNG: Lesen Sie diese Anleitung vor der Installation und Inbetriebnahme unbedingt komplett durch und bewahren sie gut auf. Markisen sind ein Sonnenschutz und dienen nicht als Regenschutz, diese müssen zwingend bei Wind eingefahren werden. Bitte prüfen Sie mit einem Fachmann vor Ort welche Art der Befestigung bei Ihrer Wand benötigt wird. Die mitgelieferten Dübel sind nicht für jeden Wandtyp geeignet. Für falsche Befestigungen, fehlerhafte Montage oder Wind / Sturmschäden übernehmen wir keine Haftung.




A: 1 Stück




B: 1 Stück



C: 1 Stück

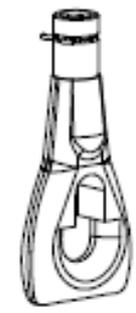

D: 1 Stück

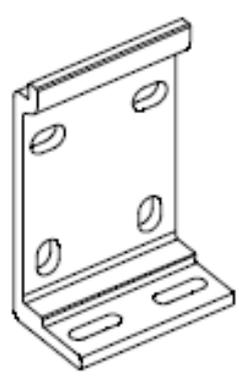

E:
4 x 3 m: 3 Stück
5 x 3 m: 4 Stück




G: 1 Stück



E:
4 x 3 m: 6 Stück
5 x 3 m: 8 Stück




F:
4 x 3 m: 12 Stück
5 x 3 m: 16 Stück

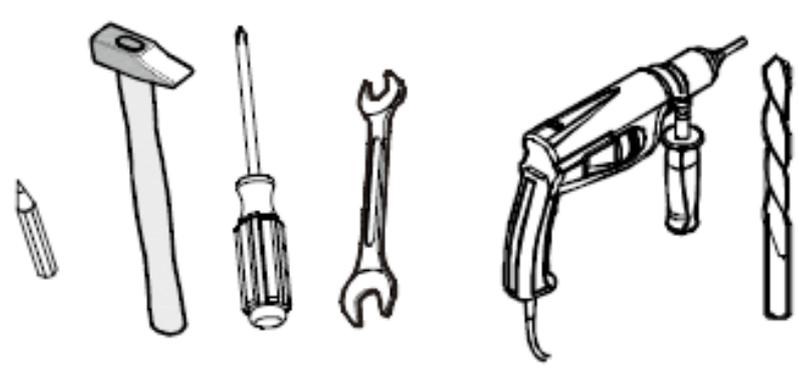

12

1. Installieren des Rings

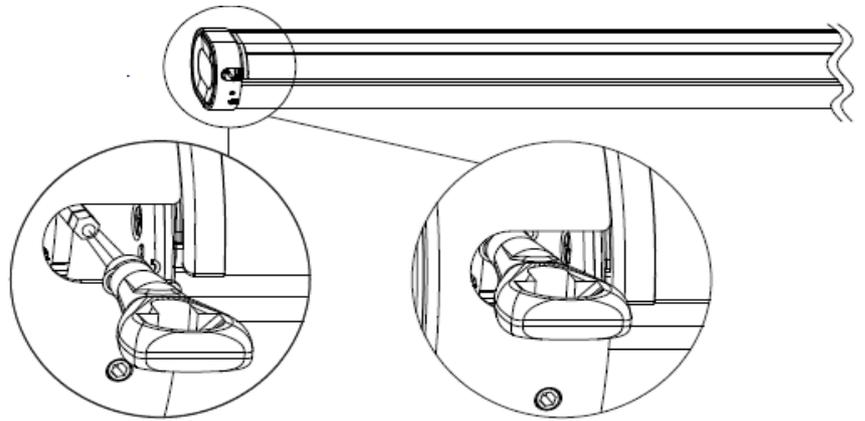


2. Positionieren der Wandhalter:


Achtung: Zur optimalen Positionierung der Wandhalter ist im Lieferumfang Ihrer Markise ein Montageaufkleber für die 4- bzw. 5 Meter-Markise enthalten. Bitte bringen Sie diesen Montageaufkleber gerade (im Wasser) an Ihrer Hauswand an. Bohren Sie dann die Löcher für die Wandhalter an den markierten Stellen.

Wichtig: Wenn die Bohrlöcher für die Wandhalterung nicht an der festgelegten Stelle sitzen, kann dies dazu führen, dass die Markise nicht richtig schließt. Es ist deshalb wichtig, dass dies bei der Montage exakt eingehalten wird.


4 x 3 m

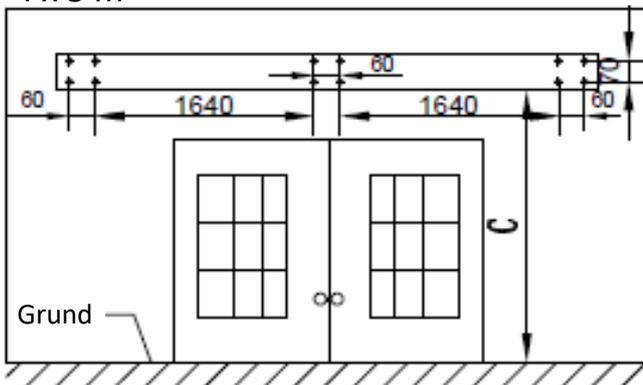


5 x 3 m

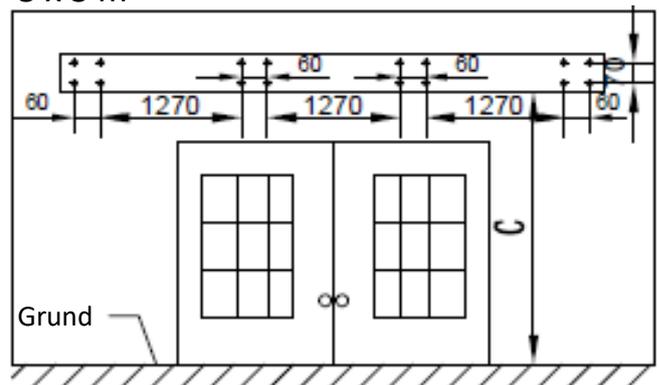


3. Bohren der Löcher

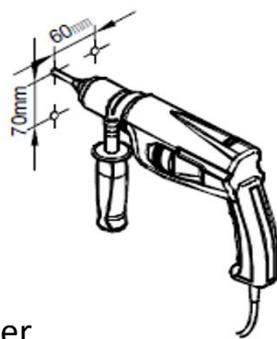

4. Installieren der Halter

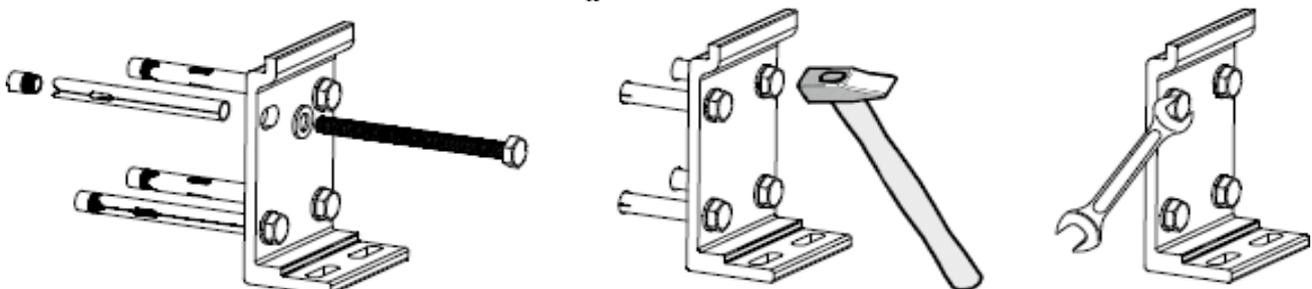



5. Mögliche Fehlerquellen bei der Installation der Halter:

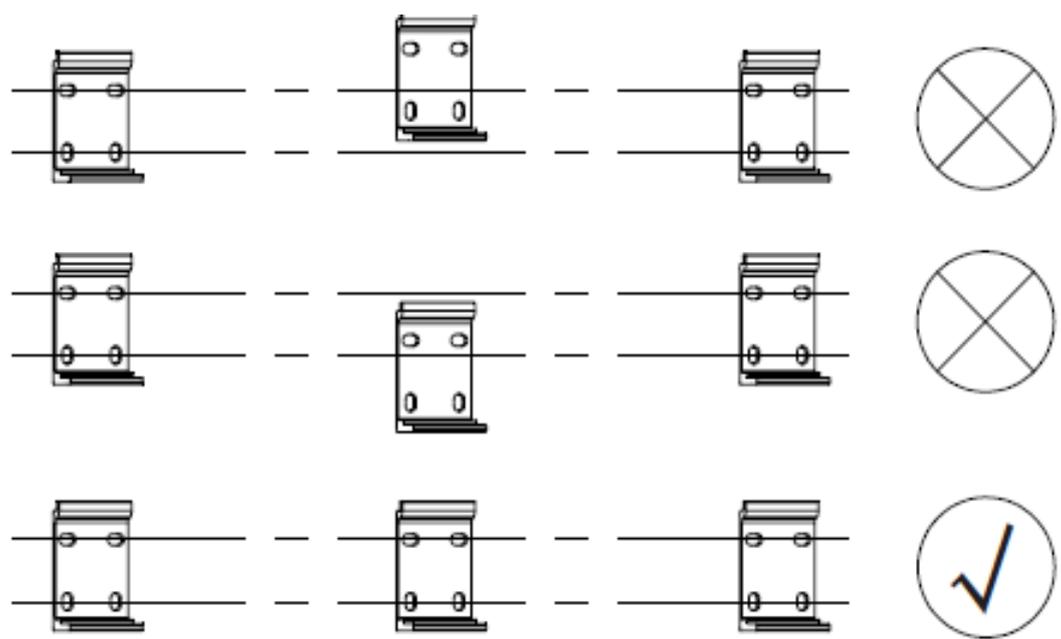


Zur Fehler-Vermeidung verwenden Sie bitte unbedingt die **Montageaufkleber** wie auf Seite 3 unter Punkt 2 (Positionieren der Wandhalter) beschrieben.

6. Aufbau immer zu zwei durchführen

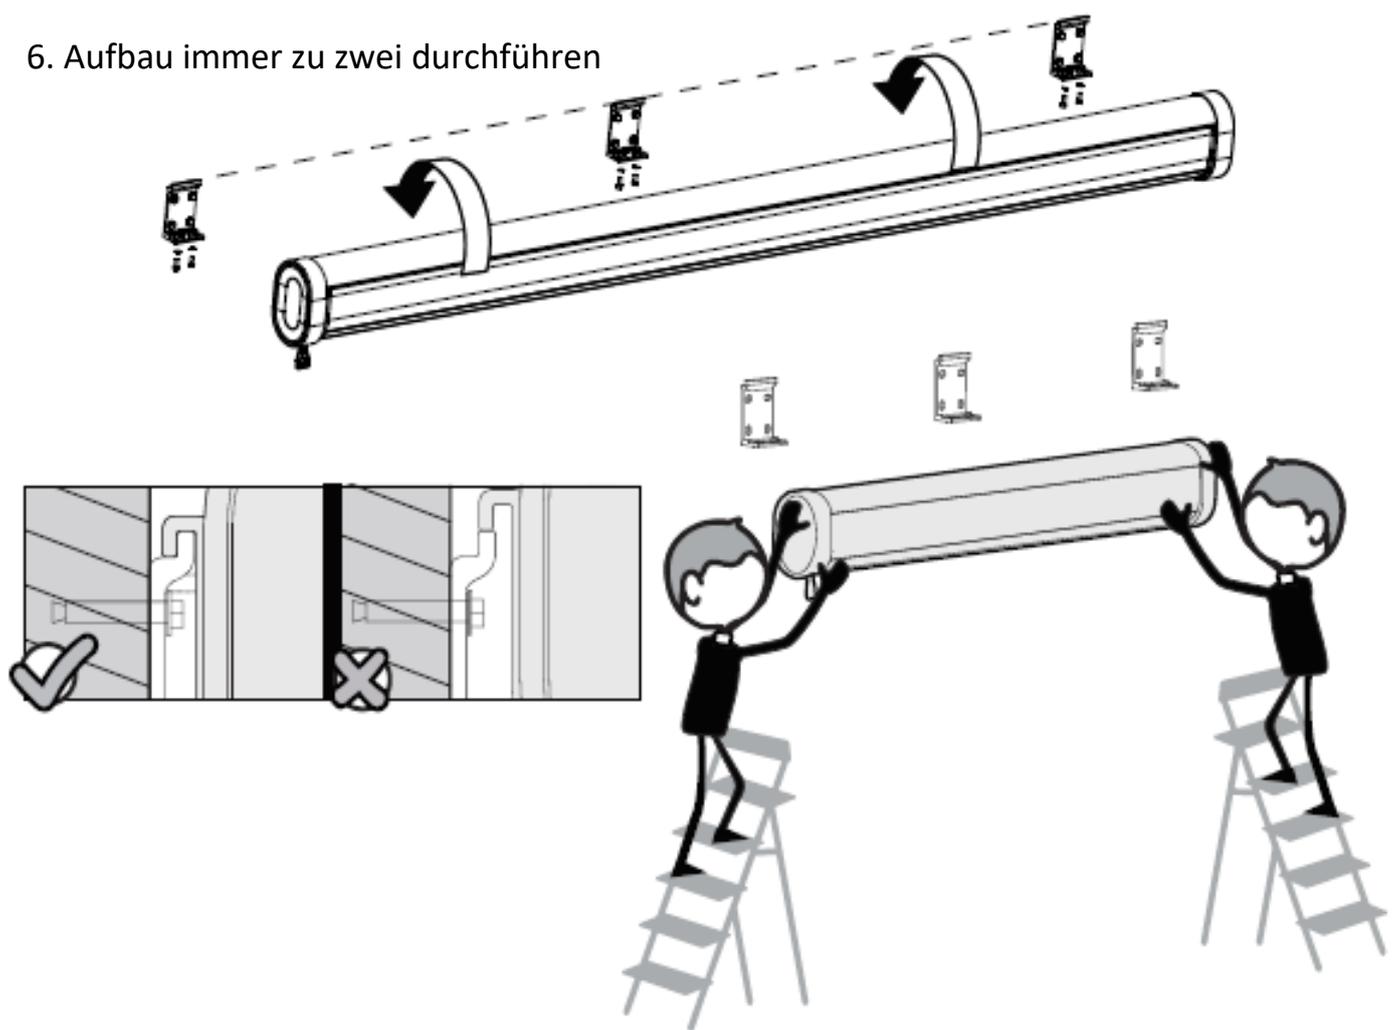


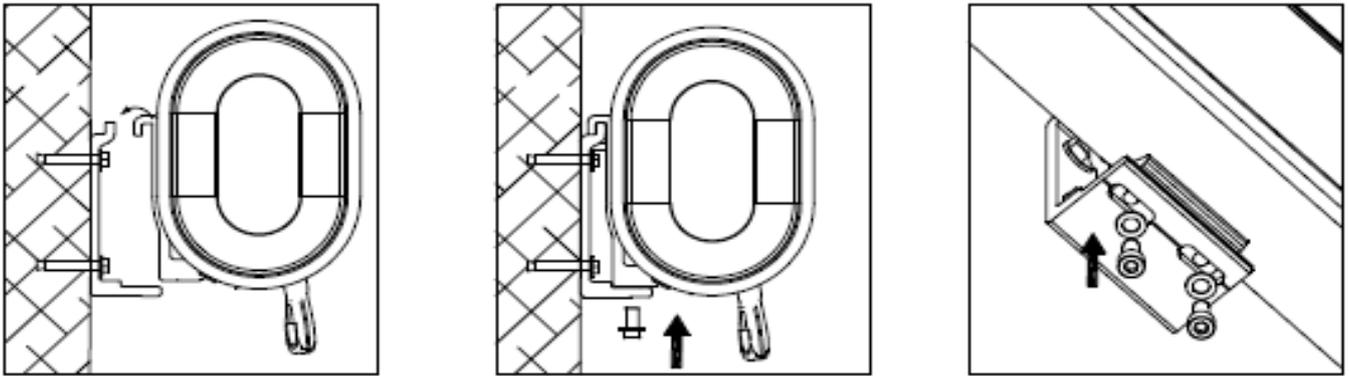










7. Inbetriebnahme / Zuführen von Strom

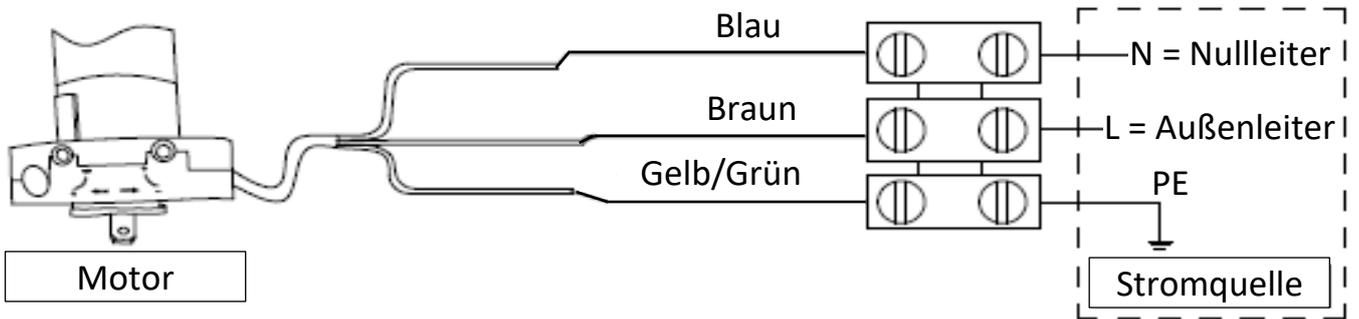



8. Fernbedienung

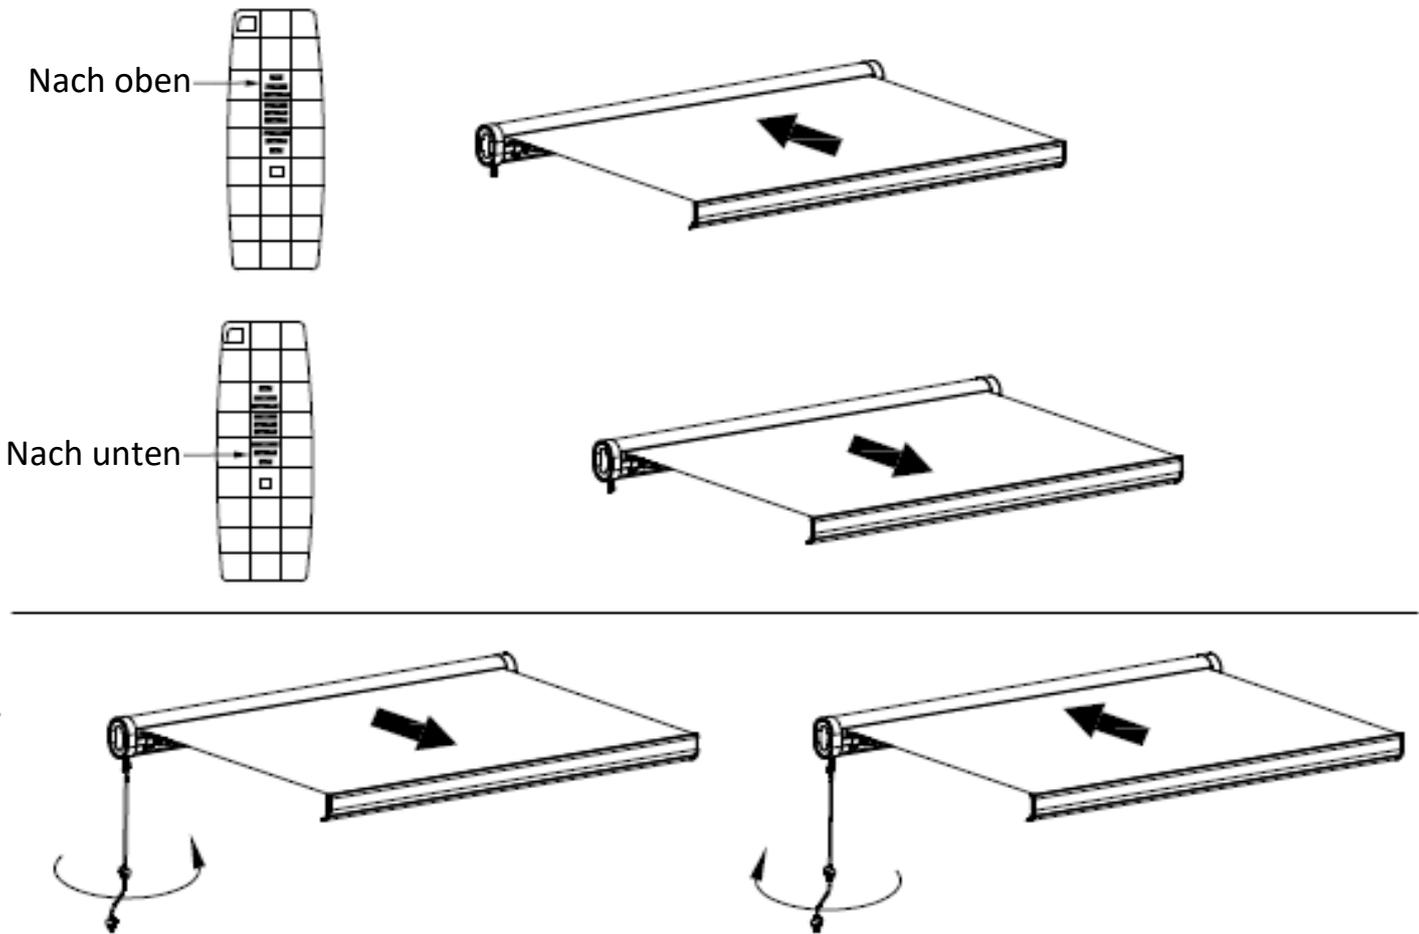

9. Justieren des Front-Profils

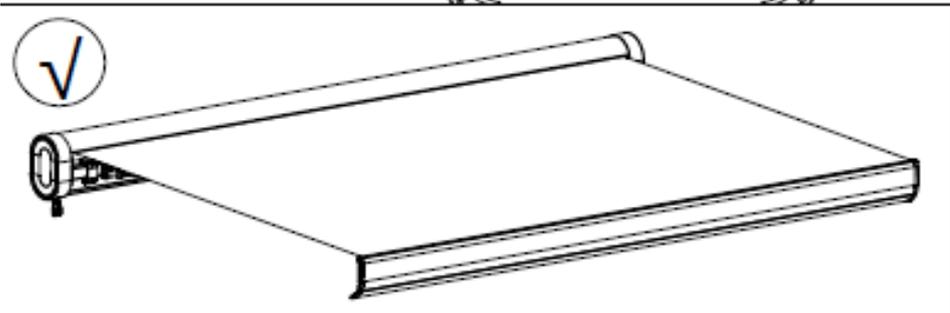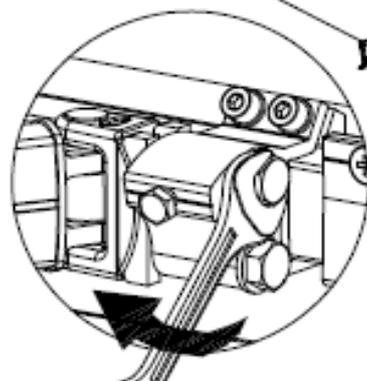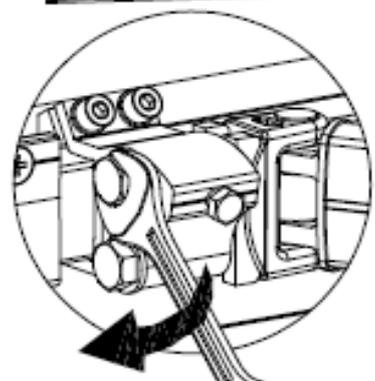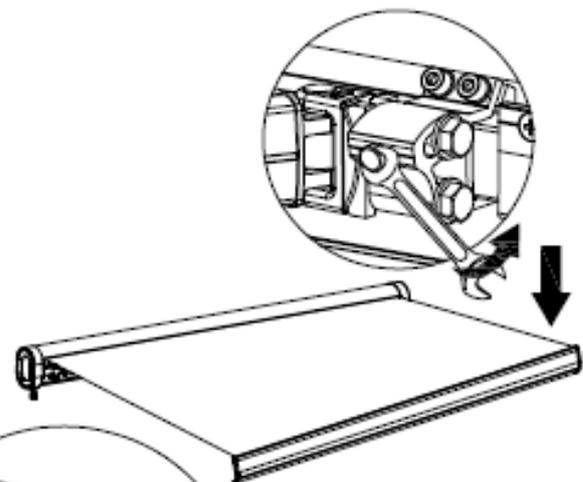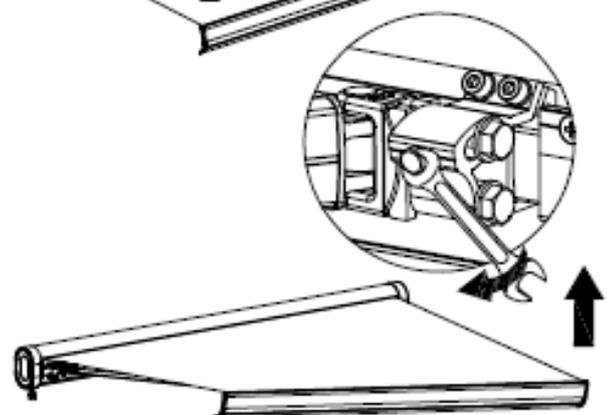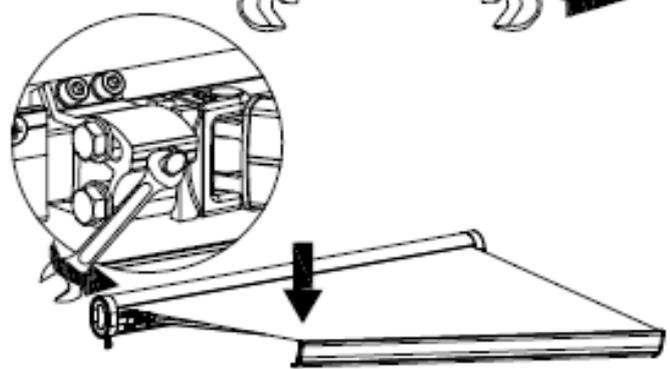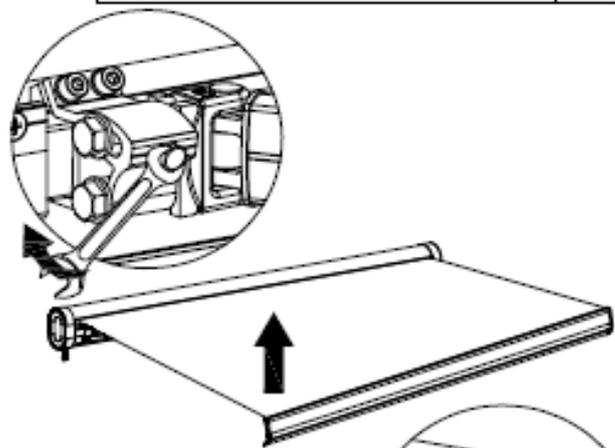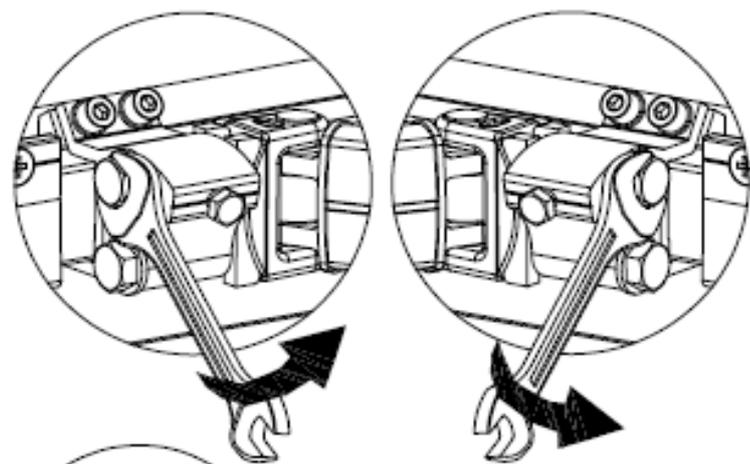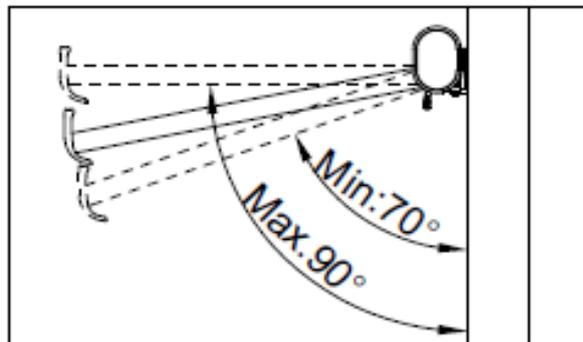

10. Abstands-Regulierung

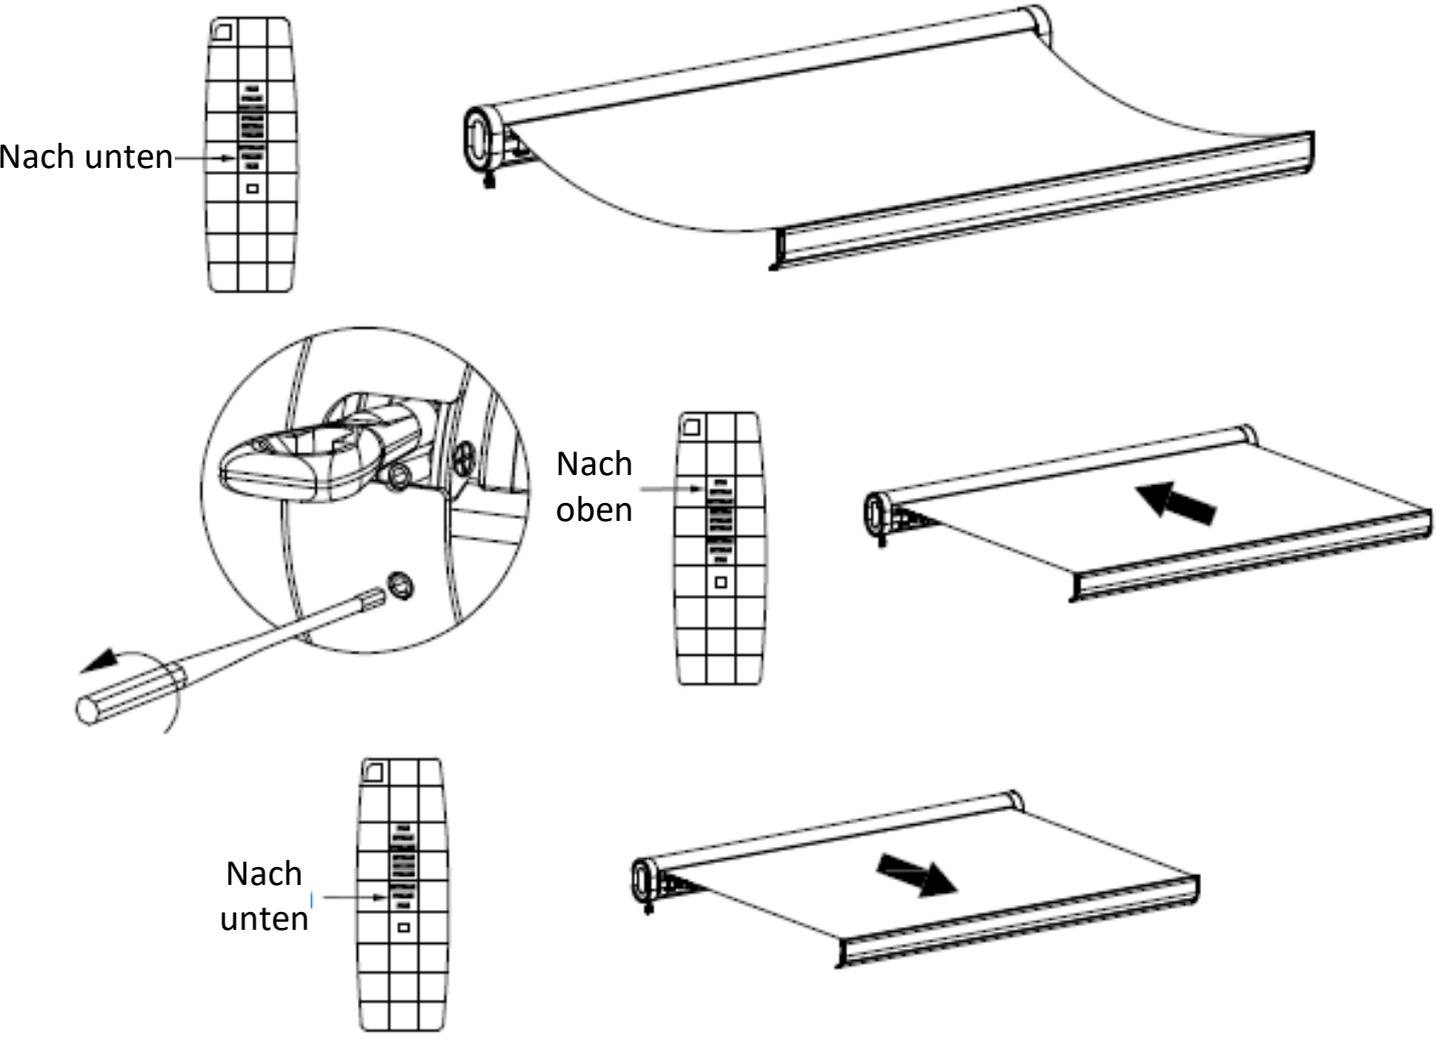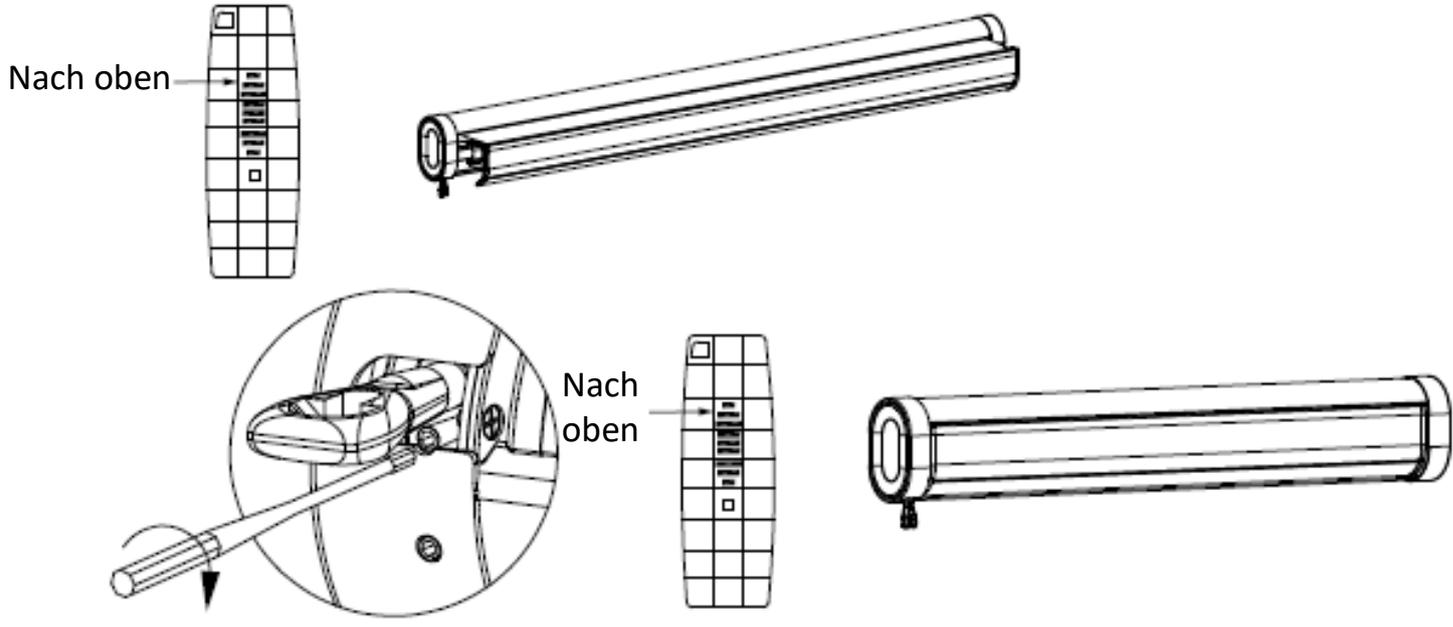

Installationsvideos und Aufbauanleitungen

Zu unseren Produkten finden Sie unter

www.gartenmoebelkauf.de

Nutzername: jet-line • Passwort: user2011

Weitere Produkte für Ihren Garten

finden Sie unter

www.gartenmoebelkauf.de



KBW Trading GmbH

Gewerbering 2

88518 Herbertingen

Deutschland

Telefon: 07586-921160

Fax: 07586-9211616

E-Mail: info@jet-line.de

www.gartenmoebelkauf.de




MOTORIZED CASSETTE AWNING „SUNLIVE“

Article-No. 2337 / 2338 (4,0 x 3,0 m)

Article-No. 2339 / 2349 (5,0 x 3,0 m)


- INSTALLATION & USER MANUAL -

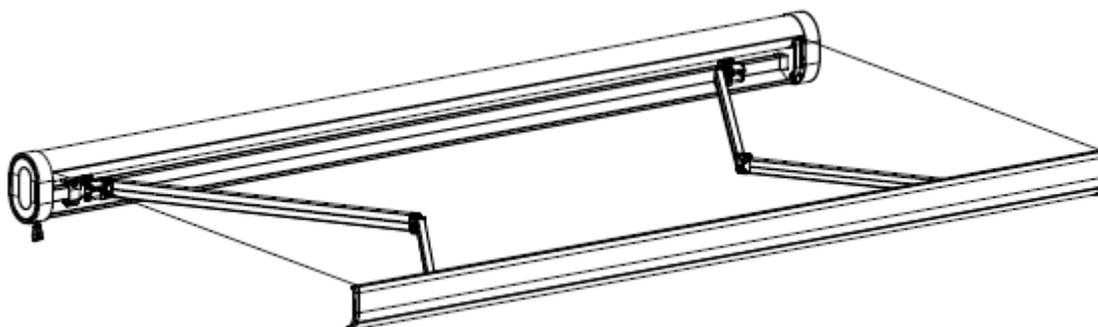

WARNING: Please read this instruction carefully prior to installation and follow it exactly. Save your manual well for future reference. Awnings are solely intended for sun- (NOT rain-) protection. Please make sure to retract the roof in rainy/windy conditions. Check with an on-site expert how the awning needs to be fixed on your wall. The anchors included with delivery are not necessarily suitable for every wall-type. We cannot be held liable for incorrect installation or weather-caused damage.



A:1pcs

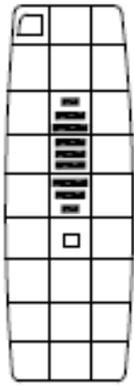


B:1pcs



C:1pcs



D:1pcs

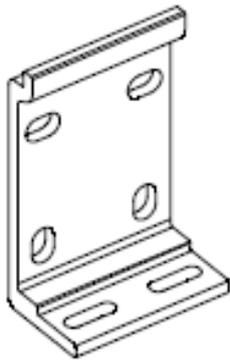

E:
4x3m:3pcs
5x3m:4pcs




G:1pcs



E:
4x3m:6pcs
5x3m:8pcs




F:
4x3m:12pcs
5x3m:16pcs

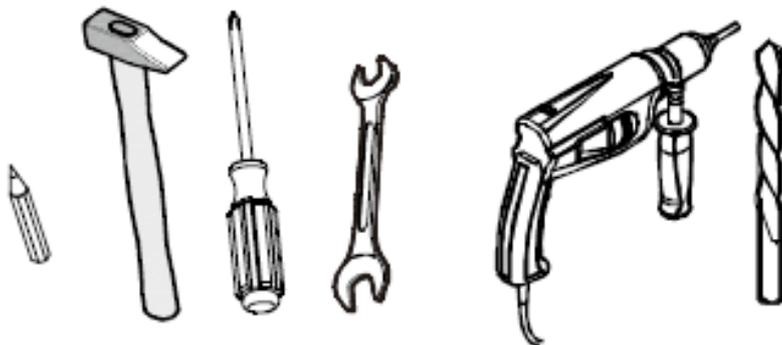

12

1. Installing the ring

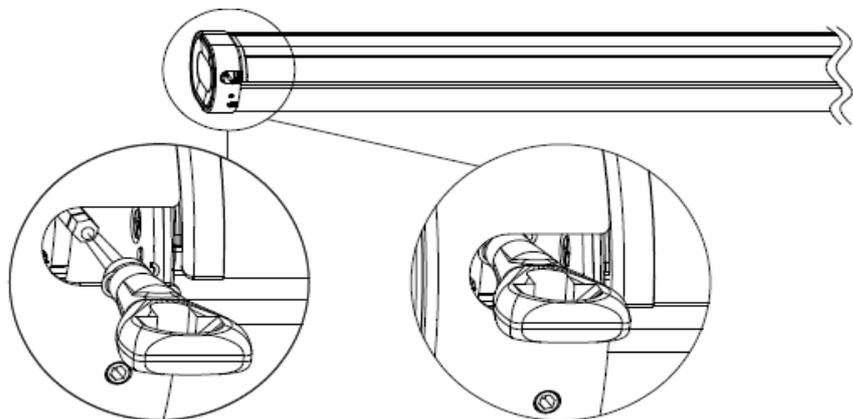


2. Positioning the wall brackets


Important Note: For positioning your wall brackets your awnings' scope of delivery includes a fitting template for 4- / 5-meter awnings. Please fix the adhesive straight (level) on your wall, then drill the holes for the brackets at the marked position.

Important Note: If the drilling-holes for the wall brackets are not in the right position, this might keep the awning from closing correctly. Therefore it is inevitable that you stick exactly to the prescribed position.


4 x 3 m

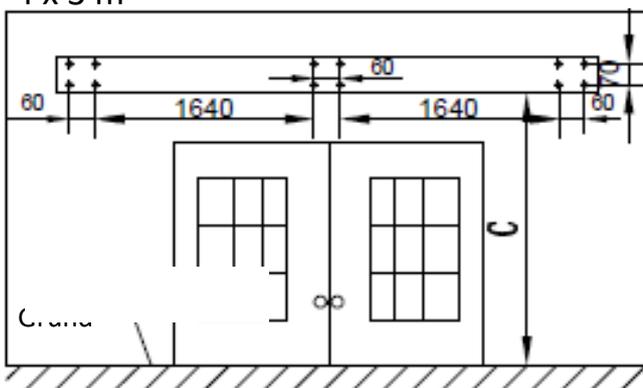


5 x 3 m

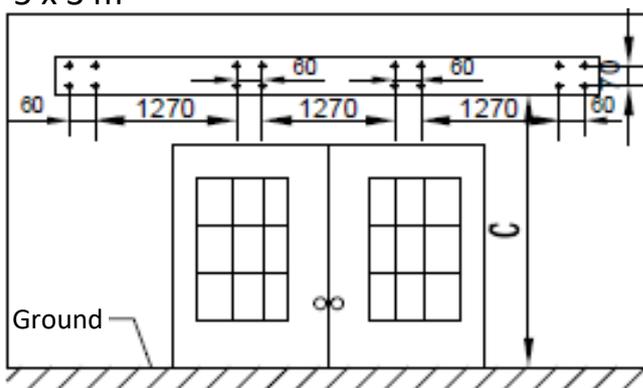


3. Placing the drilling holes

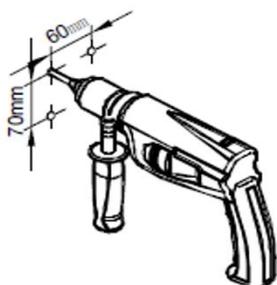

4. Installing the brackets

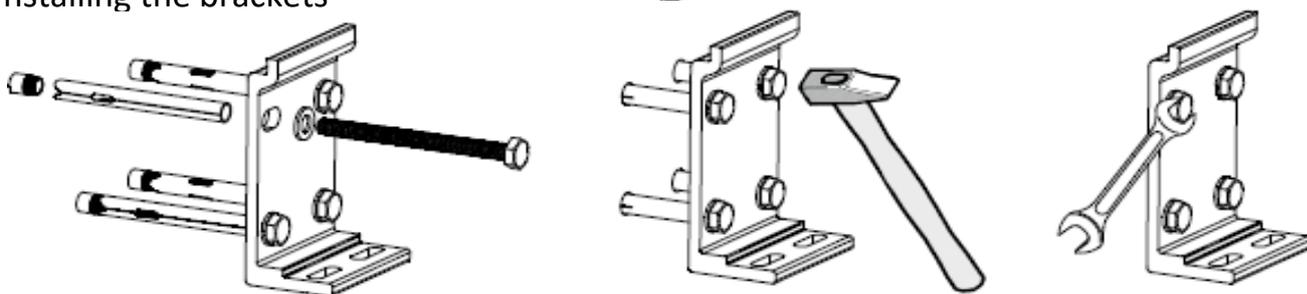





5. Please avoid the following possible error sources when you install the brackets

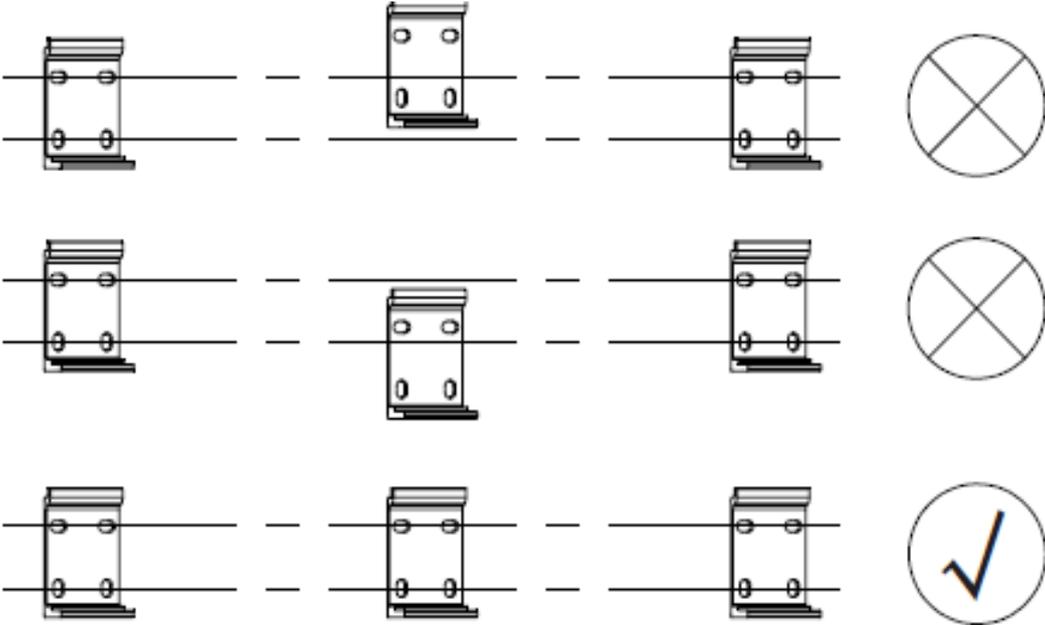


To avoid problems due to incorrect positioning, please make sure to use the **Adhesive fitting templates** as described on page 11, step 2 (Positioning the wall brackets)

6. It takes at least 2 people to install the awning






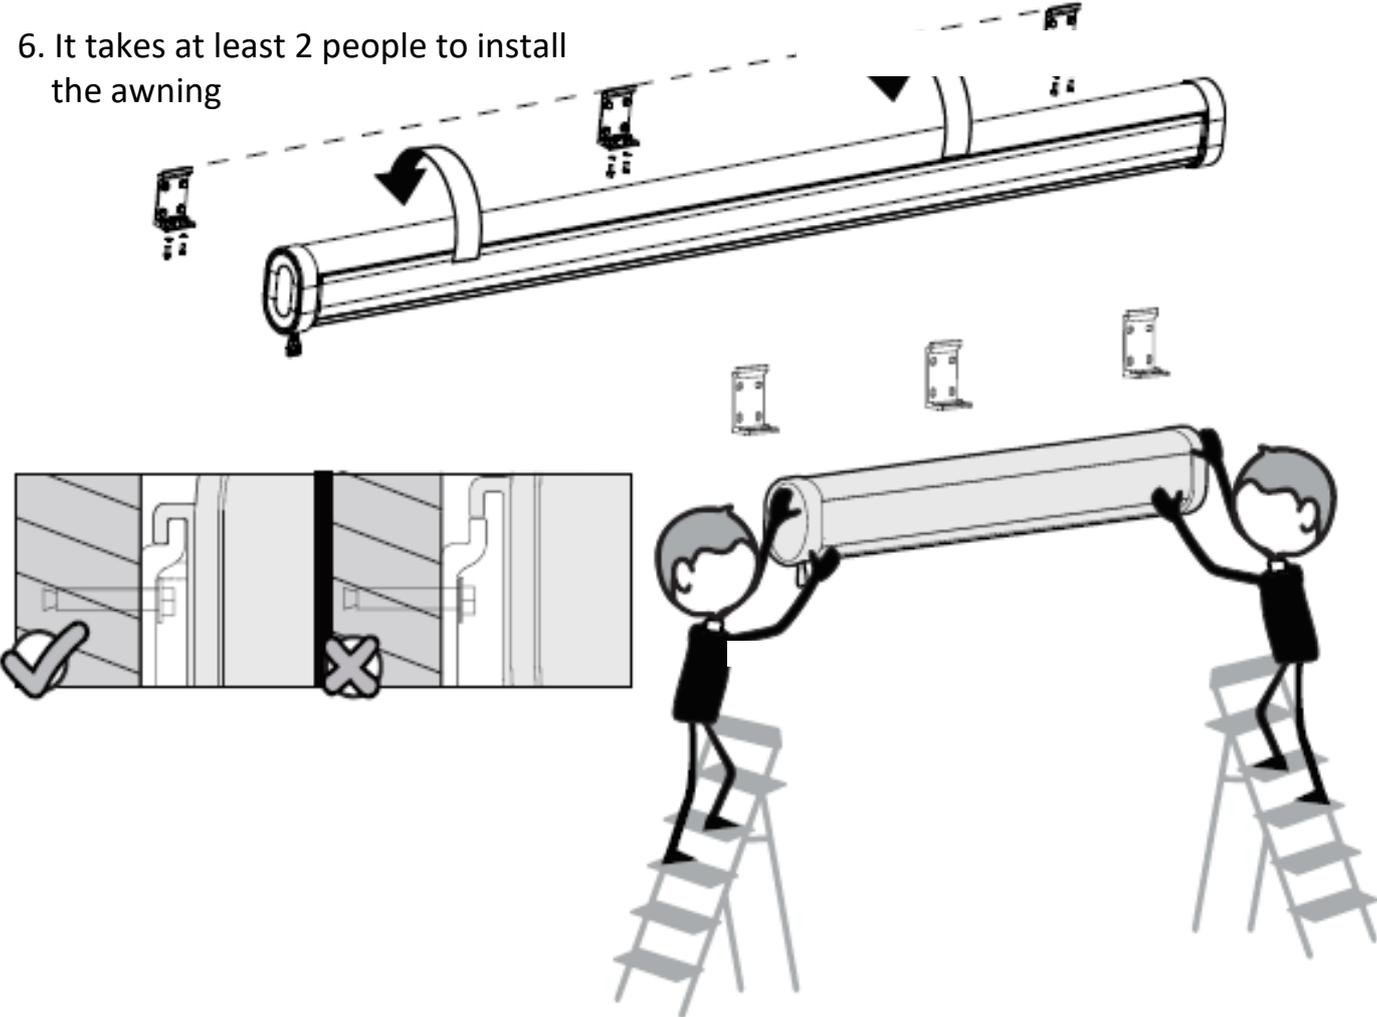


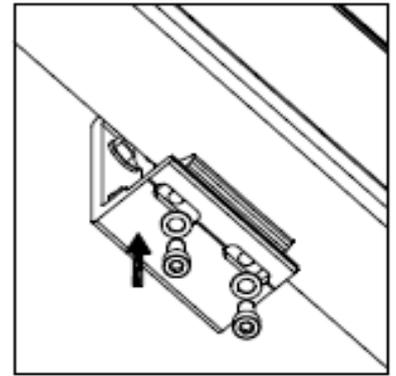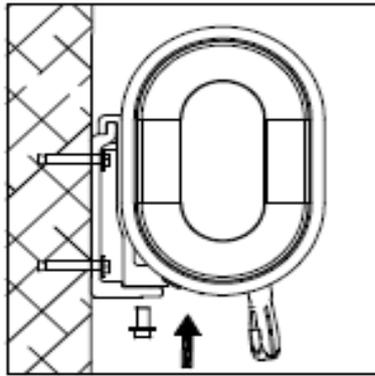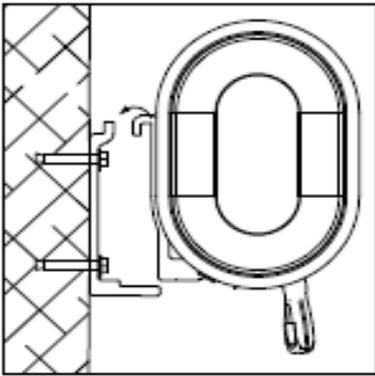










7. Switchin on power_

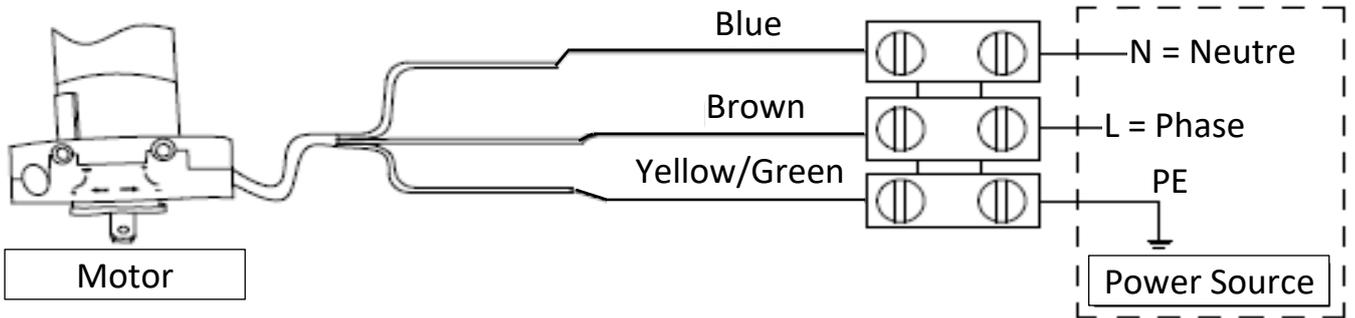



8. Remote Control

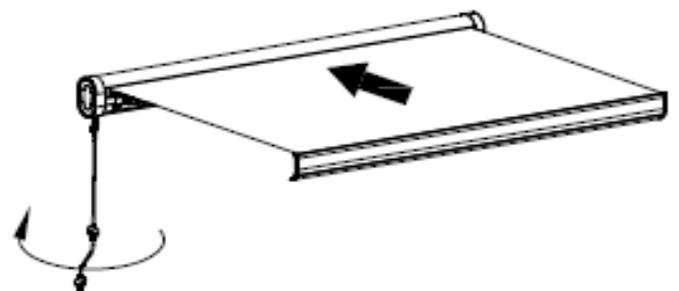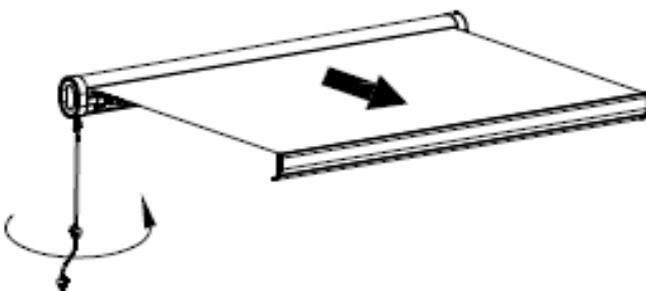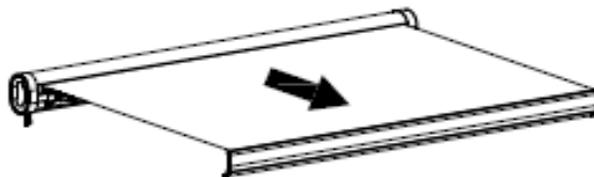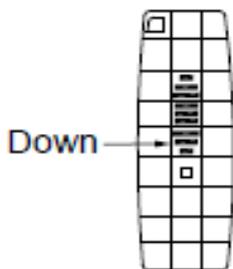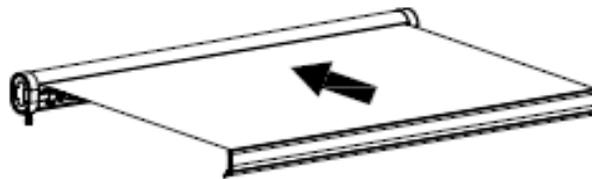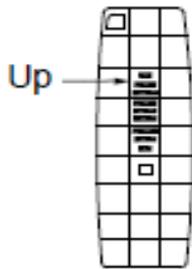

9. Adjusting the front bar

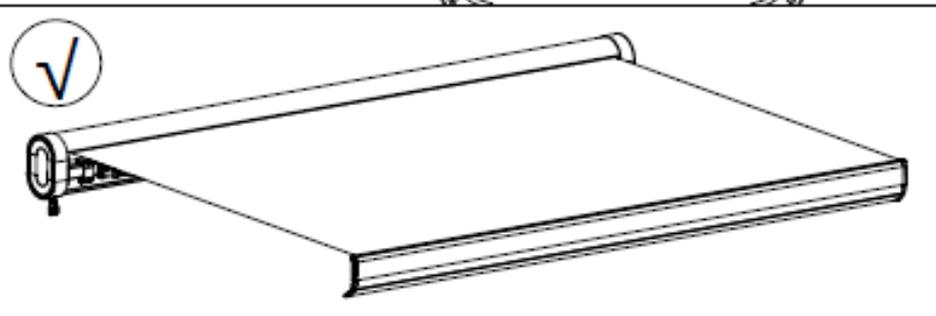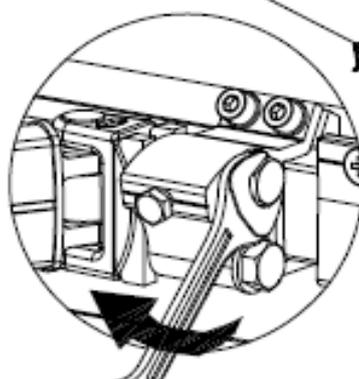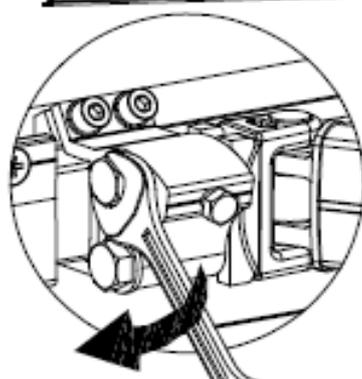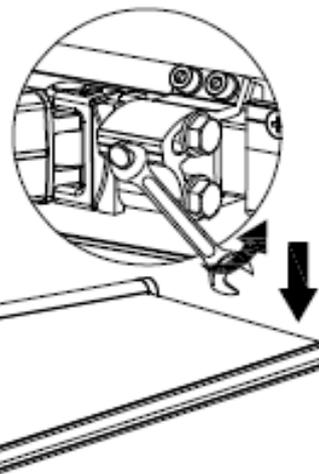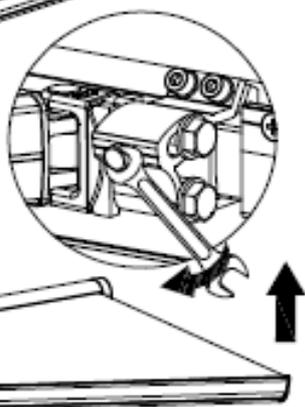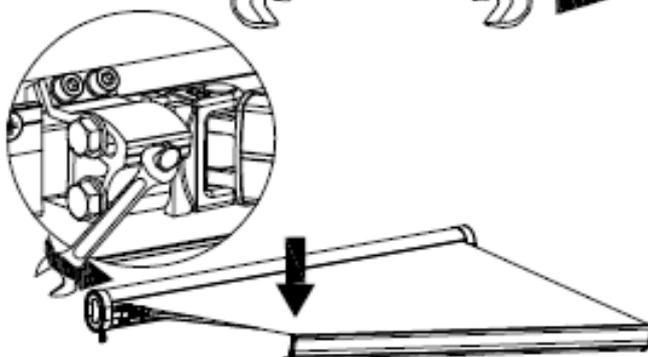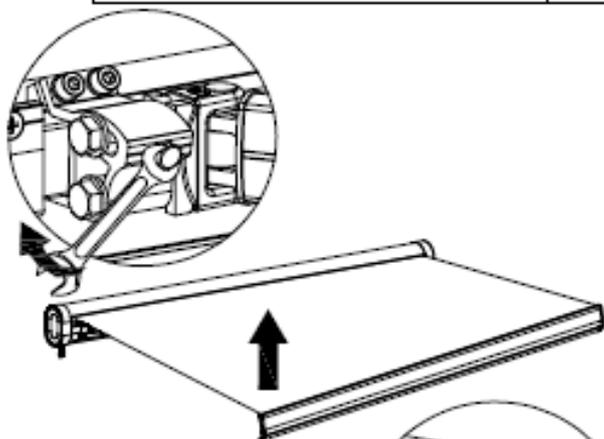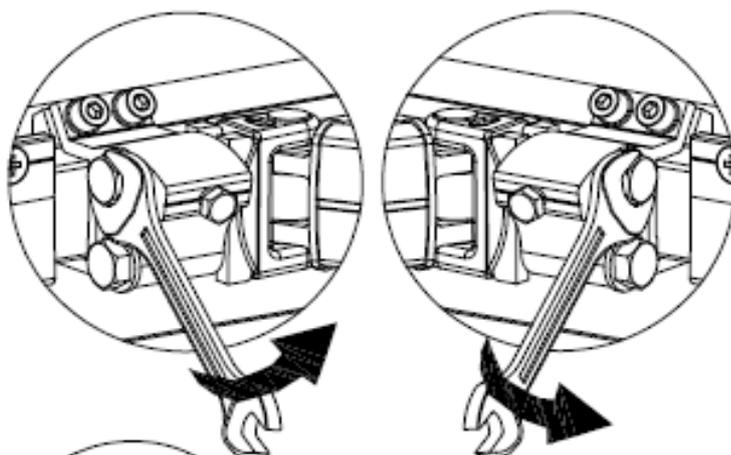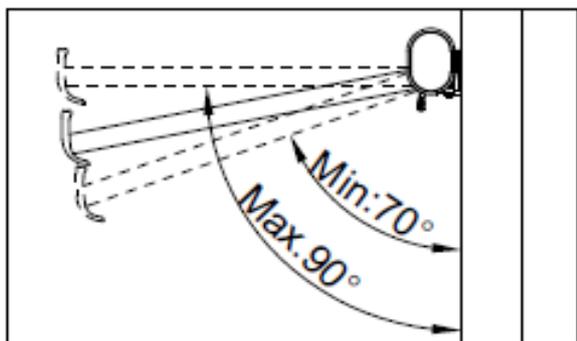

10. Adjusting the distance

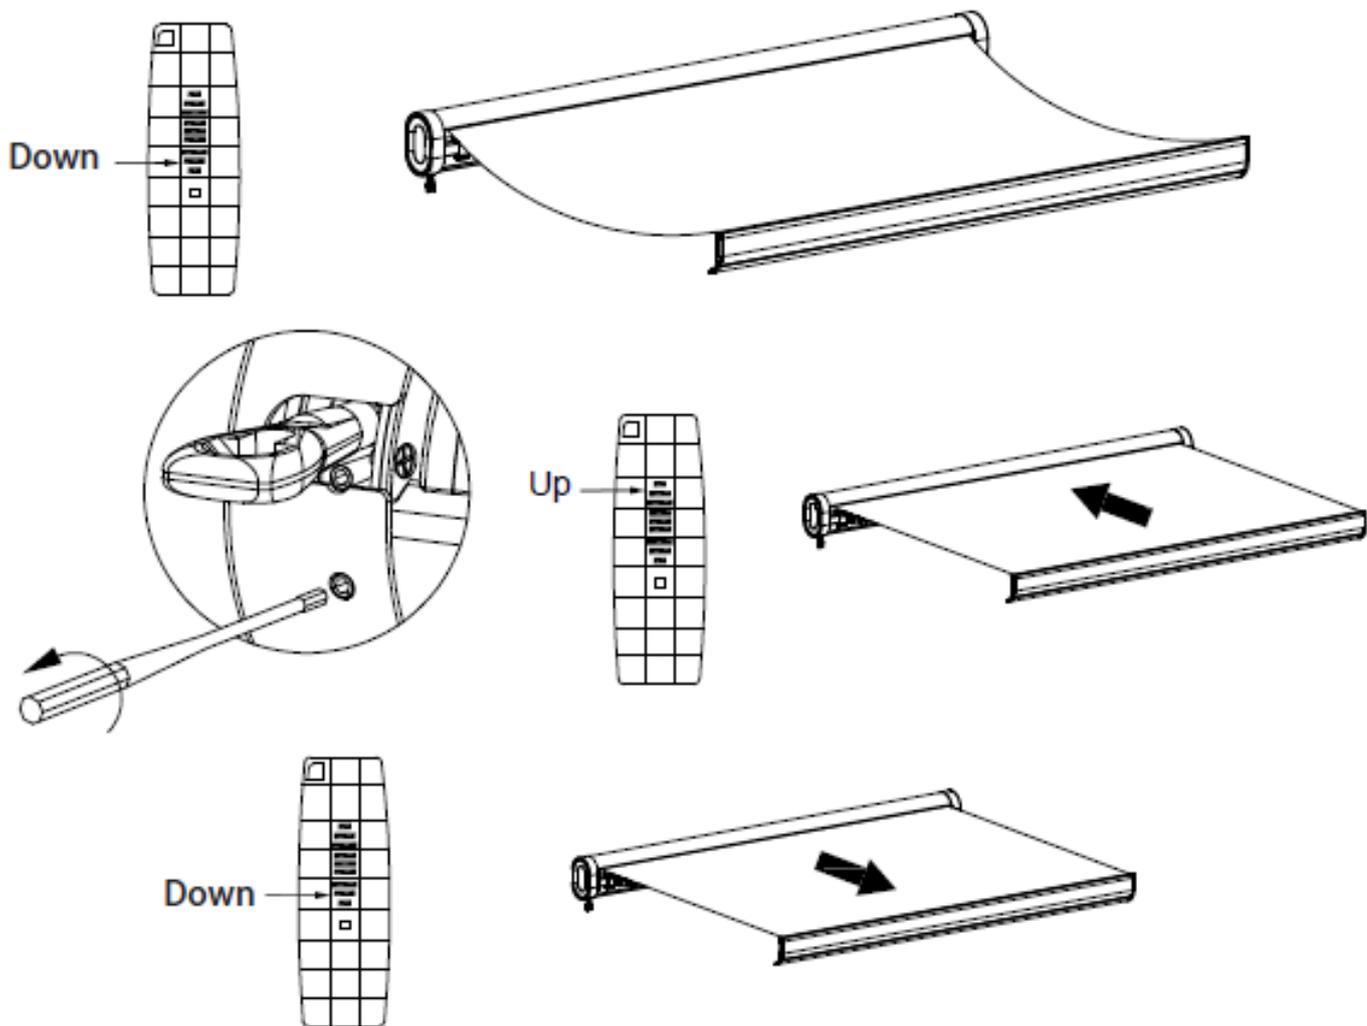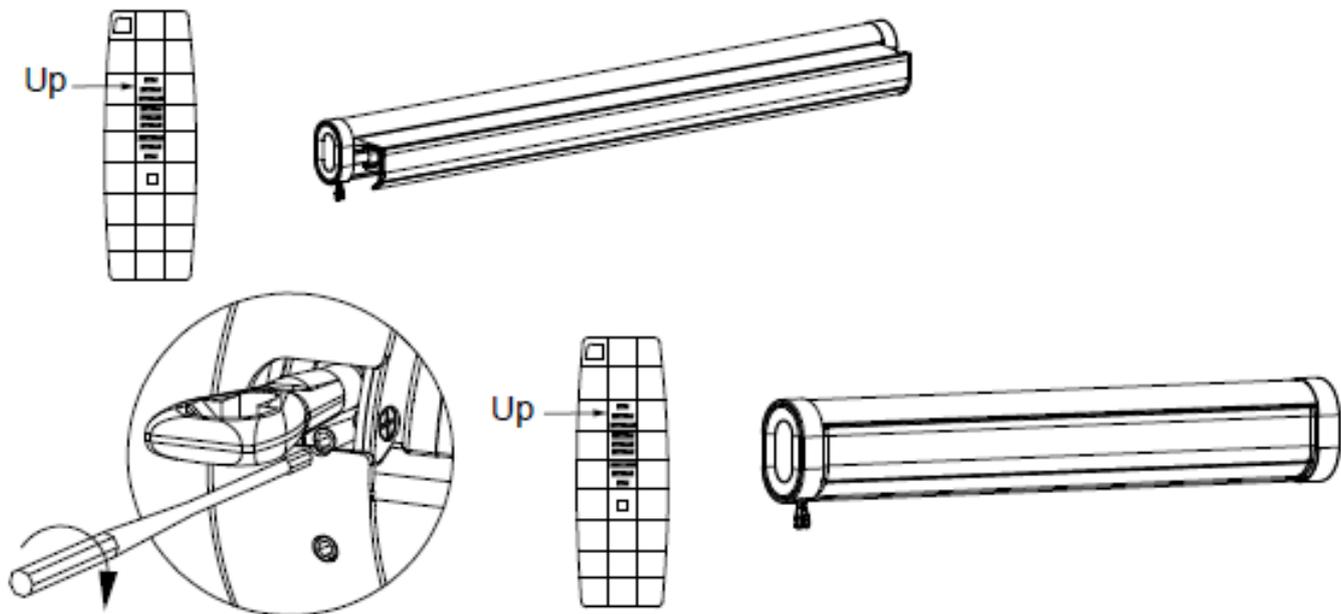

Installation-videos and further instructions

for our products can be found on

www.gartenmoebelkauf.de

Username: jet-line • Password: user2011

Further products for your garden

can be found on

www.gartenmoebelkauf.de



KBW Trading GmbH

Gewerbering 2

88518 Herbertingen

Germany

Phone: 07586-921160

Fax: 07586-9211616

E-Mail: info@jet-line.de

www.gartenmoebelkauf.de

