


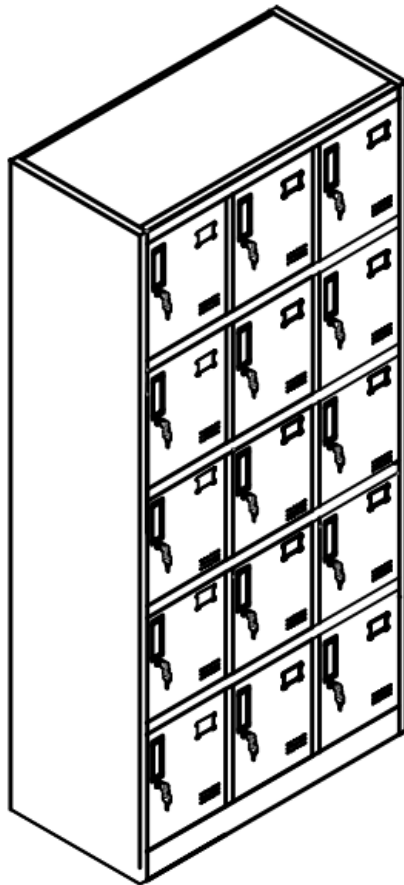

## STEEL CABINET BUDAPEST

Article-No.: 12245, 12249, 12251

- INSTALLATION MANUAL -



**Installation-videos and further instructions**

*for our products can be found on*

[www.jet-line.de](http://www.jet-line.de)


*Username: jet-line • Password: user2011*


**Further products for your office**

*can be found on*

[www.jet-line.de](http://www.jet-line.de)


**Part-List:**

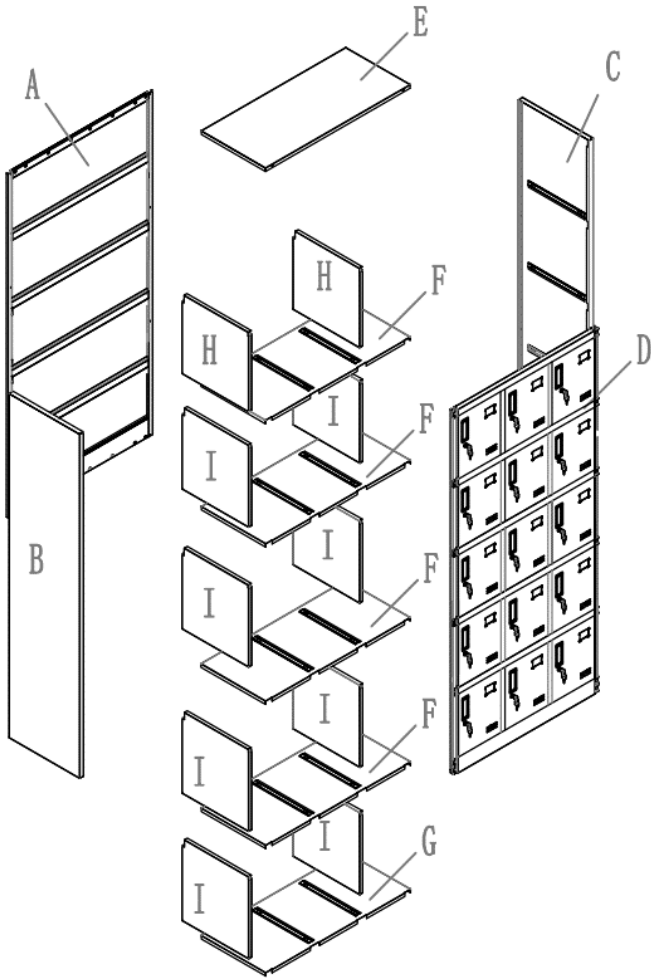

|          |                           |  |
|----------|---------------------------|--|
| <b>A</b> | <b>Rear Panel</b>         | <b>1x</b>  |
| <b>B</b> | <b>Left Side Panel</b>    | <b>1x</b>  |
| <b>C</b> | <b>Right Side Panel</b>   | <b>1x</b>  |
| <b>D</b> | <b>Front Frame</b>        | <b>1x</b>  |
| <b>E</b> | <b>Upper Cover</b>        | <b>1x</b>  |
| <b>F</b> | <b>Intermediate Floor</b> | <b>4x</b>  |
| <b>G</b> | <b>Bottom</b>             | <b>1x</b>  |
| <b>H</b> | <b>Intermediate Wall</b>  | <b>2x</b>  |
| <b>I</b> | <b>Intermediate Wall</b>  | <b>8x</b>  |
| <b>J</b> | <b>Screw</b>              |  <b>18x</b> |


**Instruction:**

**STEP 1**

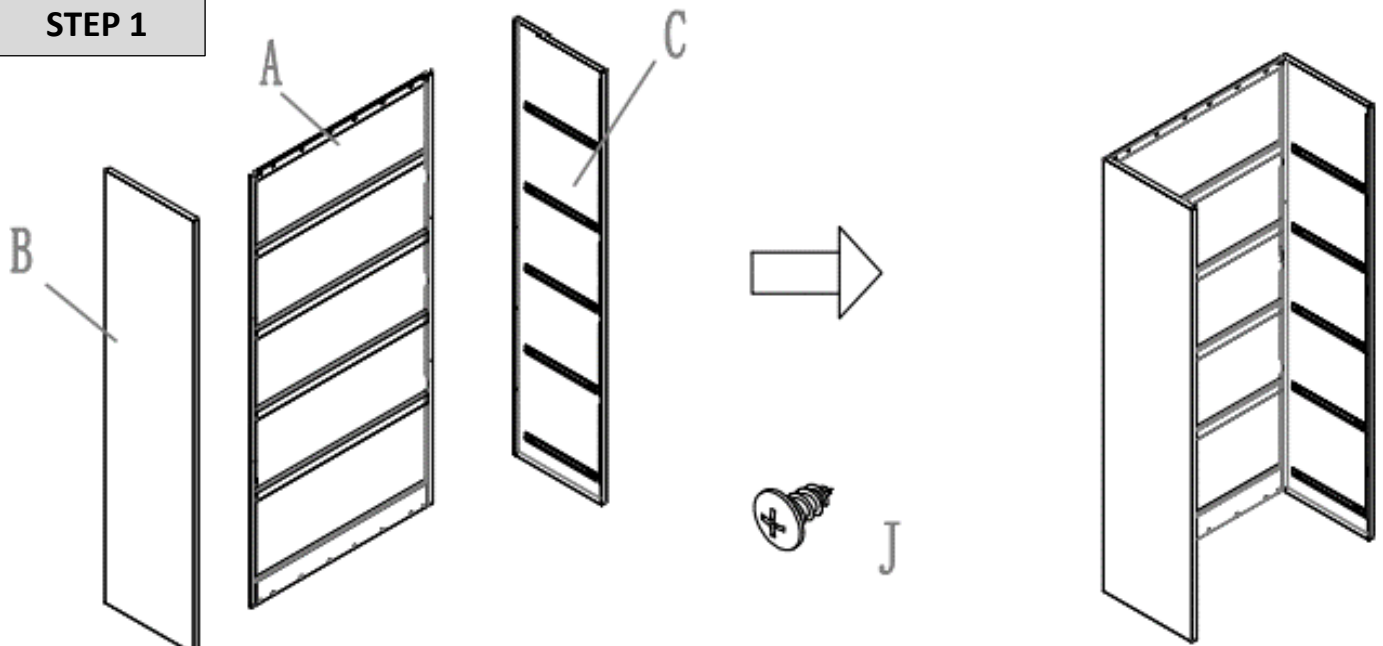


1. Connect parts A, B and C

STEP 2

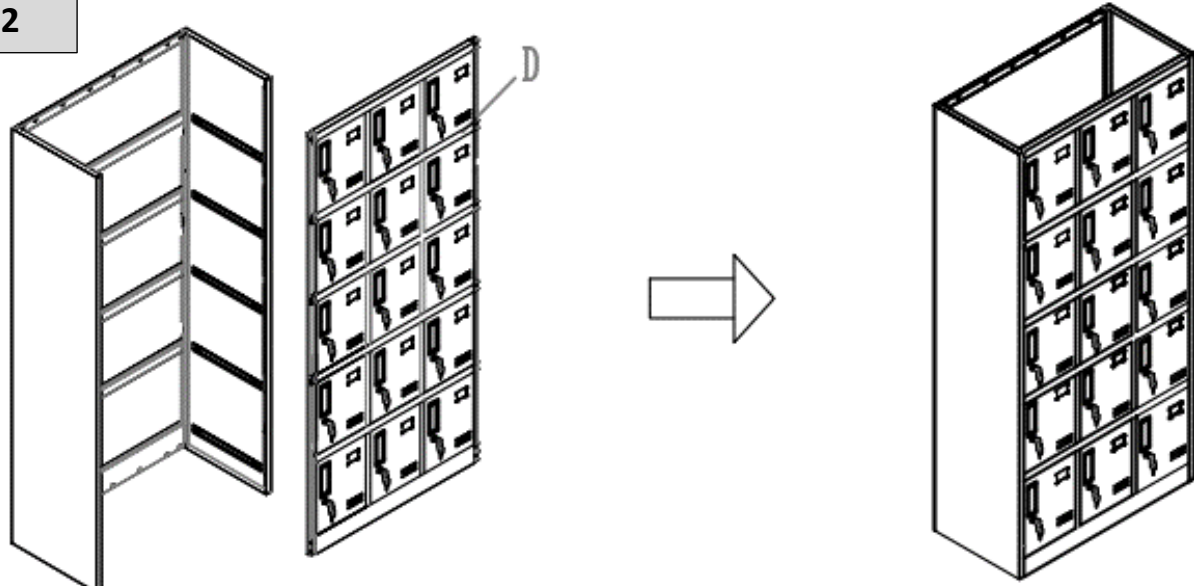


2. Install the Front Frame

STEP 3

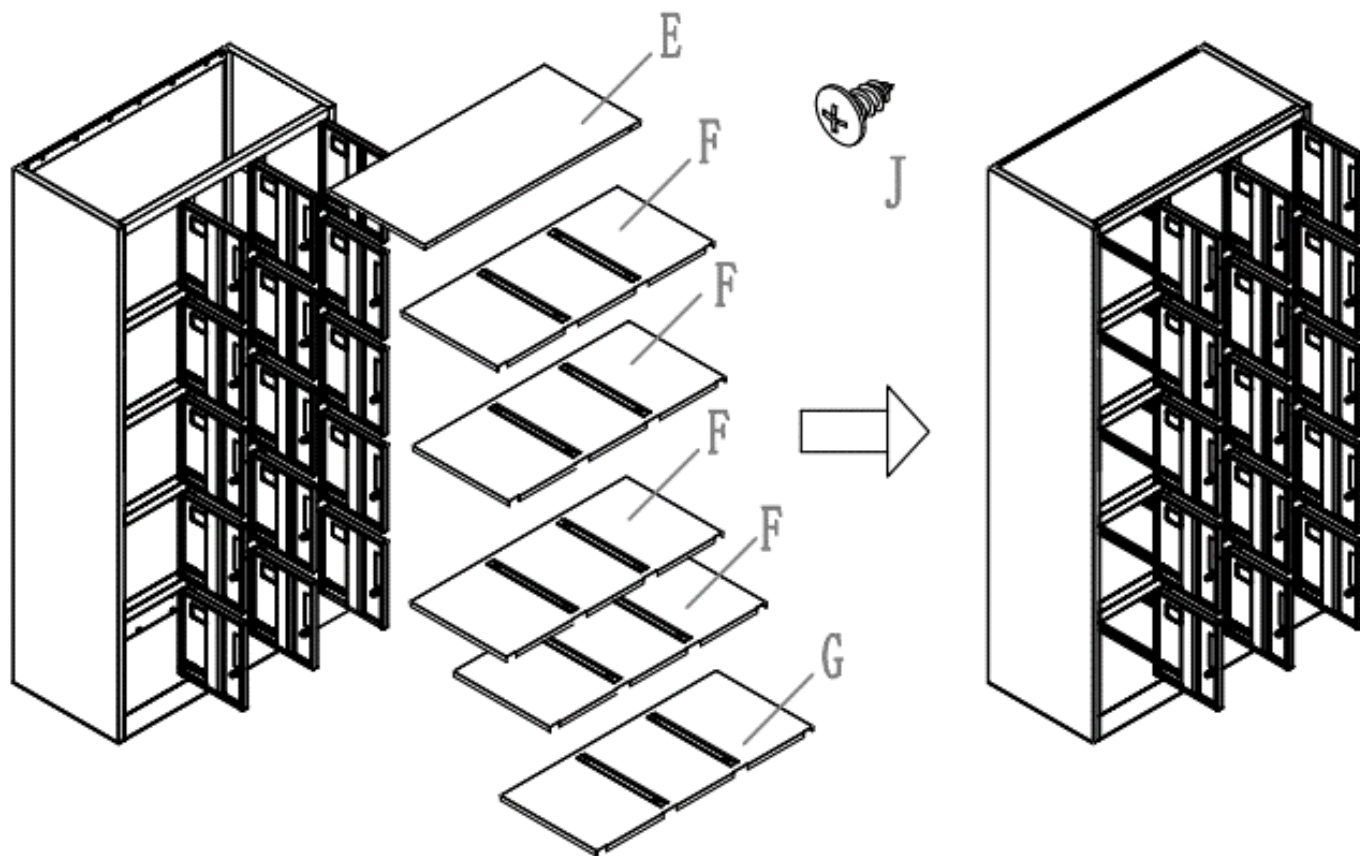


3. Install the Upper cover E, the intermediate Floors F and the Bottom G

STEP 4

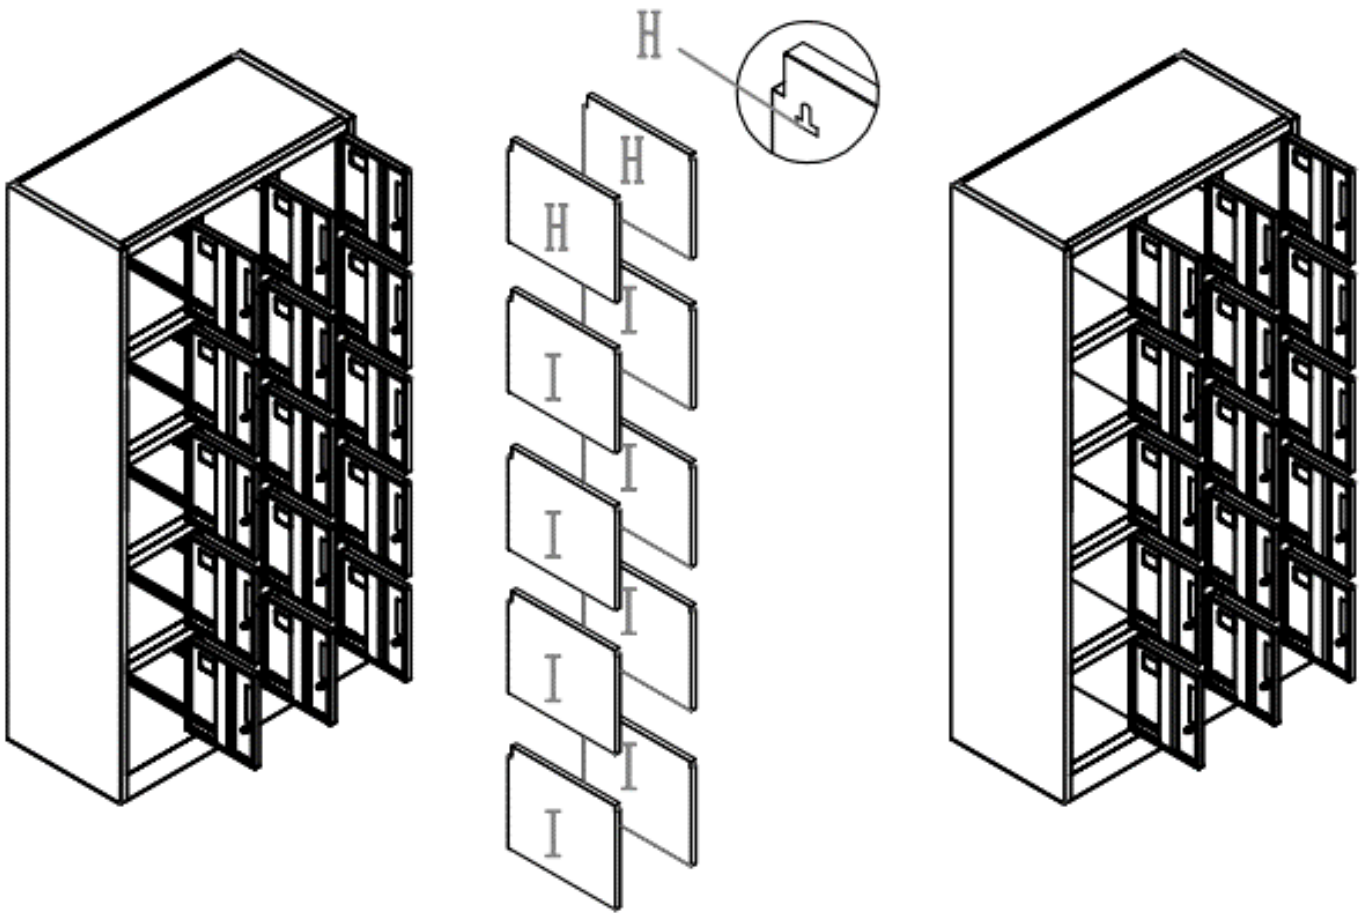

4. Install the Intermediate Walls H and I as shown in the picture

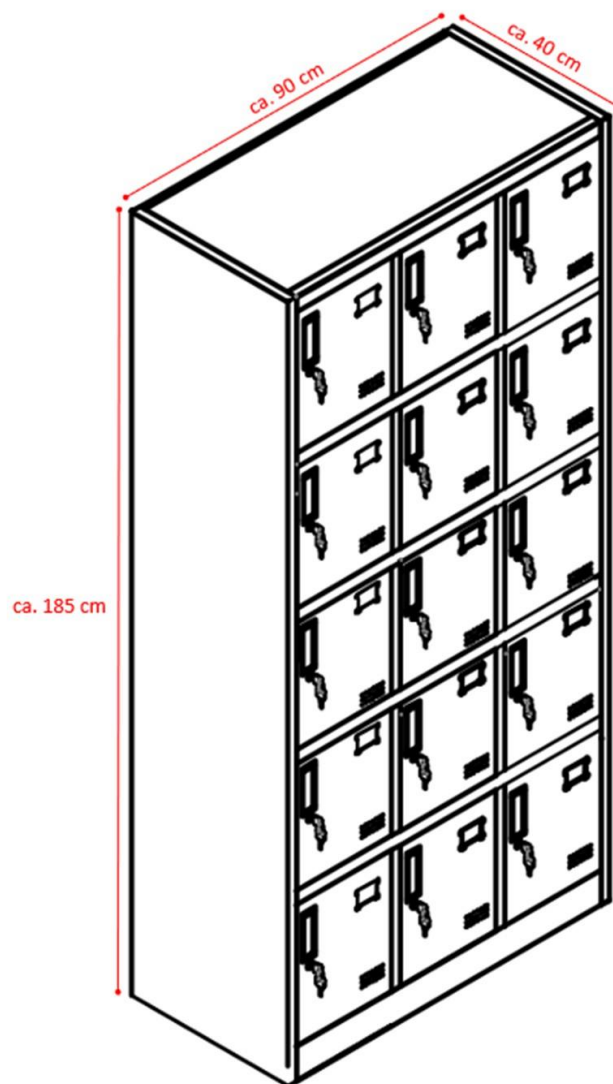

**Installation-videos and further instructions**  
for our products can be found on

[www.jet-line.de](http://www.jet-line.de)

Username: jet-line • Password: user2011

**Further products for your office**

Can be found on

[www.jet-line.de](http://www.jet-line.de)

**Jet-Line**  
group

**KBW Trading GmbH**  
Gewerbering 2  
88518 Herbertingen  
Deutschland  
Tel: 07586-921160  
Fax: 07586-9211616  
E-Mail: [info@jet-line.de](mailto:info@jet-line.de)  
[www.office-shopping.eu](http://www.office-shopping.eu)

**Jet-Line**  
group