



STEEL CABINET KIEW

Article-No.: 12230, 12231, 12232

- INSTALLATION MANUAL -



Installation-videos and further instructions

for our products can be found on

www.jet-line-e-trade.de

Username: jet-line • Password: user2011

Further products for your office


Can be found on




<https://office-shopping.eu>

Product-Code:
Product-Dimension

12230 (dark gray), 12231 (dark gray-white), 12232 (dark gray-red)
Height: approx. 900 mm, Width: approx. 900 mm, Depth: approx. 400 mm

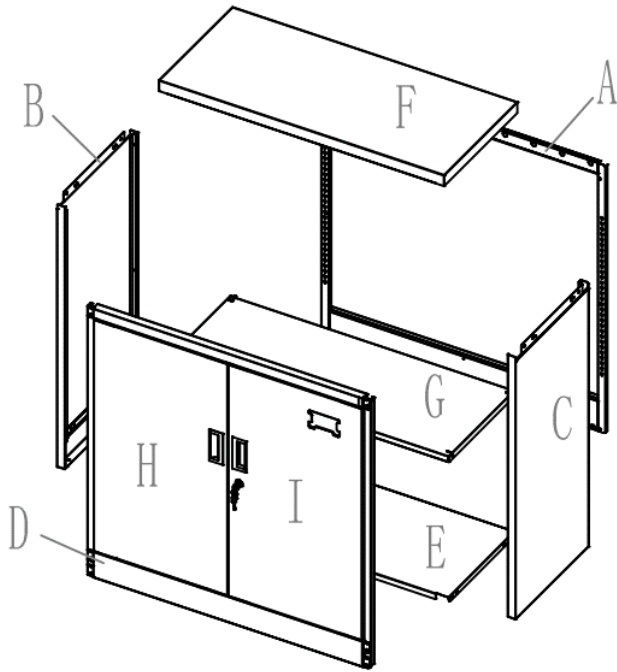
Part-List:



| | | | |
|---|--------------------|---|----|
| A | Rear Panel | | 1x |
| B | Left Side Panel | | 1x |
| C | Right Side Panel | | 1x |
| D | Front Frame | | 1x |
| E | Bottom | | 1x |
| F | Upper Cover | | 1x |
| G | Intermediate Floor | | 1x |
| H | Left Door | | 1x |
| I | Right Door | | 1x |
| J | Screw |  | 7x |
| K | Clip |  | 4x |
| L | Clip |  | 4x |


Instruction:

STEP 1

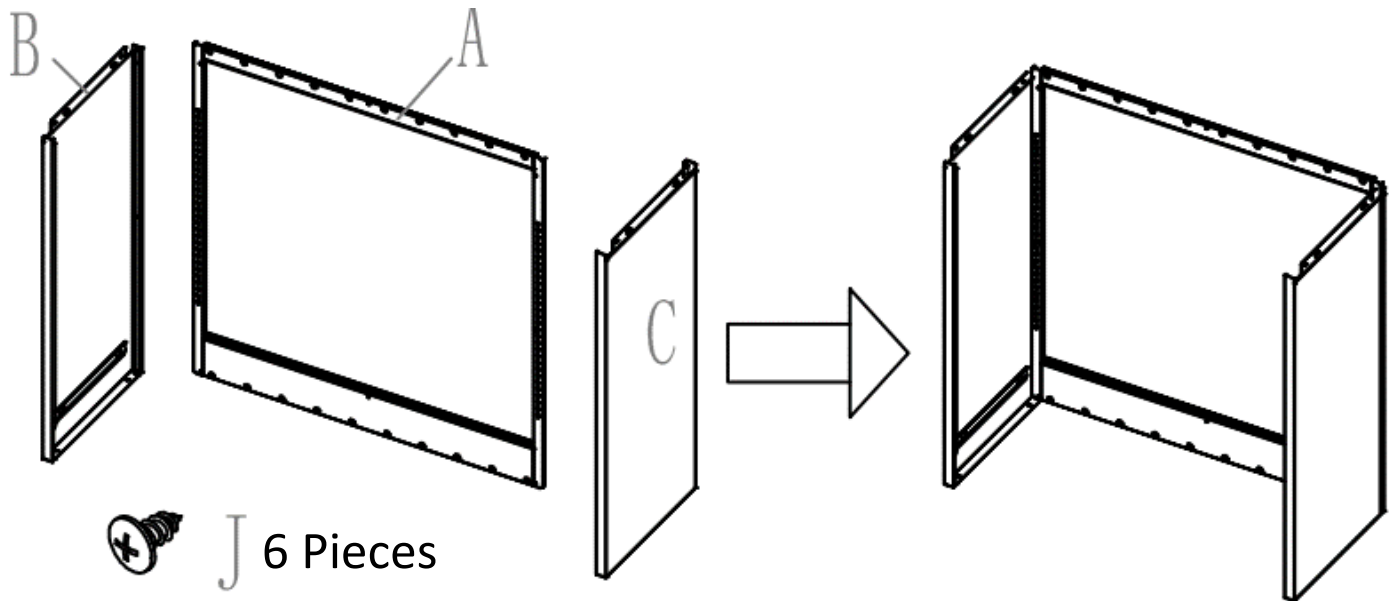


1. Connect the Parts A, B and C.
To do so use a total of 6 screws J

STEP 2

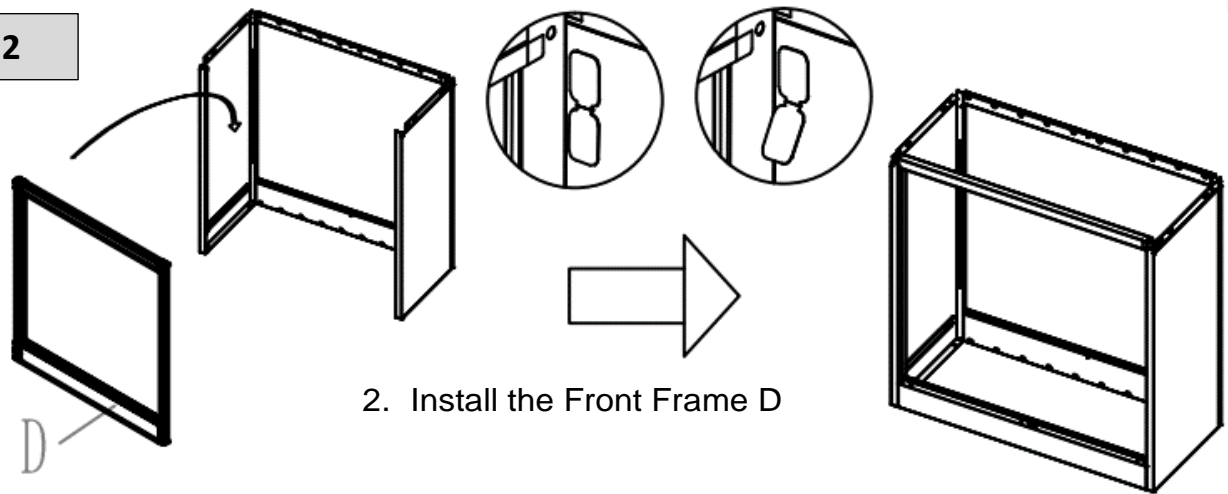

2. Install the Front Frame D


STEP 3

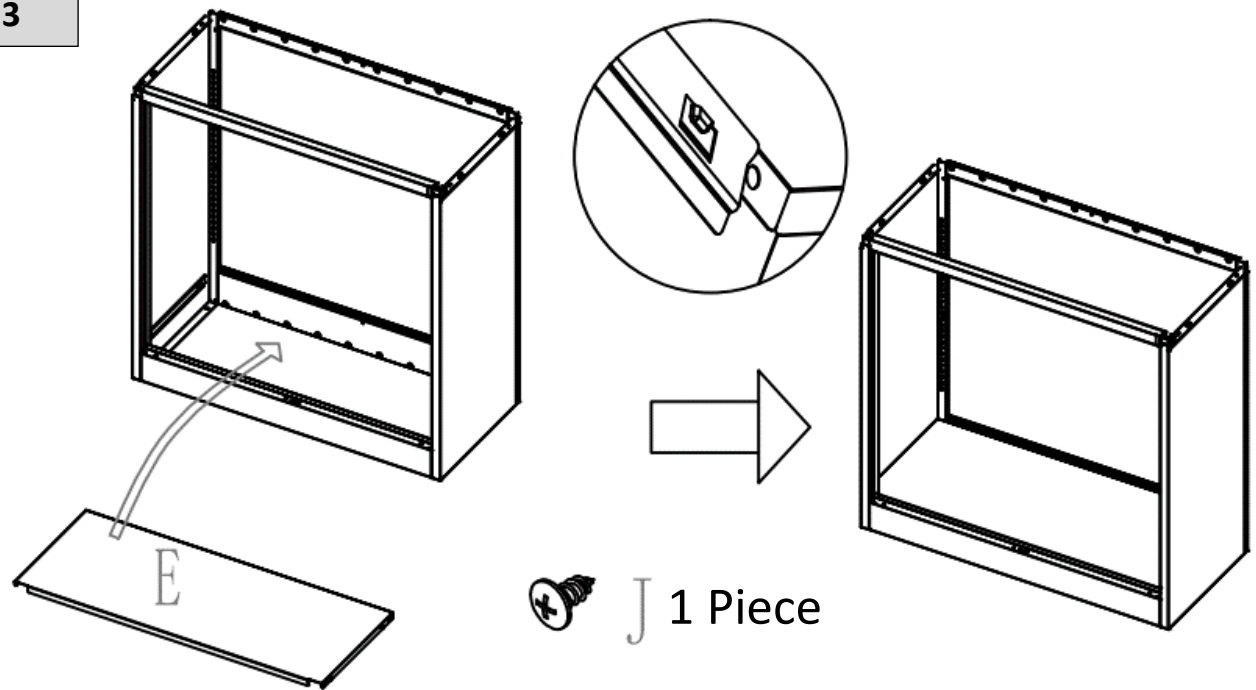

J 1 Piece


3. Install the bottom E

STEP 4

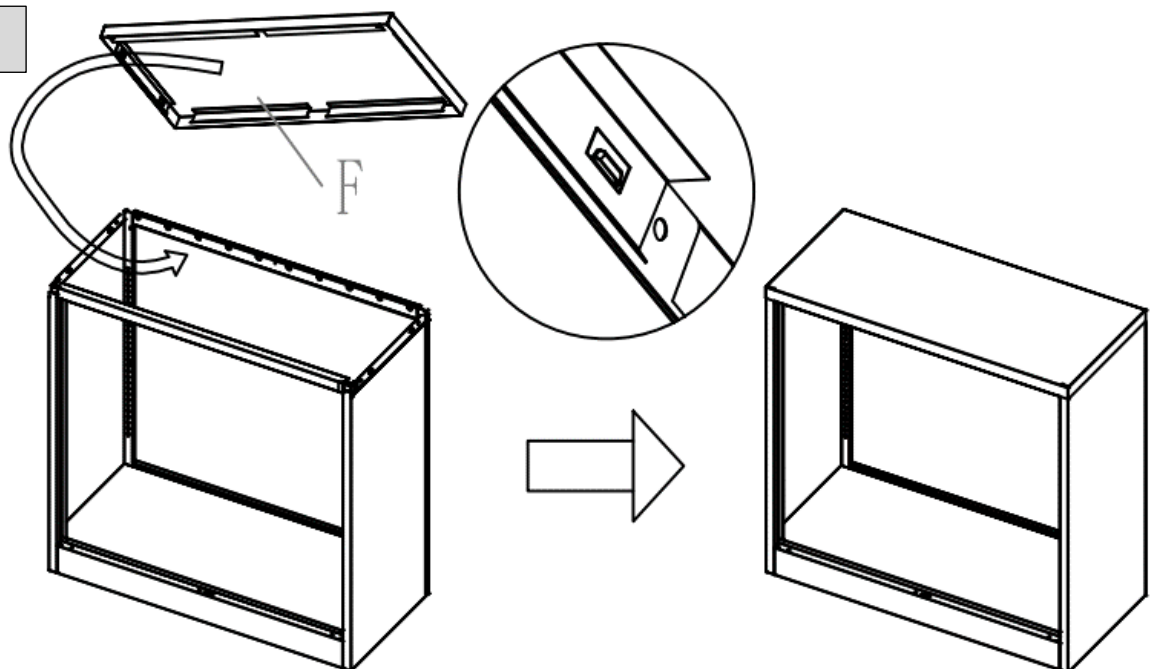


4. Install the Upper Cover F as shown in the drawing

STEP 5

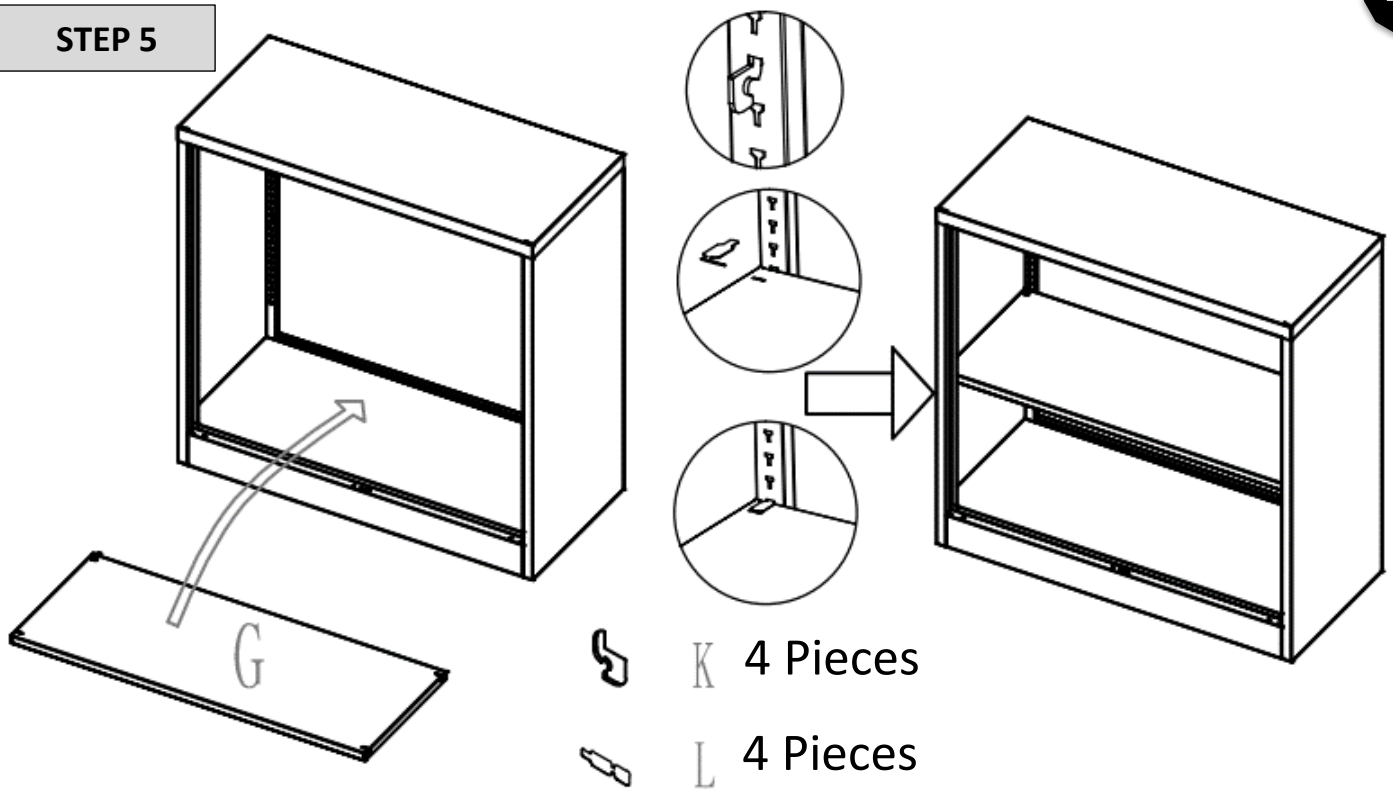


5. Install the Intermediate Floor G

STEP 6

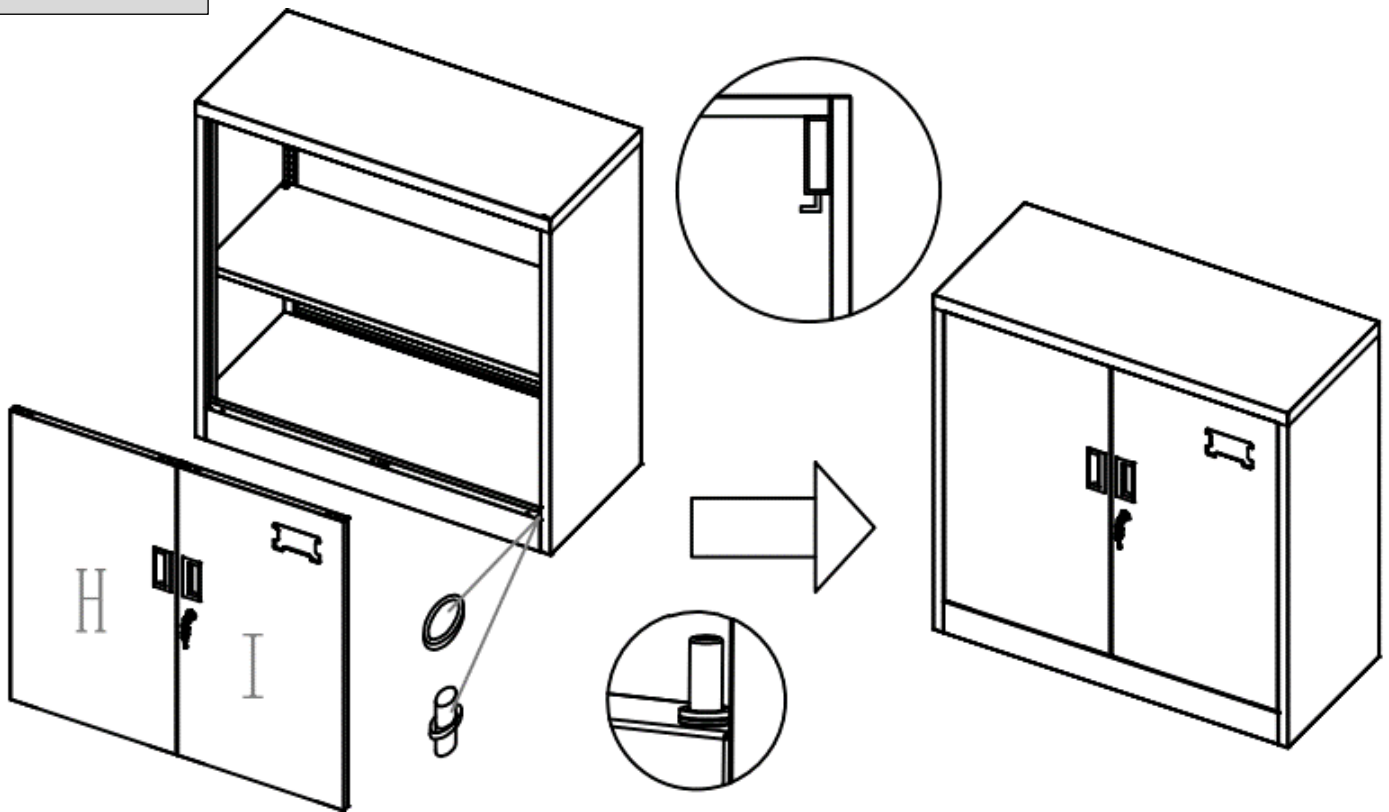

6. Install the Doors H and I

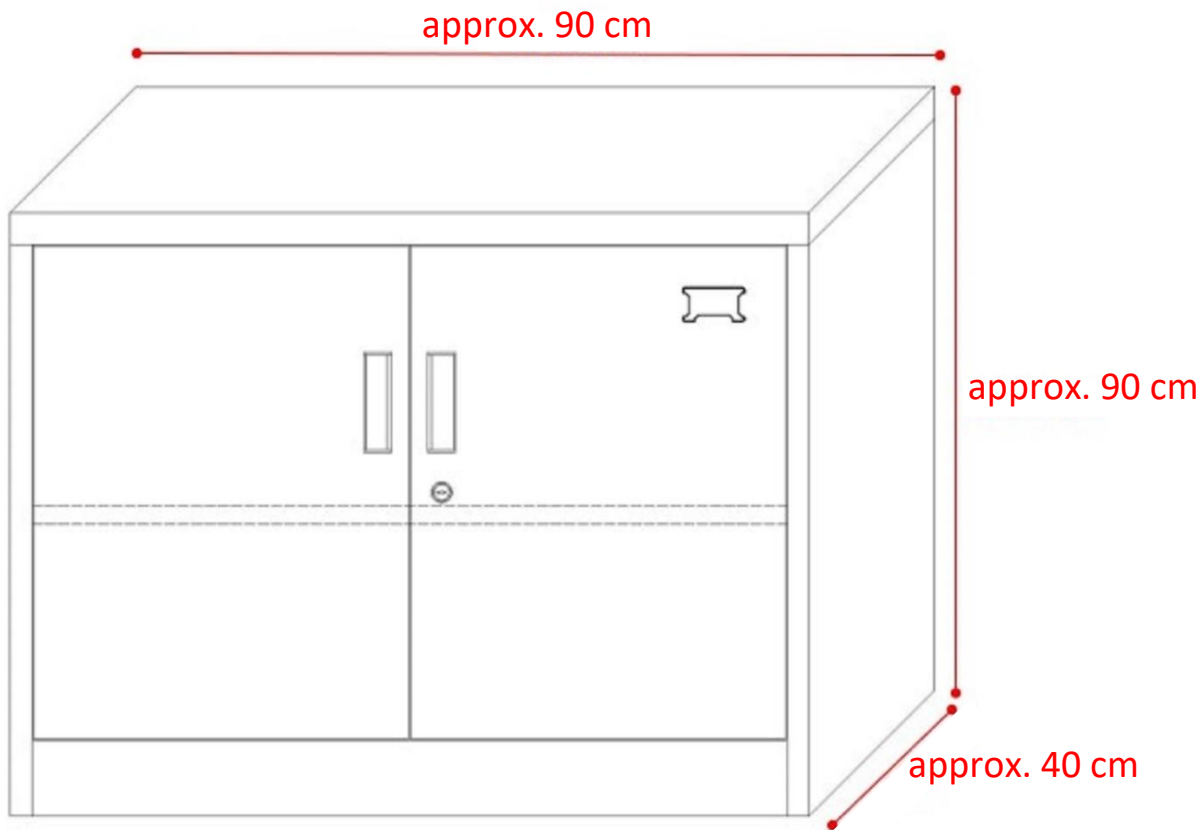

Installations-videos and further instructions

for our products can be found on

www.jet-line-e-trade.de

Username: jet-line • Password: user2011

Further products for your office

can be found on

<https://office-shopping.eu>



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Deutschland
Tel: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
www.office-shopping.eu

