


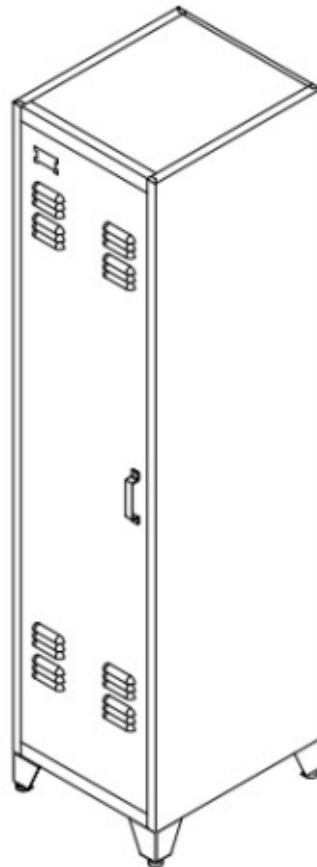

STEEL CABINET PETROW

Article-No.: 12238, 12239, 12240

- INSTALLATION MANUAL -



Installation-videos and further instructions
for our products can be found on







www.jet-line.de



Username: jet-line • Password: user2011

Further products for your office
can be found on

www.jet-line.de


Part-List:

1	Left Side Panel	1x
2	Right Side Panel	1x
3	Rear Panel	1x
4	Upper Cover	1x
5	Bottom	1x
6	Feet	4x
7	Intermediate Floor	3x
8	Front Panel	1x
A	Screw M5x10 	29x
B	Screw M5x10 	2x
C	Nut M5 	2x
D	Clip 	12x
E	Handle 	1x
F	Connector 	2x

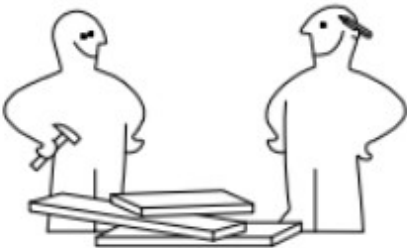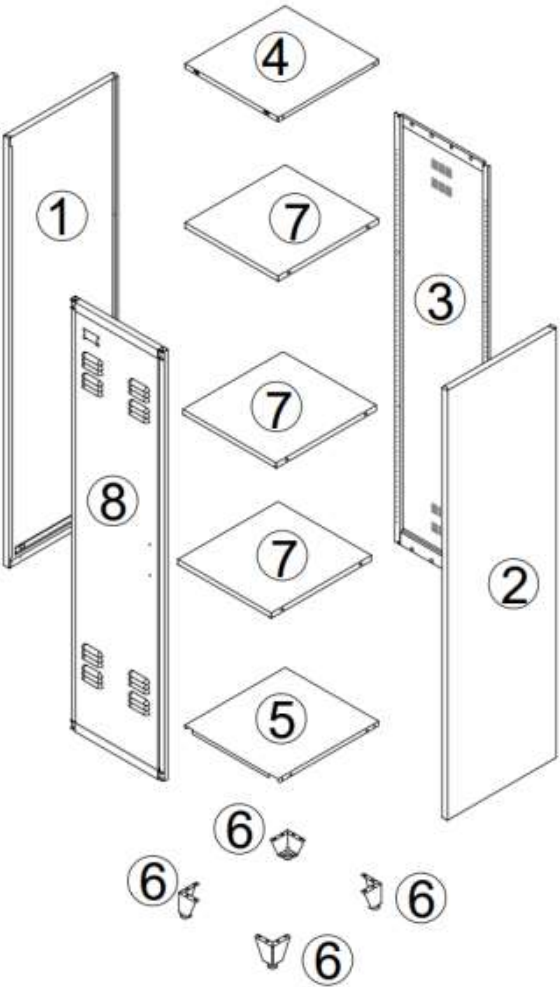


Instruction:


STEP 1

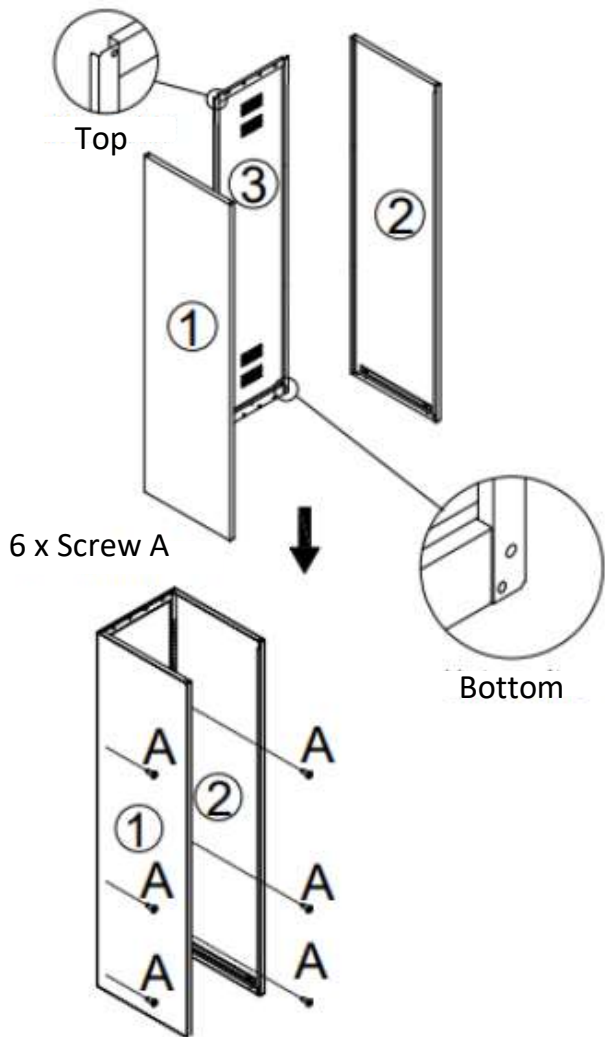


STEP 2

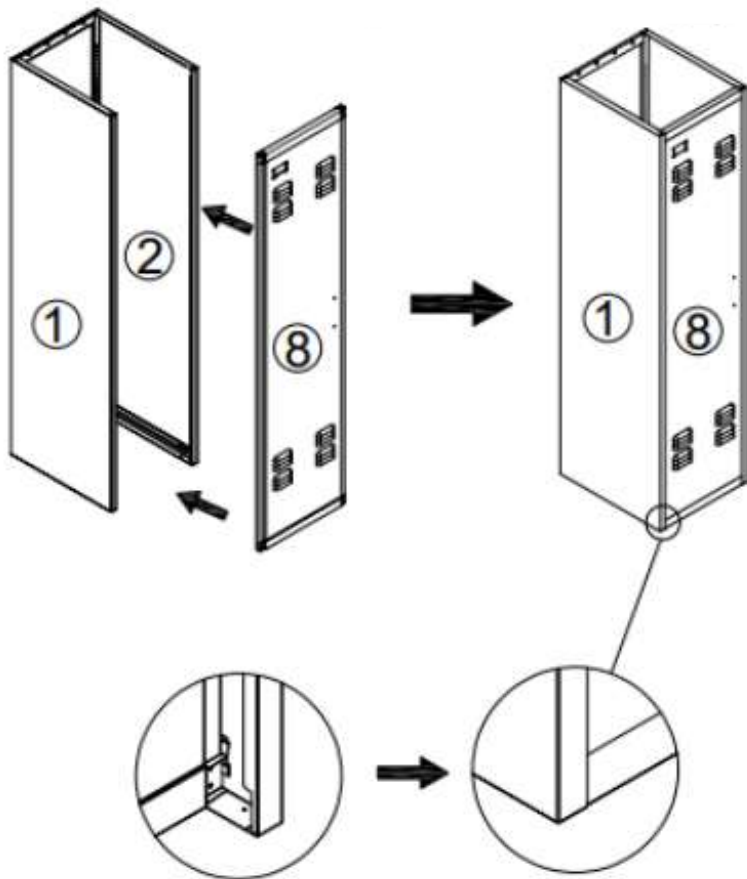


STEP 3

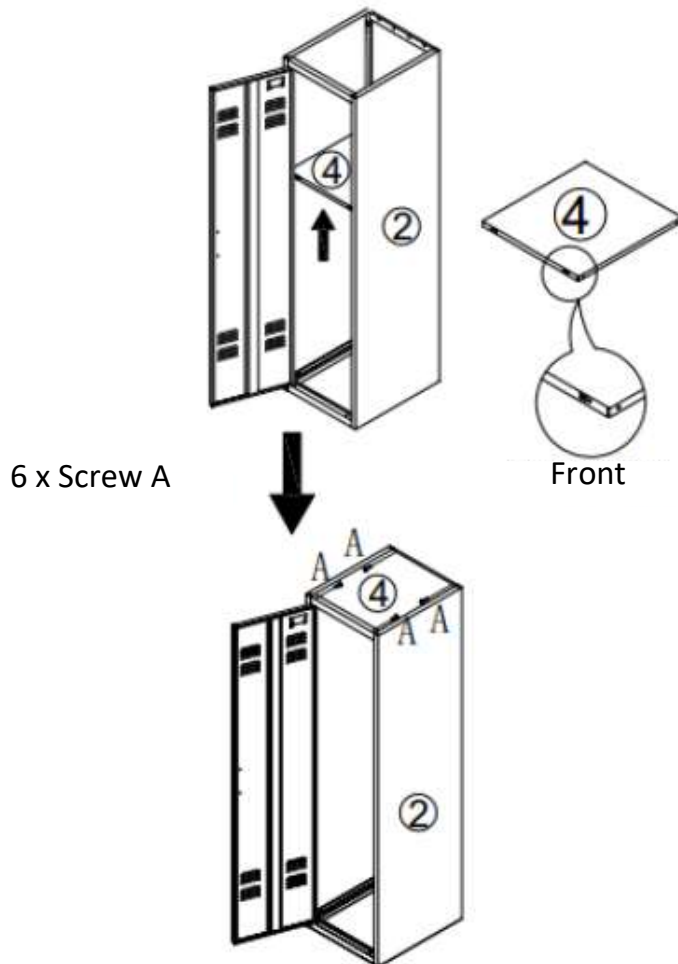

STEP 4

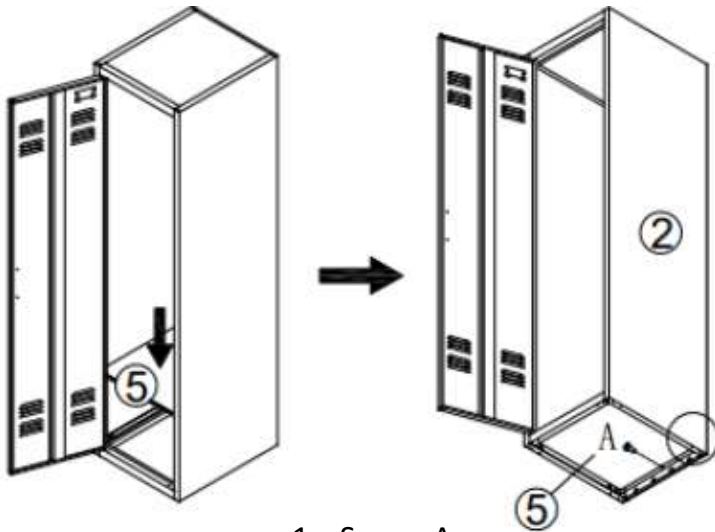


1 x Screw A

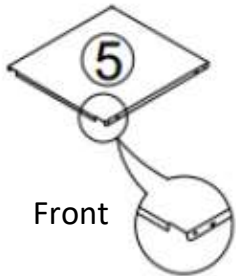

Front


STEP 6

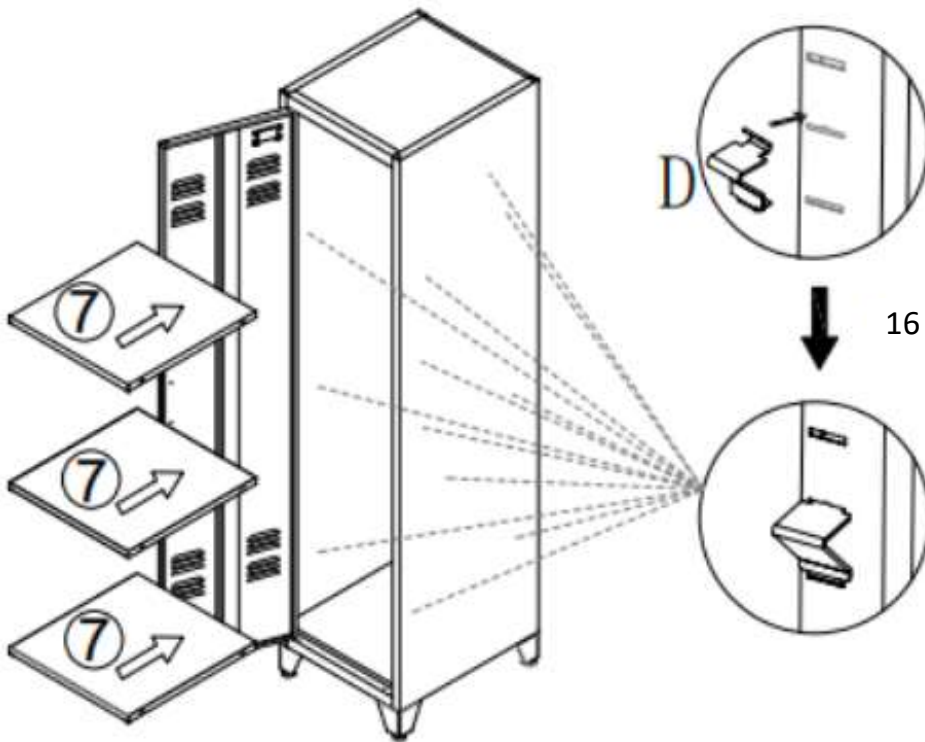

16 x Clip D



Maximum weight per floor: 40 kg

STEP 5

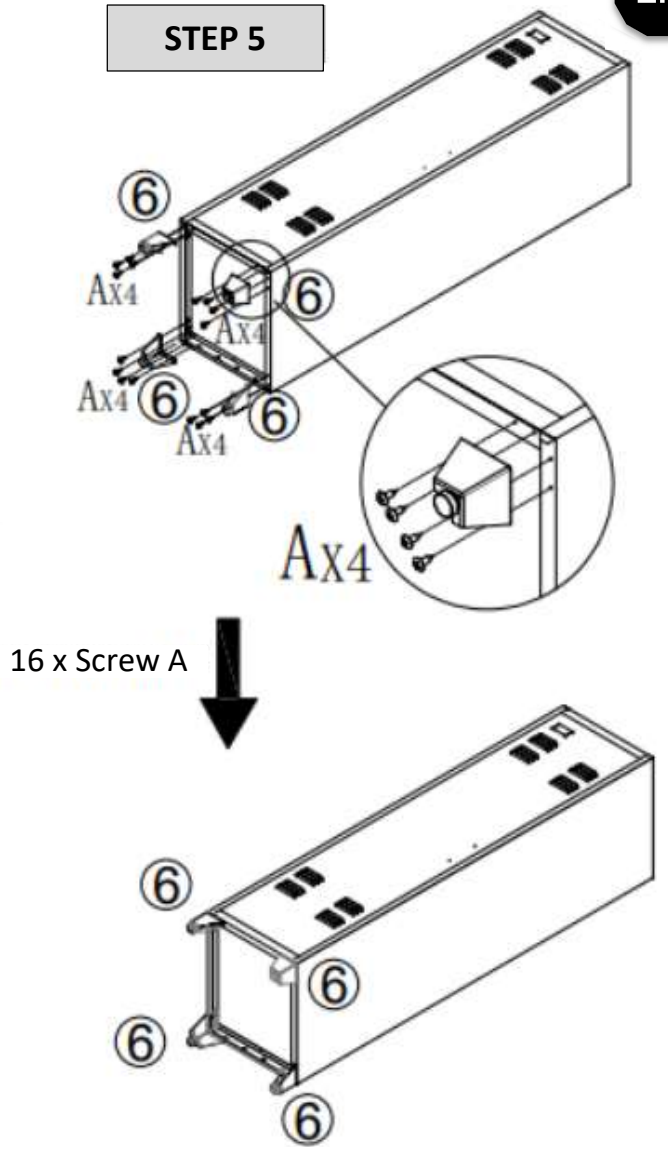


16 x Screw A

STEP 7

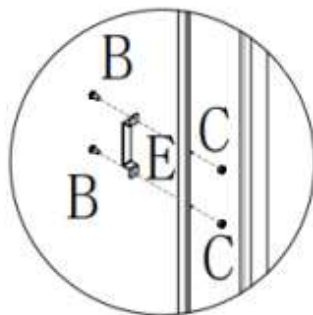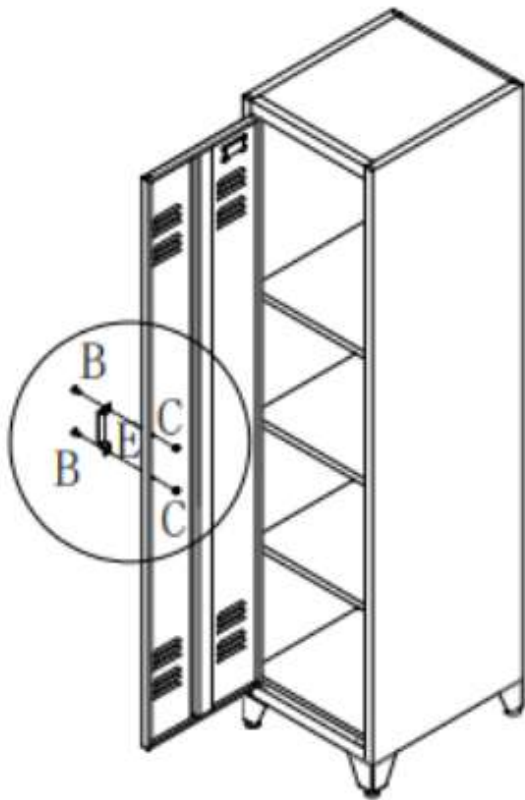



2 x Screw B
2 x Nut C
1 x Handle

STEP 8

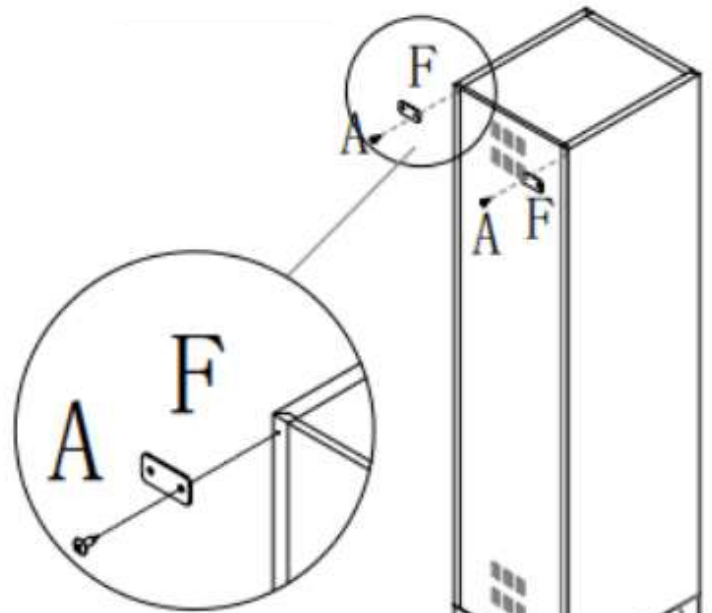

2 x Screw A
2 x Connector F

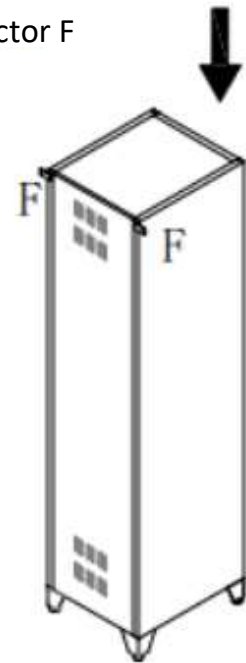

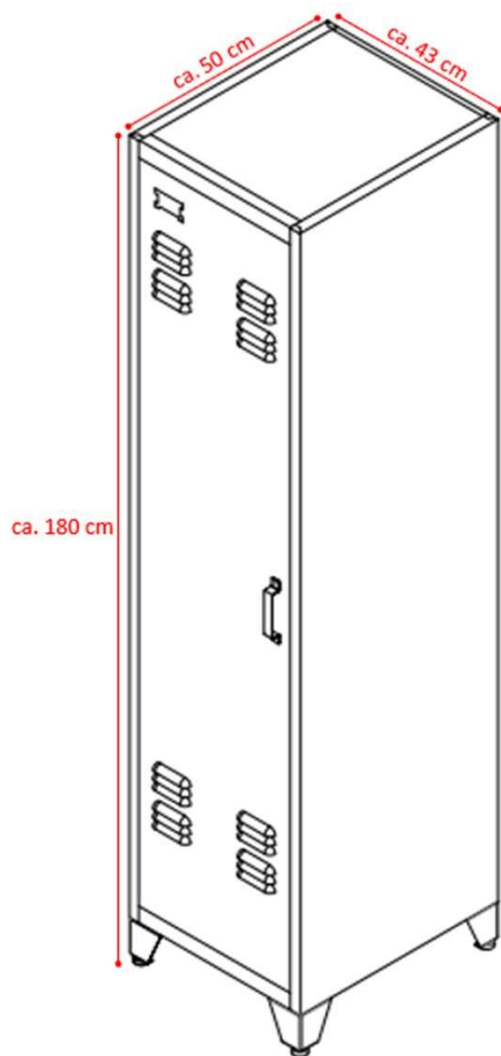

Installation-videos and further instructions

for our products can be found on

www.jet-line.de

Username: jet-line • Password: user2011

Further products for your office

can be found on

www.jet-line.de



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Germany
Phone: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
www.office-shopping.eu

